

EQUATOR®


ADVANCED Appliances ≡

Air Fryer



Convection Oven + Pizza Oven
+ Grill + Dehydrator

Model - AF 500

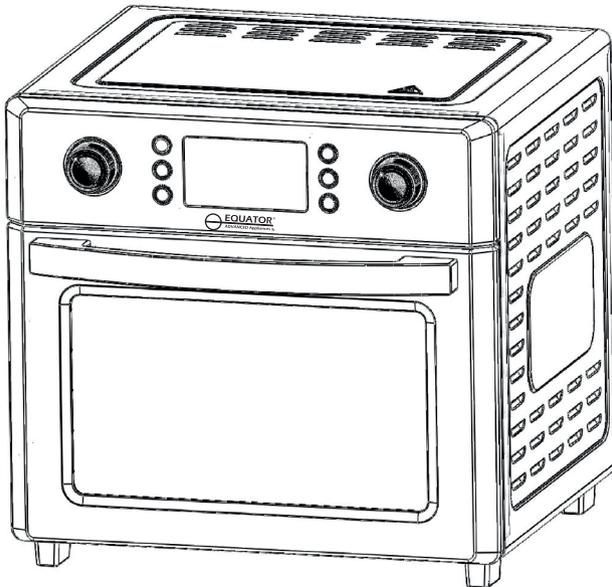

OWNER'S MANUAL

Read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the website for the latest version of the manual.



DO NOT RETURN TO STORE!

HAVE QUESTIONS OR NEED SERVICE?



1-800-776-3538



Service@ApplianceDesk.com

Warranty

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 Days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been Installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Services would be provided from Monday to Friday between normal business hours.

Exclusions

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work:

Installation - e.g. Insufficient spacing around appliance

Maintenance - e.g. Cleaning the appliance using solvents

Mishandling - e.g. Breakage of knobs, accessories or handle

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Equator Appliances

10222 Georgibelle Drive, Suite 200

Houston, Texas 77043-5249

For Service:

Call: 1-800-776-3538

Email: service@ApplianceDesk.com

Web: www.ApplianceDesk.com

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan QR Code

- Open Smart Phone
- Open Camera
- Click the Link



2. Register online at ApplianceDesk.com/Warranty

3. QR Code is also used to obtain Product Information, Manuals and Updates

GENERAL

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Safety

- To prevent electric shock, unplug from the outlet when not in use and before cleaning. Allow cooling before cleaning or handling.
- Do not touch hot surfaces.
- To protect against electric shock, do not place any part of the appliance in water or other liquids.
- Do not use if cord, plug or appliance is damaged.
- Do not let the cord hang over the edge of the table or countertop, where it could be pulled.
- Do not place appliance on or near a hot gas or electric burner.
- Use only oven safe cookware.
- To avoid burns, use extreme caution when removing items from appliance or disposing of hot grease.
- Do not place any of the following materials in the appliance: paper, cardboard, plastic, and similar products.
- Do not cover the drip/crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- To prevent fire, do not operate around flammable materials and keep away from items such as curtains. Do not store any items on top of the appliance when in operation.
- Do not use the outdoors.
- Do not operate under wall cabinets.
- NEVER leave the appliance unattended during use.
- Do not place cooking utensils or baking dishes on the glass door.
- Do not move the appliance if it contains any cooked items.
- Always unplug the unit from the electrical outlet prior to storing.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Safe Disposal

Before discarding the appliance, remove the door.

Please dispose of this appliance in accordance with local regulations.


California Proposition 65

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Specification Table

Model	AF 500
Capacity	0.93 cu.ft (26L)
Electrical	120V - 60Hz
Power Rating	1700W
Temperature	68° F - 428° F
Net Weight	19 lbs
Product Dimensions (HxWxD)	15.74" x 17" x 15.15"



Parts and Accessories

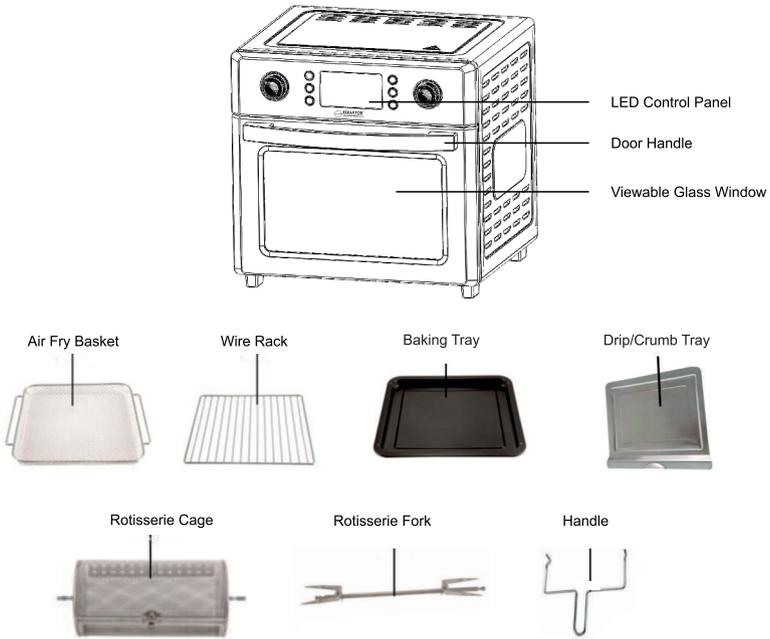

Suggested Uses



- Air Fry Basket: Use for french fries, chicken wings, onion rings.
- Wire Rack: Use for barbecue, bread slices, pizza.
- Baking Tray: Use for baking cookies, roasting vegetables.
- Drip/Crumb Tray: Removable tray collects food debris.
- Rotisserie Cage: Use for small bite-size food (shrimp, meatballs).
- Rotisserie Fork: Use for chicken, and other meat that requires turning.
- Handle: Use to lift and remove the Fork.

There are 3 grooves for the Air Fry Basket, Wire Rack and Baking Tray. The Rotisserie Fork and Rotisserie Cage are positioned in the middle slots on the sides.

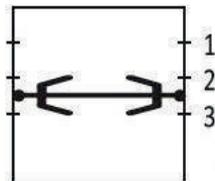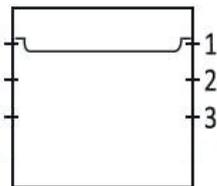

Installation

Place the appliance on a smooth flat surface, and ensure the top, back and sides of the appliance are at least 4 inches (10 cm) away from the walls and cabinets.

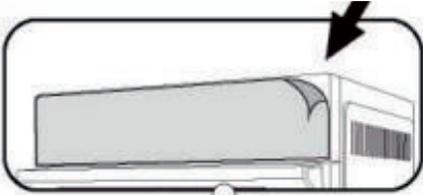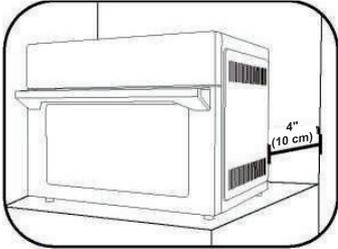

Peel off the film from the front of the appliance.



Before use, please clean the outside and inside surfaces with a damp cloth.

Check the power supply, socket, etc. Confirm it meets the requirements and then connect the power supply.

The first time in use, the appliance may emit odor or smoke. This is a normal phenomenon. It is suggested that the appliance is empty when used for the first time. Set the maximum temperature of 400°F for about 20 minutes to sterilize and remove the odor.

ControlPanel



When the appliance is initially plugged in, the display will show "--" on the control panel display. When the Air Fry or Oven programs are selected, the time will show on the left side of the display and the temperature will show on the right side.

Left Knob:

Turn the left knob to adjust the temperature or time.

Right Knob:

Turn the right knob to select the food to be cooked.

Press the knob to start cooking. To pause cooking, press again and press one more time to resume cooking.

Temperature Button:

Press the TEMP button to set the temperature. The display will flash. Turn the Left Knob to select the desired temperature.

Time Button:

Press the TIME button to set the time. The display will flash. Turn the Left Knob to select the desired time.

Rotate Button:

The ROTATE button is lit and activated automatically only when the Air Fry mode is selected along with the "Chicken" icon. The Rotate function turns the Rotisserie Fork when cooking the whole chicken.

Air Fry Button:

Press the AIR FRY button to choose from 7 pre-set items.

Oven Button:

Press the OVEN button to choose from 7 pre-set items.

Light Button:

Press the LIGHT button to turn on or off the light in the appliance. The light is on when the door is open. After 3 minutes the light automatically goes off. When the door is closed, the light goes off automatically after 30 seconds.

Operation**Air Fryer:**

Press the AIR FRY button to choose from 7 pre-set items. The panel with a row of 7 Air Fry icons lights up.

Rotate the Right Knob to select the item. The selected icon flashes. The time and temperature are already pre-set. Press the Right Knob to start cooking.

To manually set the time and temperature, press AIR FRY for 3 secs. Select the time and temperature using the Left Knob. If not manually set, the default time is 10 minutes, and the default temperature is 392°F.

Oven:

Press the OVEN button to choose from 7 pre-set items. The panel with a row of 7 Oven icons lights up.

Rotate the Right Knob to select the item. The selected icon flashes. The time and temperature are already pre-set. Press the Right Knob to start cooking.

To manually set the time and temperature, press OVEN for 3 seconds. Select the time and temperature using the Left Knob. If not manually set, the default time is 15 minutes, and the default temperature is 347°F.

The fan continues to operate for 20 seconds after the oven and air fry cooking is completed.

Cooking Guide

The time and temperature guide are only for reference and can be adjusted according to different ingredients, recipes and taste requirements.

Food	Default Temperature Fahrenheit (°F)	Adjustable Temperature	Default Time (minutes)	Adjustable Time (minutes)
Fries	400°F	(120-400°F)	25 min	1-90
Wings	400°F	(120-400°F)	12 min	1-90
Chicken	360°F	(120-400°F)	30 min	1-90
Fish	360 °F	(120-400°F)	12 min	1-90
Meat	400°F	(120-400°F)	10 min	1-90
Shrimp	360°F	(120-400°F)	7 min	1-90
Dehydrate	140°F	(120-160°F)	9 hours	1-10 hours (30-minute increments)
Cake	340°F	(120-400°F)	30 min	1-90
Cookies	340°F	(120-400°F)	30 min	1-90
Bread	380°F	(120-400°F)	18 min	1-90
Pizza	400°F	(120-400°F)	8 min	1-90
Grill	340°F	(120-400°F)	30 min	1-90
Broil	450°F	(120-400°F)	5 min	1-90
Thaw	120°F	(50-120°F)	15 min	1-90

There are upper and lower heating elements. Depending on the cook program selected, one or both heating elements will turn on. After the temperature in the Air Fryer is reached, the heating elements *will remain on intermittently* to maintain the correct temperature and prevent overheating.

Cleaning and Maintenance

Before cleaning, ensure the oven is turned off by removing the power plug from the power outlet. Allow the oven and all accessories to cool completely before disassembling and cleaning.

The outer surface of the appliance, the door, interior, drip tray and other accessories should all be cleaned after each use.

Do not clean with metal scouring pads or abrasive materials.

Wipe the outer surface with a soft, damp sponge. A non-abrasive liquid cleaner or mild spray solution may be used to avoid the build-up of stains. Apply the cleaner to the sponge, not the appliance surface, before cleaning.

To clean the glass door, use a glass cleaner or mild detergent and a soft, damp sponge or soft plastic scouring pad. Do not use an abrasive cleaner or metal scouring pad.

Wipe the control panel with a soft damp cloth.

The walls on the inside of the oven feature a non-stick coating for easy cleaning. To clean any splattering that may occur while cooking, wipe the walls with a soft, damp sponge. **For stubborn stains, please use the mesh cleaning cloth included as an accessory.** Avoid touching the heating elements.

To remove baked-on grease from the accessories or drip tray, soak the item in warm soapy water then wash with a soft sponge or soft plastic scouring pad. Rinse and dry thoroughly.


To extend the life of your accessories, we do not recommend that these be placed in the dishwasher.

Let all surfaces dry thoroughly before inserting the power plug into a power outlet and turning the appliance on.


Replacement of light bulb

Note: Before changing the light, make sure the appliance has been unplugged and fully cooled before it can be replaced. Use a 25-watt bulb.


Step 1: Rotate the light cover counter clockwise and remove

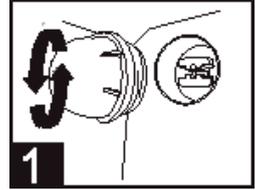

Step 2: Twist and pull out the old light bulb

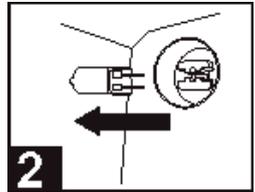

Step 3: Insert the new 25-watt light bulb

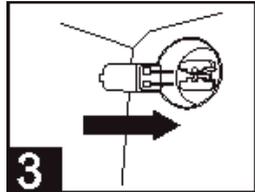

Step 4: Replace the light cover by turning it clockwise until tightened



Troubleshooting

In most cases, when your Air Fryer fails to work, the problems arising can be easily solved without having to call for a technician. Before calling for assistance, always check these points.

Problem	Possible reason	Solution
Appliance cannot be started	Not connected to power	Connect to power supply
	Right Knob not pressed	Press the Right Knob
	Door not closed	Ensure the door is closed
Steam escapes from the top of the door	Cooking food with a lot of liquid or moisture content	This is a normal phenomenon in which the appliance releases steam from high-moisture foods, such as frozen bread
White smoke emitted from the appliance	First time use	This is a normal phenomenon. During the first use some white smoke is emitted. It is recommended to set the maximum temperature without putting food into the oven for 18-20 minutes to eliminate smoke
	Cooking high-fat foods	This is a normal phenomenon. Fried greasy food can leak or spill on to the drip tray, which will produce white smoke. Remove excess oil and grease
	The Baking tray or Drip tray or other accessory still contains grease residue or previously used oil	Ensure the accessories are completely cleaned after each use
Black smoke emitted from the appliance	The food has been burnt	Close the oven immediately and carefully remove the food
Food remains uncooked	Too much food	Reduce the amount of food
	Set the temperature too low or too short time	Set a higher temperature and longer time
	The wrong function selected	Make sure the right function has been selected
Food is not cooked evenly	Food is not evenly spread when cooking	Make sure the food is cut evenly and spread evenly on the accessories.
	The baking tray, the grill, are not in the right position.	Put the accessories in the right place before cooking
Food is not crisp enough	Too much water in food	Spray evenly or brush a small amount of oil on food to increase crispness
Screen display error code E3	The temperature in the appliance is too high	Wait for it to cool down before using it again
Screen display error code E1, E2	Circuit error	Unplug the power, reconnect and operate again. If unable to resolve, contact customer service



Equator Advanced Appliances USA,
offers Efficient, High-Quality, and Innovative
Easy to Use household appliances.

Our Mission is to simplify domestic chores
and save Time, Space, and Energy.

Our Vision is to enhance our Customer's
Quality of Life!

Equator Appliances USA

www.EquatorAppliances.com