




BEVERAGE REFRIGERATOR

Model - BR 317

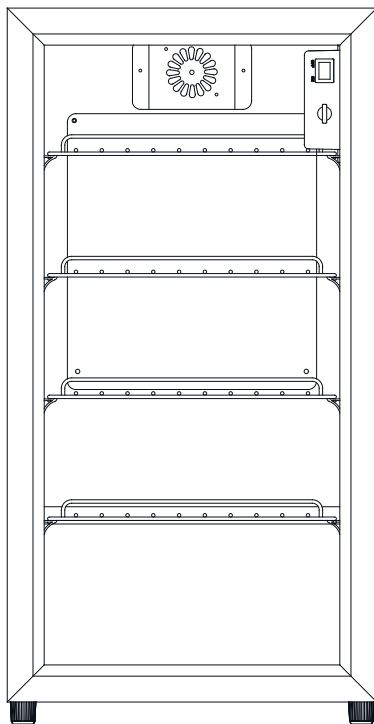

OWNER'S MANUAL

Please read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the manual online for the latest version of the manual.

Warranty

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 Days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been Installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Services would be provided from Monday to Friday between normal business hours.

Exclusions

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work:

Installation - e.g. Insufficient spacing around appliance
Maintenance - e.g. Cleaning the appliance using solvents
Mishandling - e.g. Breakage of glass door

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Equator Appliances

10222 Georgibelle Drive, Suite 200
Houston, Texas 77043-5249

For Service:

Call: 1-800-776-3538

Email: service@ApplianceDesk.com

Web: www.ApplianceDesk.com

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan QR Code

QR Code



1. Open Smart Phone
2. Open Camera
3. Scan QR Code
4. Click the Link

2. Register online at ApplianceDesk.com/Warranty

GENERAL

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Safety

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Refrigerant and foaming material is flammable. Take precautions during handling, installation, and maintenance.

Ensure that the refrigerant circuit is not damaged.

Keep ventilation openings clear of obstructions.

When positioning the appliance, ensure the electrical cord is not trapped or damaged.

Do not place multiple portable socket-outlets at the rear of the appliance.

Never unplug the appliance by pulling on the power cord. Grip the plug firmly and pull straight out to remove from wall socket.

Do not use a damaged power cord.

Do not use an extension cord.

Children should be supervised to ensure that they do not climb on or play with the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Safe Disposal

Before discarding the appliance, remove the door in order to prevent risk of child entrapment.

Please dispose of this appliance in accordance with local regulations.

Installation

Do not tilt the Refrigerator at an angle of more than 45° when moving it.

Do not move the appliance while it is loaded with bottles or cans.

Place the appliance away from sources of heat and high humidity, and also away from areas of moisture and exposure to cold temperatures.

After moving the Refrigerator in place, let it stand upright for 10 minutes before turning it on.

Plug the appliance into a dedicated, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord.

Check the plug and cable before you connect the power and ensure the correct voltage is 115V / 60Hz.

Ensure that the plug is accessible.


Place the Refrigerator on a flat level surface, leaving 2 inches (5 cm) on either side and at least 3 inches (8 cm) between back of appliance and the wall.

The feet of the appliance can be adjusted to make it level.

Before use, clean the outside and inside surfaces with a damp soft cloth.

Installation of Shelves

The appliance has 4 long mounting brackets pre-installed along the left and right sides. 4 shelves and 16 bracket clips are included with the unit and these can be installed at any desired height. To install a shelf, firmly insert 4 bracket clips into the square slots in the mounting bracket, ensuring that all 4 brackets are at the same level. Place the shelf on top of the brackets ensuring that it is stable and level.

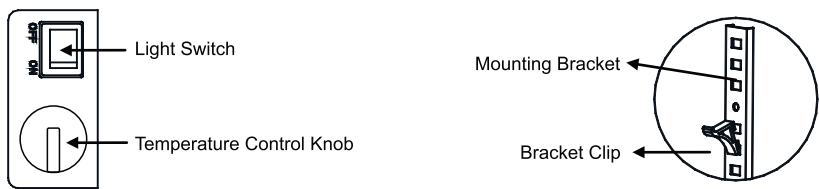


Operation

This appliance is intended for storage of beverages and for household use only.

Do not overload the cabinet.
Ensure that the door can be closed firmly.

The On/Off Light Switch and Temperature Control Knob are located inside the appliance on the upper right side. Turn the Control Knob to select the level of cold. The temperature range is 34°F to 43°F.

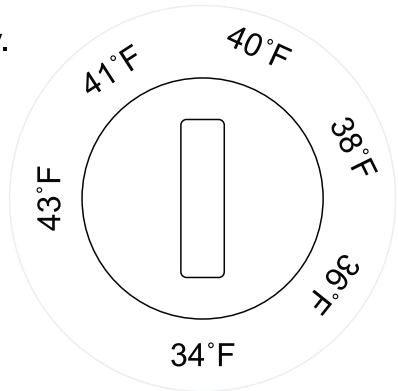

Maintenance

Ensure the power cord is unplugged before moving or cleaning the back of the appliance.

Clean the outside and inside of the appliance regularly, using water and mild detergent.

Troubleshooting

Problem	Possible Cause and Solution
Not Working	Check the power source. Check if it is plugged in correctly to the power source.
Not Cooling	Temperature is not set correctly. Adjust the temperature. Move unit if it is near heat source or direct sunlight Check for proper ventilation and that air inlet or outlet is not blocked. Door opened frequently or not shut properly. Door seal is damaged. Too many bottles/cans stored on the same shelf.
Too much noise	Appliance not placed on flat surface or not level. Adjust the feet to level it. Some parts are loose causing rattling. The appliance is against a wall.
Door does not close properly	Check the seal. Shelves are not positioned properly. Adjust the shelves. Check that bottles are stored correctly and fit in the cabinet.

The following are normal:

- Moisture on the glass door – wipe with dry cloth
- Sound of fluid in the compressor when it is starting or stopping
- Flowing sound of refrigerant in the refrigeration system
- Condensation forming inside the cabinet – wipe with dry cloth

Specification Table

Model	BR 317
Capacity	3.17 cu.ft
Electrical	110V / 60Hz
Refrigerant	R600a
Temperature	34° F - 50° F
Weight Net / Gross	61.5 / 68 lbs
Product Dimensions (HxWxD)	32.87" x 17.71" x 20.47"

California Proposition 65

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



Equator Advanced Appliances USA,
founded in 1991, offers Efficient, High-Quality,
and Innovative household appliances.

Our Mission is to simplify domestic chores
and save Time, Space, and Energy.

Our Vision is to enhance our Customer's
Quality of Life!

Equator Appliances USA

www.EquatorAppliances.com