

COS-BIM22SSB / QUICK START GUIDE

THANK YOU FOR PURCHASING YOUR NEW COSMO MICROWAVE

- PLEASE DO NOT RETURN TO THE STORE -

If you have questions, please call the experts.

HELP LINE: 1-888-784-3108 or Visit: www.cosmoappliances.com

Control panel



SMART SENSOR COOKING

Sensor Cook

You can cook foods by pressing the sensor cook without having to calculate time & temperature. Just press to find the item then START.

Featuring Quick Heat items like **POPCORN, POTATO & VEGGIES**

Sensor cooking detects the humidity released by your cooking food and adjusts the cooking time based on the type and amount of food cooking.

EXPRESS COOKING

From standby mode you can instantly cook something at 100% power by selecting a cooking time from one to six minutes.

- 1 Press any number from **1** to **6**. Cooking begins immediately.
- 2 Press **START/+30SEC.** again to increase cooking time in 30 second increments. The maximum cooking time is 99 minutes and 99 seconds.
-OR-
 - 1 Press **START/+30SEC.** to cook the item at 100% power level for 30 seconds.
 - 2 Press **START/+30SEC.** again to increase cooking time in 30 second increments. The maximum cooking time is 99 minutes and 99 seconds.



CHILD SAFETY LOCK

Press the **STOP / Clear** button for 3 seconds to **LOCK** or **UNLOCK** the microwave menu functions.

DO NOT USE IN MICROWAVE

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split

This appliance must be grounded. Insert plug into an outlet that is properly installed and grounded.

MODEL: COS-BIM22SSB

External dimensions: (HxWxD) 24.4" x 19.6" x 13.6"

COMMON PROBLEM SOLVING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Oven will not start	The electrical cord is not plugged in.	Plug in the electrical cord.
	The door is open.	Close the door and try again.
	The wrong operation is set.	Check the instructions and try again.
Arcing or sparking in the oven	You are attempting to use incorrect materials in the oven.	Use only microwave-safe materials.
	You are attempting to use the oven when it's empty.	Do not operate the oven when it's empty.
	Spilled food remains in the oven.	Clean the oven with a wet towel.
Unevenly cooked foods	The food is not defrosted completely.	Defrost the food completely before attempting to cook it.
	The cooking time or power level is not adequate to cook the food.	Use the correct cooking time and power level.
	The food is not turned or stirred.	Turn or stir the food.