

HRTX Series ADA-Compliant Range Hoods

Remote Switch Installation



To comply with ADA standards, models with the ADA prefix or suffix require the installation of a remote switch—separate from the control panel—to operate the fan and light functions of the range hood.

Included:

- Wall Plate (1)
- Switches (2)

NOTE: Installation and service must be performed by a qualified installer/electrician.

WARNING: To avoid fire or electrical shock, turn off the power at the circuit breaker or fuse. Test to ensure that the power is off before wiring.

TRANSFERRING THE LEADS

1. Unscrew the range hood's top panel to access the switch leads.
2. Disconnect the leads from the switches.
3. Transfer the leads to where the wall knock out is.
4. Mount the single gang - recessed switch box.

NOTE: To install this switch in accordance with ADA guidelines, the height of the light switch must be no lower than 15" from the floor and no higher than 48" from the floor. Additional regulations apply if there are any obstructions in front of the switch. For more information, refer to Section 308 of the most recent ADA Standards for Accessible Design at ada.gov.

WIRING

Switch Configuration: The fan switch has three (3) terminals. The light switch has two (2) terminals.

1. Connecting the Fan Switch

Connect the fan switch lead to the corresponding terminals on the wall plate switch.
(i.e. **lead #1** in the fan terminal will connect to **terminal #1** on the wall plate switch)

2. Connecting the Light Switch

Connect the light switch lead to the corresponding terminals on the wall plate switch.

ATTACHING THE WALL PLATE

1. Once the switches are wired, align the wall plate with the switch box.
2. Secure the wall plate to the switch box using the provided screws.

For aesthetic purposes, the original switches on the range hood should remain in place, even if they are no longer functional.