




NOIR 48" DUAL-FUEL PROFESSIONAL RANGE
Includes Griddle and Gas Grill

MODELS:

JDRP748HM01 (Stainless)


BURNER BOX, GRIDDLE, AND GRILL PARTS

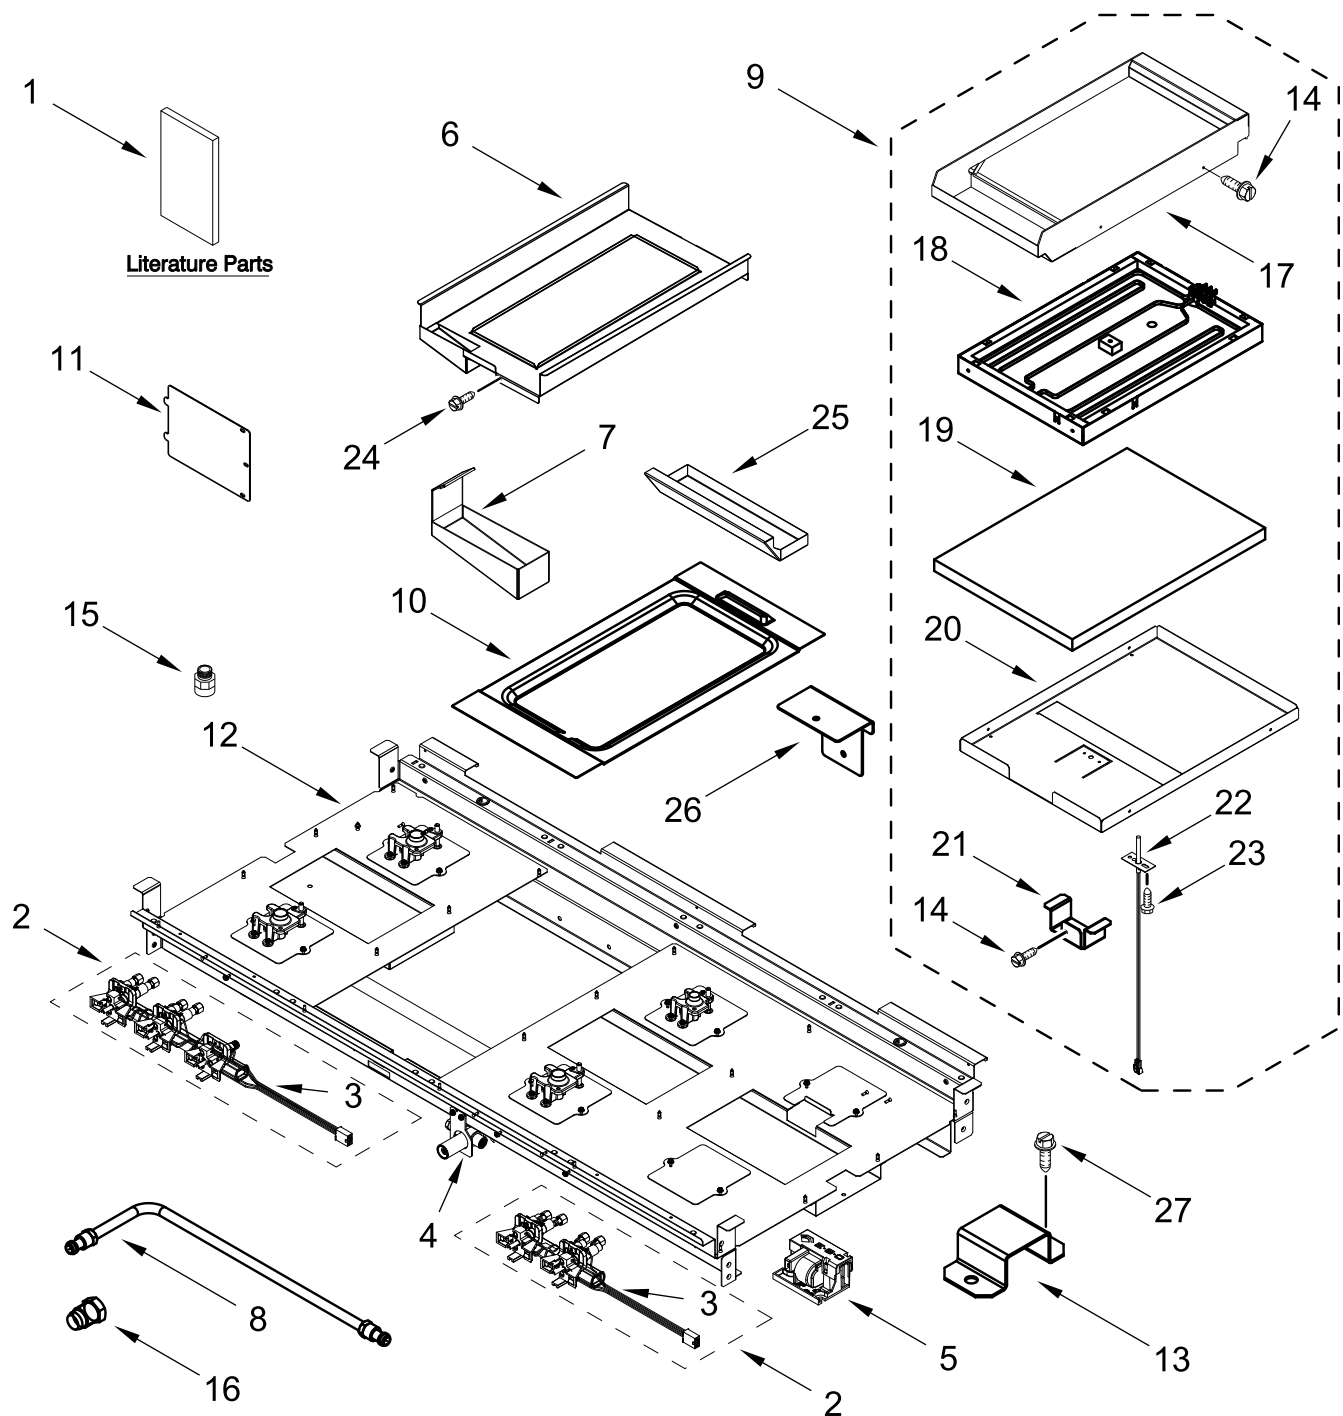

BURNER BOX, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11120957	Capture, Grill Grease	26	W11285353	Bracket, Grill Grease Capture
	W11114330	Guide, Use and Care	7	W11174414	Tray, Grill Drip			
	W11114333	Instructions, Installation	8	W10892796	Tube, Manifold Supply (Left)	27	7101P434-60	Screw
	W11184746	Guide, Internet Connectivity		W10892789	Tube, Manifold Supply (Right Center)			FOLLOWING PARTS NOT ILLUSTRATED
	W11266584	Diagram, Wiring (Cooktop)	9	W10891745	Assembly, Griddle Module	W11200315		Harness, Main (30")
	W11202370	Diagram, Wiring (Oven)	10	W11120965	Deflector, Grill Heat	W11200311		Harness, Main (18")
	W11202265	Sheet, Tech	11	W10115843	Cover, Ignition	W10903727		Harness, Griddle
2	W10893054	Assembly, Valve Manifold	12		Box, Burner (Not Serviced)	W11200333		Harness, Cooktop
		(Left Front, Left Rear, And Grill)	13	W11174418	Bracket, Grill Orifice Holder	W10780278		Harness, Door Lock
	W10893058	Assembly, Valve Manifold	14	W10162096	Screw	W11200318		Harness, Communication
		(Right Center Front And Right Center Rear)	15	4453116	Adapter, Male	W11242785		Harness, WIFI
			16	W10892063	Plug, Supply Outlet	W11212216		Cord, Power
			17	W10891567	Module, Griddle	9759877		Retainer, Strain Relief
3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	18	W10891698	Element, Griddle	4450800		Screw, Grounding
			19	W11121383	Insulation, Griddle	W10253333		Bracket, Anti-Tip
	W11106300	Switch, Harness (Right Center Front And Right Center Rear)	20	W11330430	Tray, Griddle Insulation	7101P485-60		Screw, Anti-Tip Kit
			21	W11121384	Bracket, Griddle-RTD	313438		Clip, Harness
4	W11121194	Bracket, Manifold	22	W10891584	Sensor, Griddle	W11422176		Kit, LP Conversion
			23	3196160	Screw			
5	W11121317	Module, Spark	24	3196537	Screw			
			25	W10276497	Tray, Griddle Drip			


COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

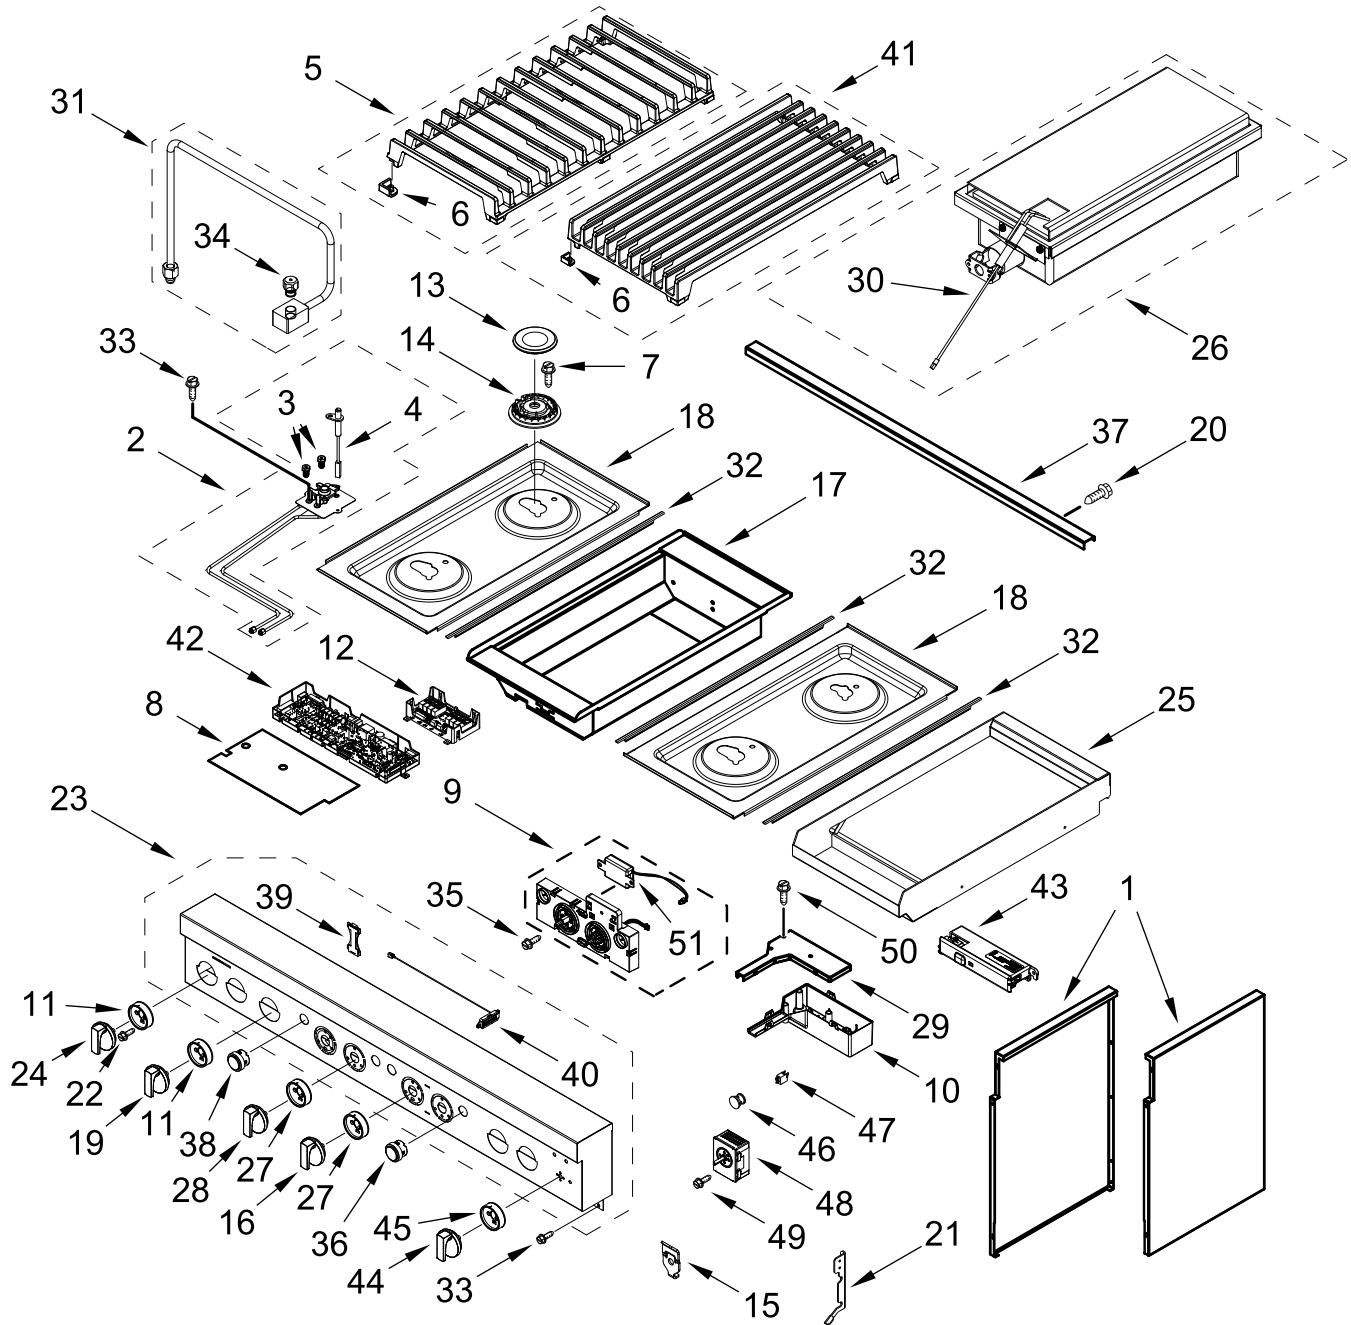

COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	9	W11436323	Interface, User	27		Bezel, Oven
	W11111428	Panel, Cabinet Side (Right)	10	W11205795	Cover, WIFI Outer			(For 4 Oven Knobs)
2	W10892807	Assembly, Orifice Holder	11	W11090284	Bezel, Cooktop (For 4 Cooktop Burners and Grill)	28	W11042375	Stainless Knob, Oven Temperature
		(Left Front)	12	W10890116	Manager, Appliance (Expansion)		W10891868	Stainless
	W10892495	Assembly, Orifice Holder	13		Cap, Burner	29	W11205794	Cover, WIFI Inner
		(Left Rear)		W11121391	Black (Set of 4)	30	W11174598	Electrode, Grill
	W10892505	Assembly, Orifice Holder	14	W10891987	Spreader, Flame (High)	31	W11419278	Grill Orifice Holder Assembly
		(Right Center Front)			(All But Right Center Rear)			(Left Center)
	W10892721	Assembly, Orifice Holder		W10892022	Spreader, Flame (Low)	32	W10291193	Trim, L-Strip
		(Right Center Rear)			(Right Center Rear)	33	7101P426-60	Screw
3	W10892422	Orifice, Main (17.4K)	15	W11036559	Spring Clip, Range	34	W11419282	Orifice, Grill (18K)
		(Left Front And Right Center Front)	16		Knob, Oven Mode			(Left Center)
	W10892418	Orifice, Main (15.4K)		W10891869	Stainless	35	3400814	Screw
		(Left Rear)	17	W11174429	Assembly, Grill Box	36	W11090650	Button Assembly, Oven Start
	W10892440	Orifice, Main (7.2K)	18		Panel, Cooktop	37	W11156418	Trim, Island
		(Right Center Rear)		W11038237	Black (Left)	38	W11090651	Button Assembly, Oven Light
	W10892435	Orifice, Simmer (2.6K)		W11038241	Black (Right Center)	39	W10896369	Assembly, Light Pipe
		(All But Right Center Rear)	19		Knob, Grill	40	W11130078	Antenna, WIFI
	W10892429	Orifice, Simmer (2.0K)		W10894926	Stainless	41	W11172682	Assembly, Grill Grate
		(Right Center Rear)	20	7101P338-60	Screw	42	W11100270	Manager, Appliance (Powermax)
4	W11238757	Igniter	21	W10130760	Bracket, Moving Console (Left)	43	W11110768	Assembly, WIFI Module
		(All But Right Center Rear)		W10130759	Bracket, Moving Console (Right)	44		Knob, Griddle
	W11238756	Igniter	22	W11328357	Screw		W10891923	Stainless
		(Right Center Rear)	23	W11253770	Panel, Console	45	W11104967	Bezel, Griddle
5		Assembly, Grate	24		Knob, Burner (For 4 Cooktop Burners)	46	W10294500	Lens, Indicator Light
	W11291180	Black (Left)		W10887596	Stainless	47	W10116114	Light, Indicator Housing
	W11172625	Black (Right Center)	25		Assembly, Griddle Module	48	W11033497	Control, Griddle
6	W11042504	Bumper, Grate			(Part Number Included on Burner Box Page)	49	W10674068	Screw
7	W11323260	Screw				50	7101P624-60	Screw
8	W11281269	Barrier, Appliance Manager	26	W11120976	Assembly, Grill Burner	51	W10568405	Assembly, Speaker


48" CHASSIS PARTS

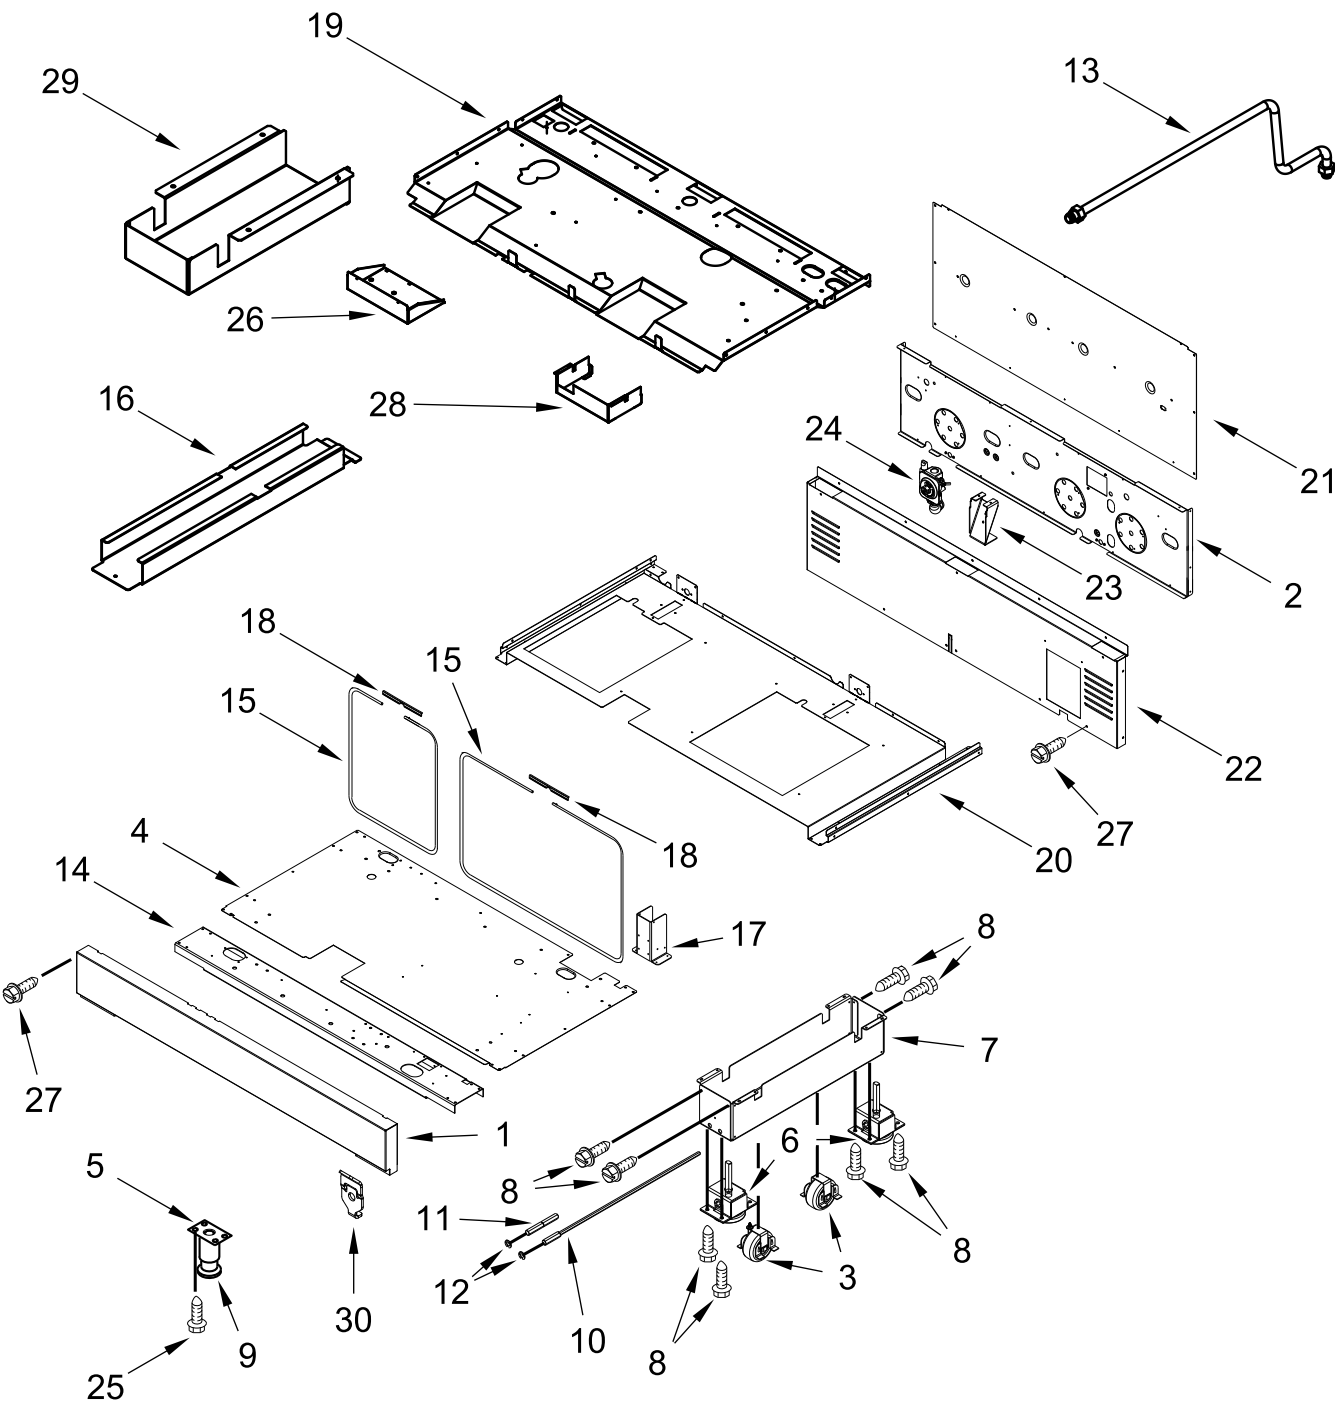

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	13	W11106963	Tube, Pressure Regulator	22	W11034123	Panel, Back Bottom
2	W11324987	Back, Chassis	14	W11369238	Support, Channel	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	15	W11115328	Gasket, Oven (30")	24	W10449140	Regulator, Pressure
4	W11110260	Duct, Bottom (48")		W11115326	Gasket, Oven (18")	25	3400518	Screw
5	9759118	Plate, Mounting	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W10115819	Column, Central	27	7101P426-60	Screw
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9" Long)	28	W11369237	Cabinet, Appliance Manager
8	4449743	Screw	19	W11324984	Top, Chassis	29	W11368831	Channel, Wire
9	9759117	Foot, Dual Fuel	20	W11040800	Chassis, Bottom	30	W11036559	Spring Clip, Range
10	W10115869	Shaft, Long	21	W11103335	Panel, Back Top			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


30" OVEN PARTS

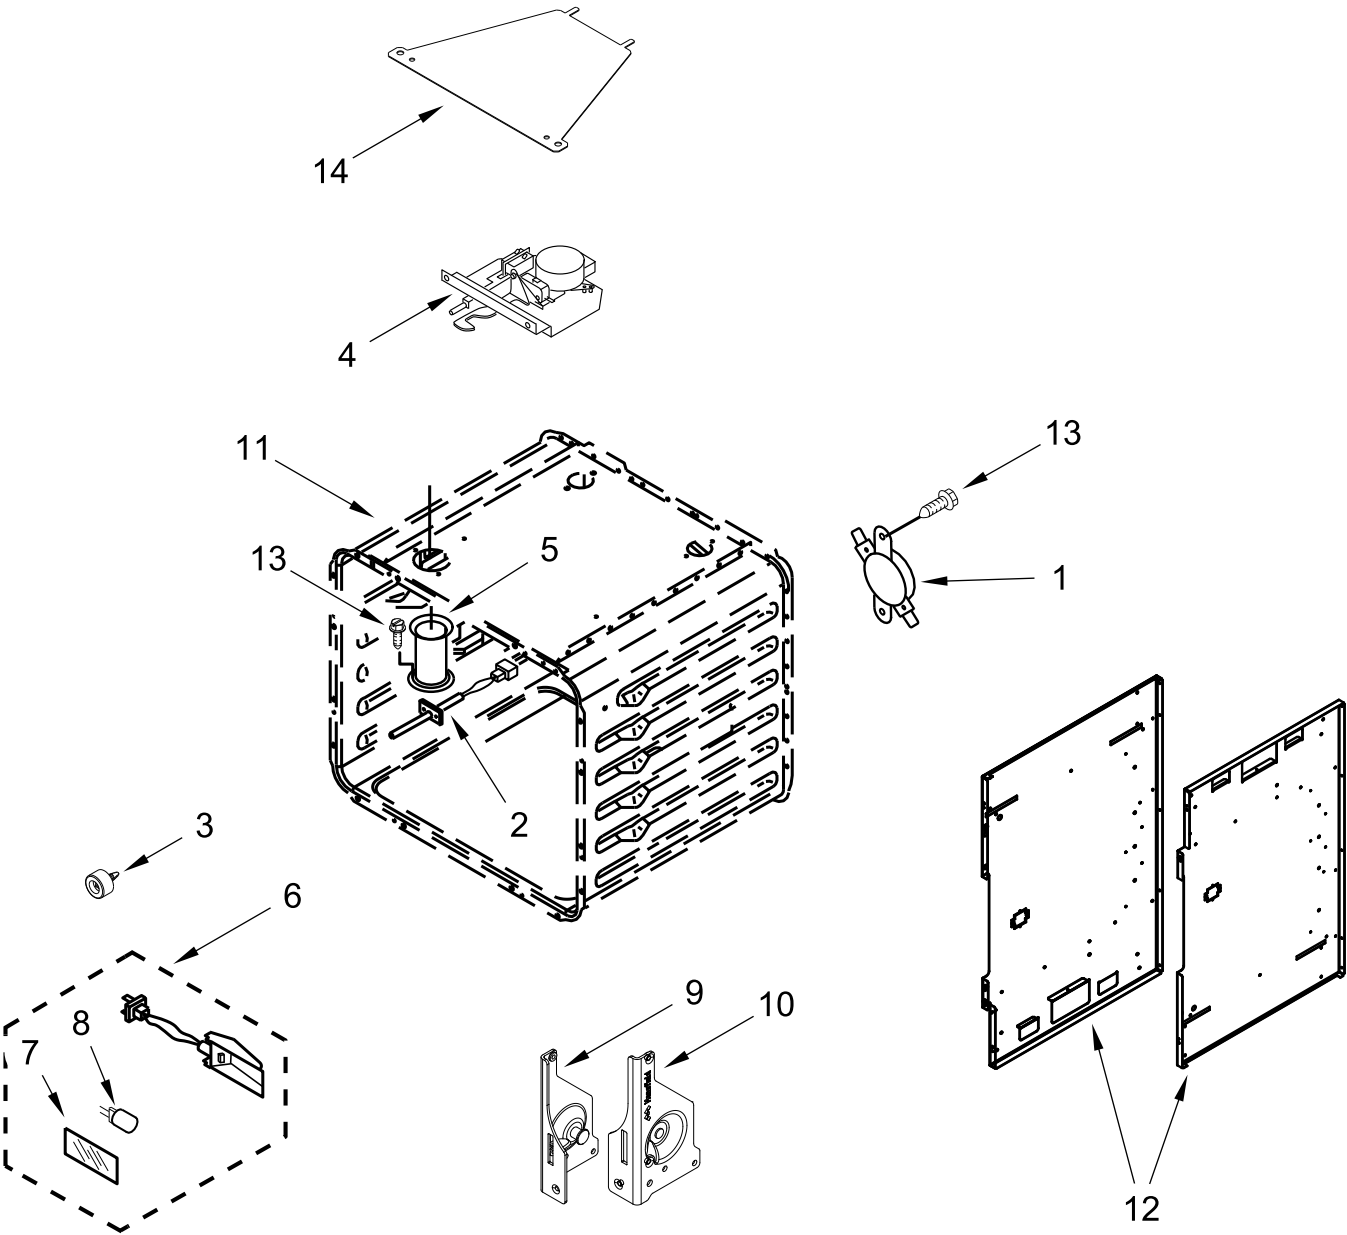

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap, 30"
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282816	Insulation, Back, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W11223932	Assembly, Oven Light	13	7101P426-60	Screw			
7	W10169756	Lens, Light						
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


18" OVEN PARTS

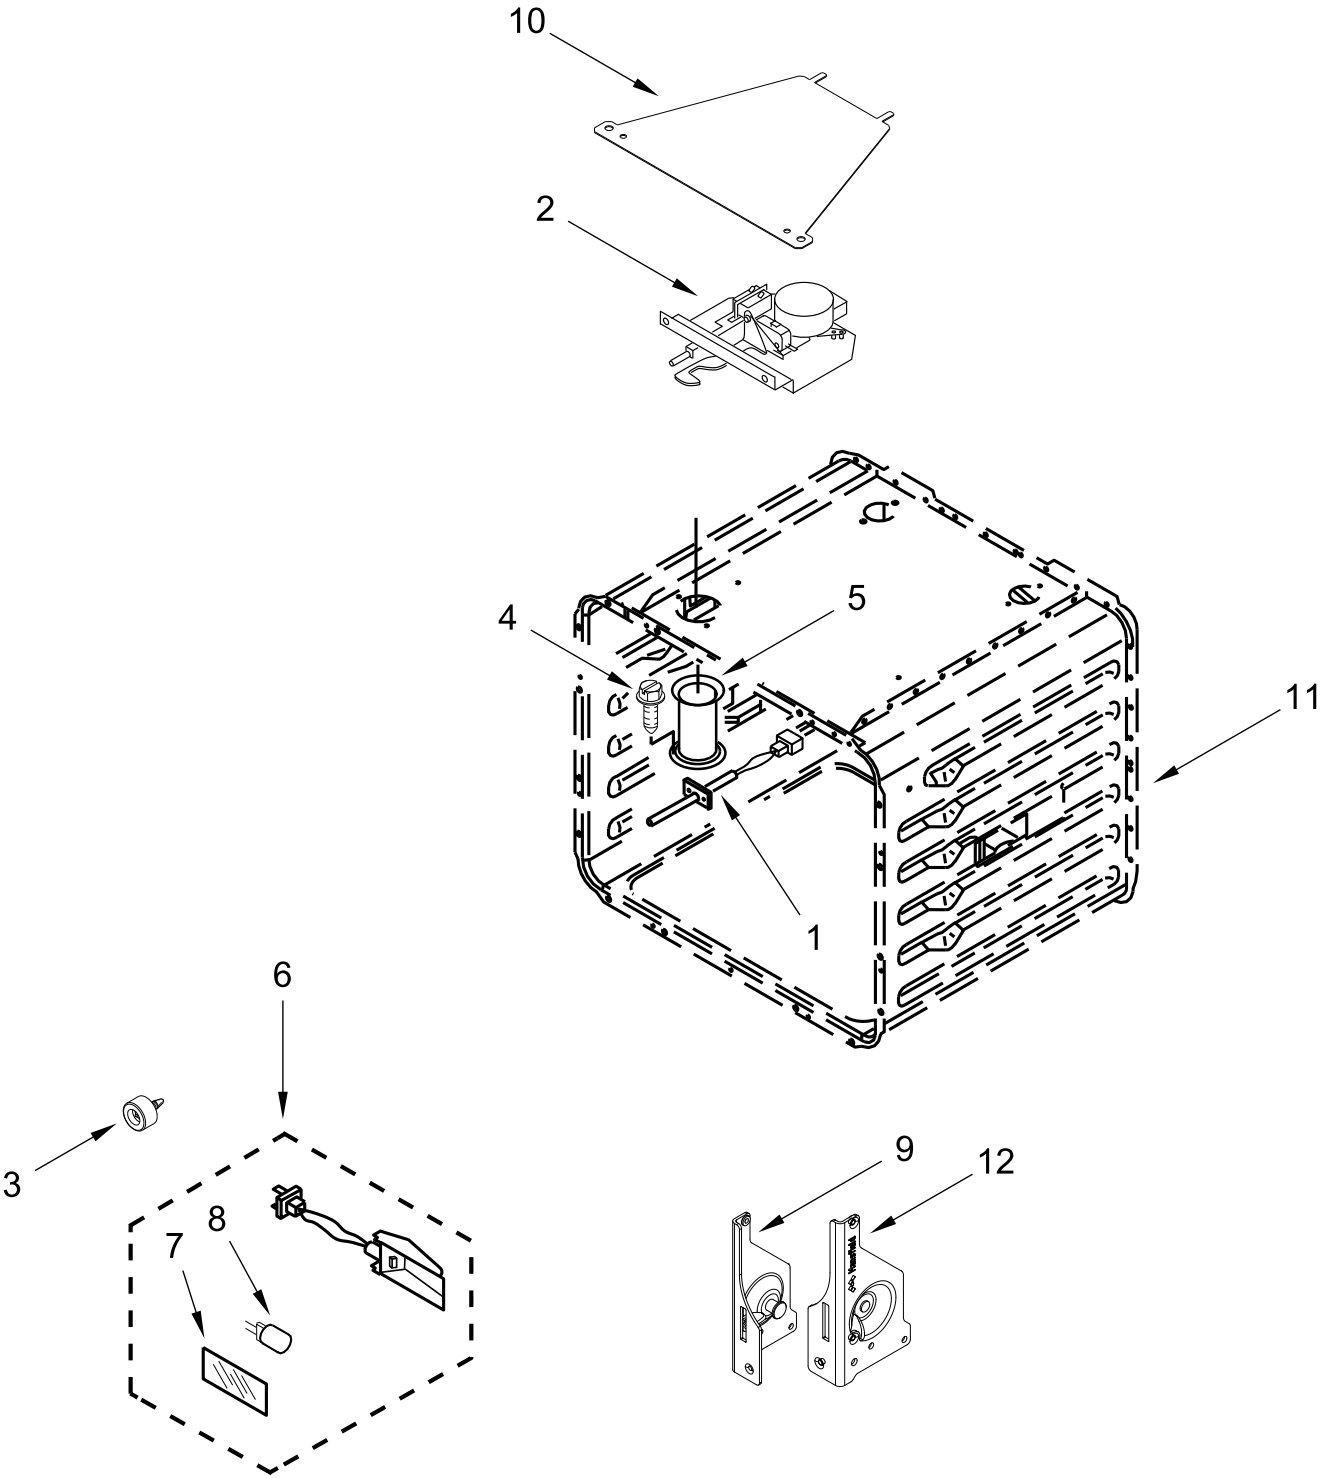

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	12	W11096293	Receiver, Hinge (Right)
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	10	W10160858	Cover, Latch			
4	3196176	Screw	11		Liner, Oven (Not Serviced)			
5	W10288078	Tube, Vent					W10282820	Insulation, Wrap, 18"
6	W11223932	Assembly, Oven Light					W10282812	Insulation, Back, 18"
7	W10169756	Lens, Light					3400968	Nut


VENTING PARTS

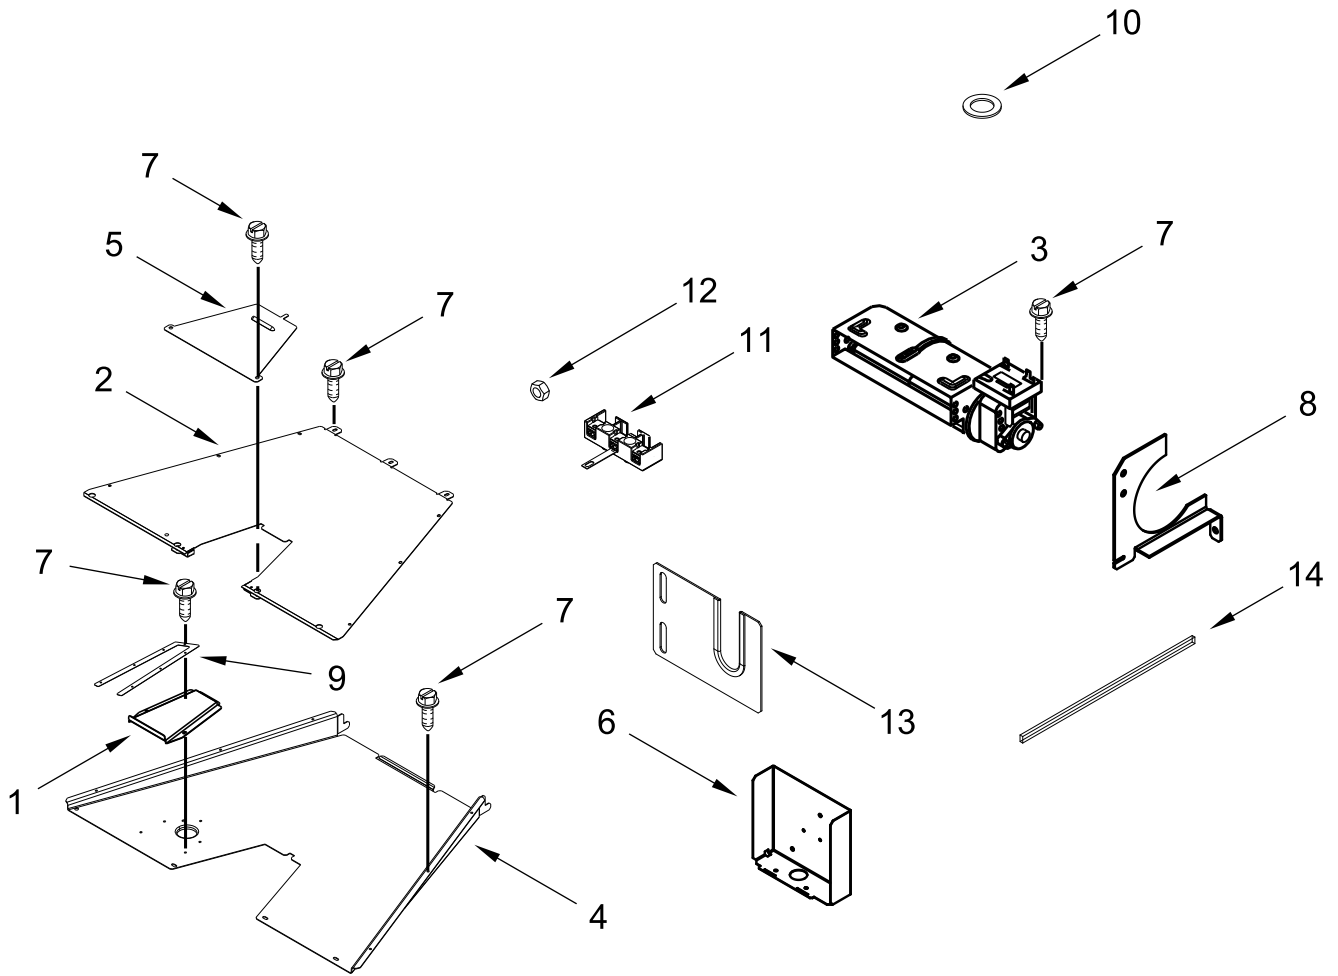

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")
	W10818235	Slope, Exhaust Vent (18")		W11113378	Vent, Cooling Bottom (18")		W10270402	Seal, Vent Slope (18")
2	W11105223	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18")	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
			7	7101P426-60	Screw	12	112432	Nut, Hex
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
						14	W10919715	Gasket


30" OVEN DOOR PARTS

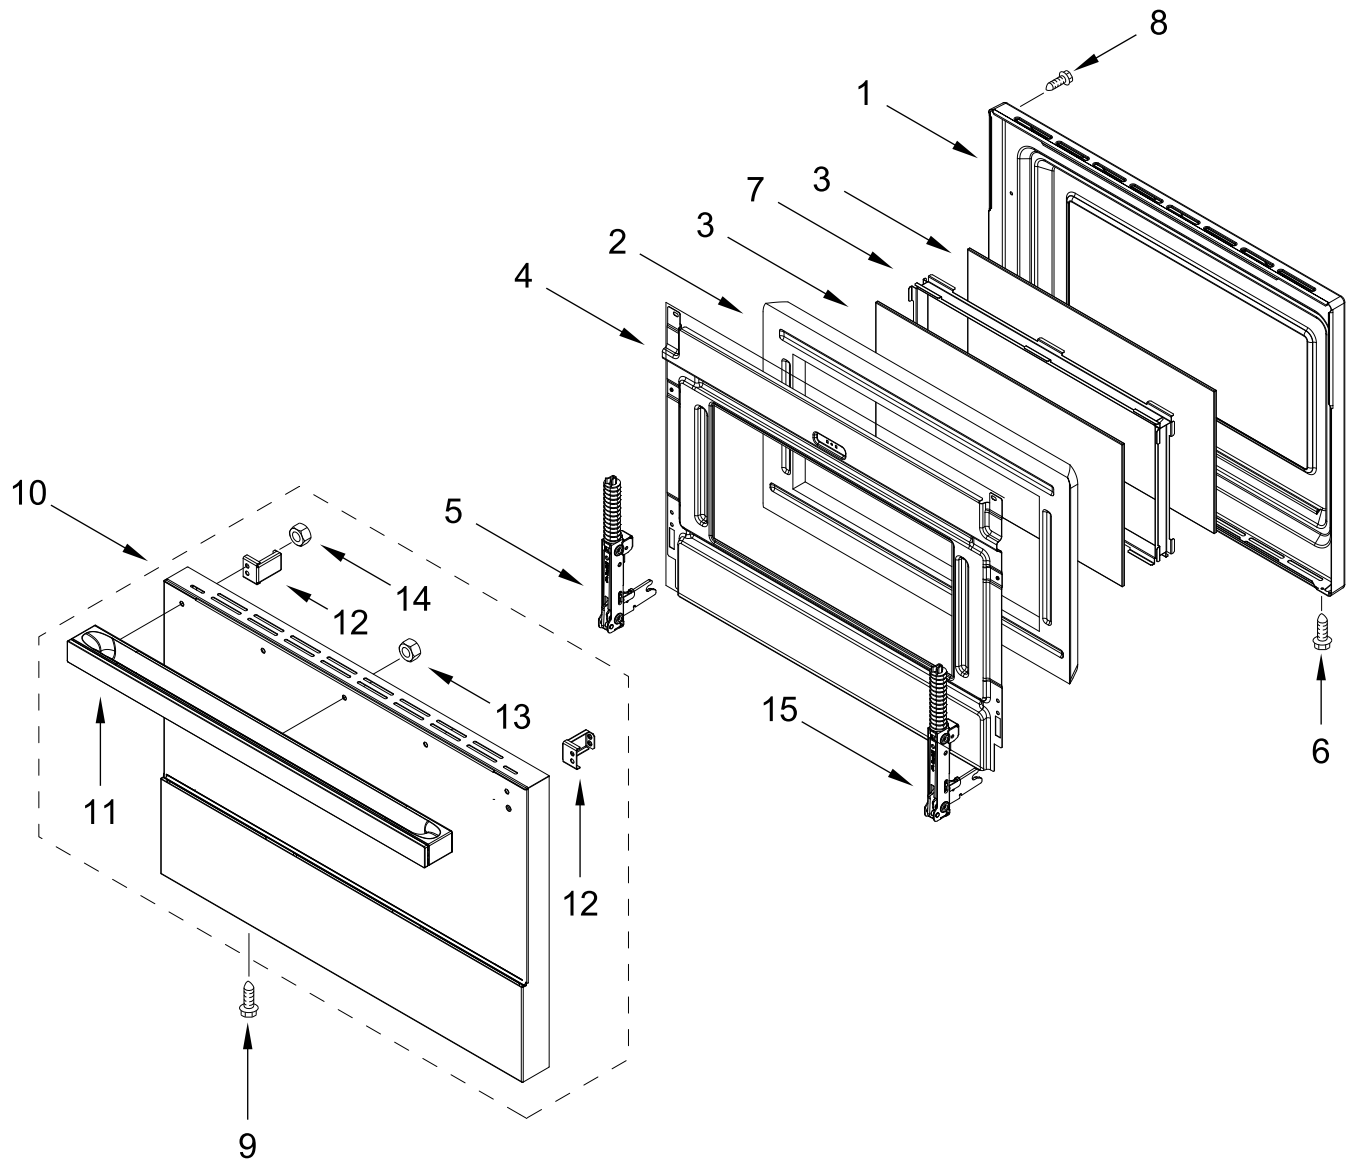

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11194816	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13	W11198435	Nut
3	W11184409	Glass, Inner	9	W10162096	Screw	14	999299	Nut
4	W11194821	Retainer, Glass	10	W10870221	Assembly, Outer Door Glass (Includes Handle)	15	W11096977	Hinge, Door (Right)
5	W11096978	Hinge, Door (Left)						
6	W10607120	Screw	11	W11125541	Handle, Door			


18" OVEN DOOR PARTS

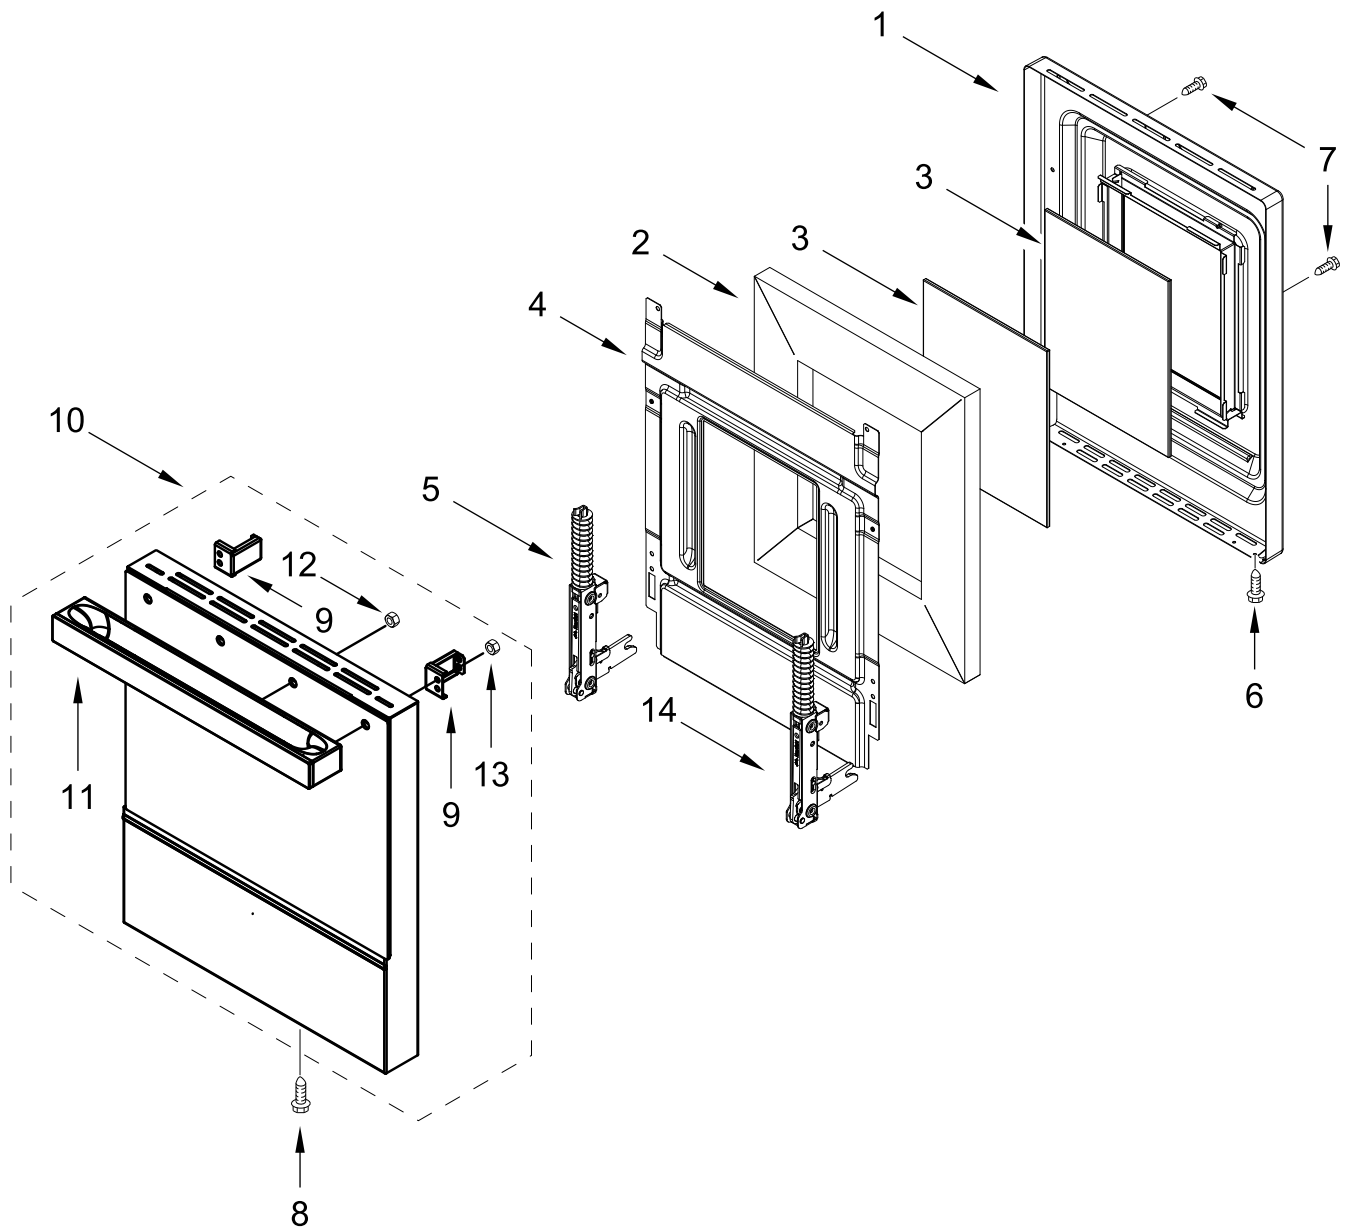

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W11198435	Nut
2	W10884821	Insulation, Door	8	W10162096	Screw	13	999299	Nut
3	W11036789	Glass, Inner	9	W11194816	Bracket, Handle	14	W11096981	Hinge, Door (Right)
4	W11194818	Retainer, Glass	10	W10870212	Assembly, Outer Door Glass (Includes Handle)			
5	W11096982	Hinge, Door (Left)	11	W11125539	Handle, Door			
6	W10607120	Screw						


30" INTERNAL OVEN PARTS

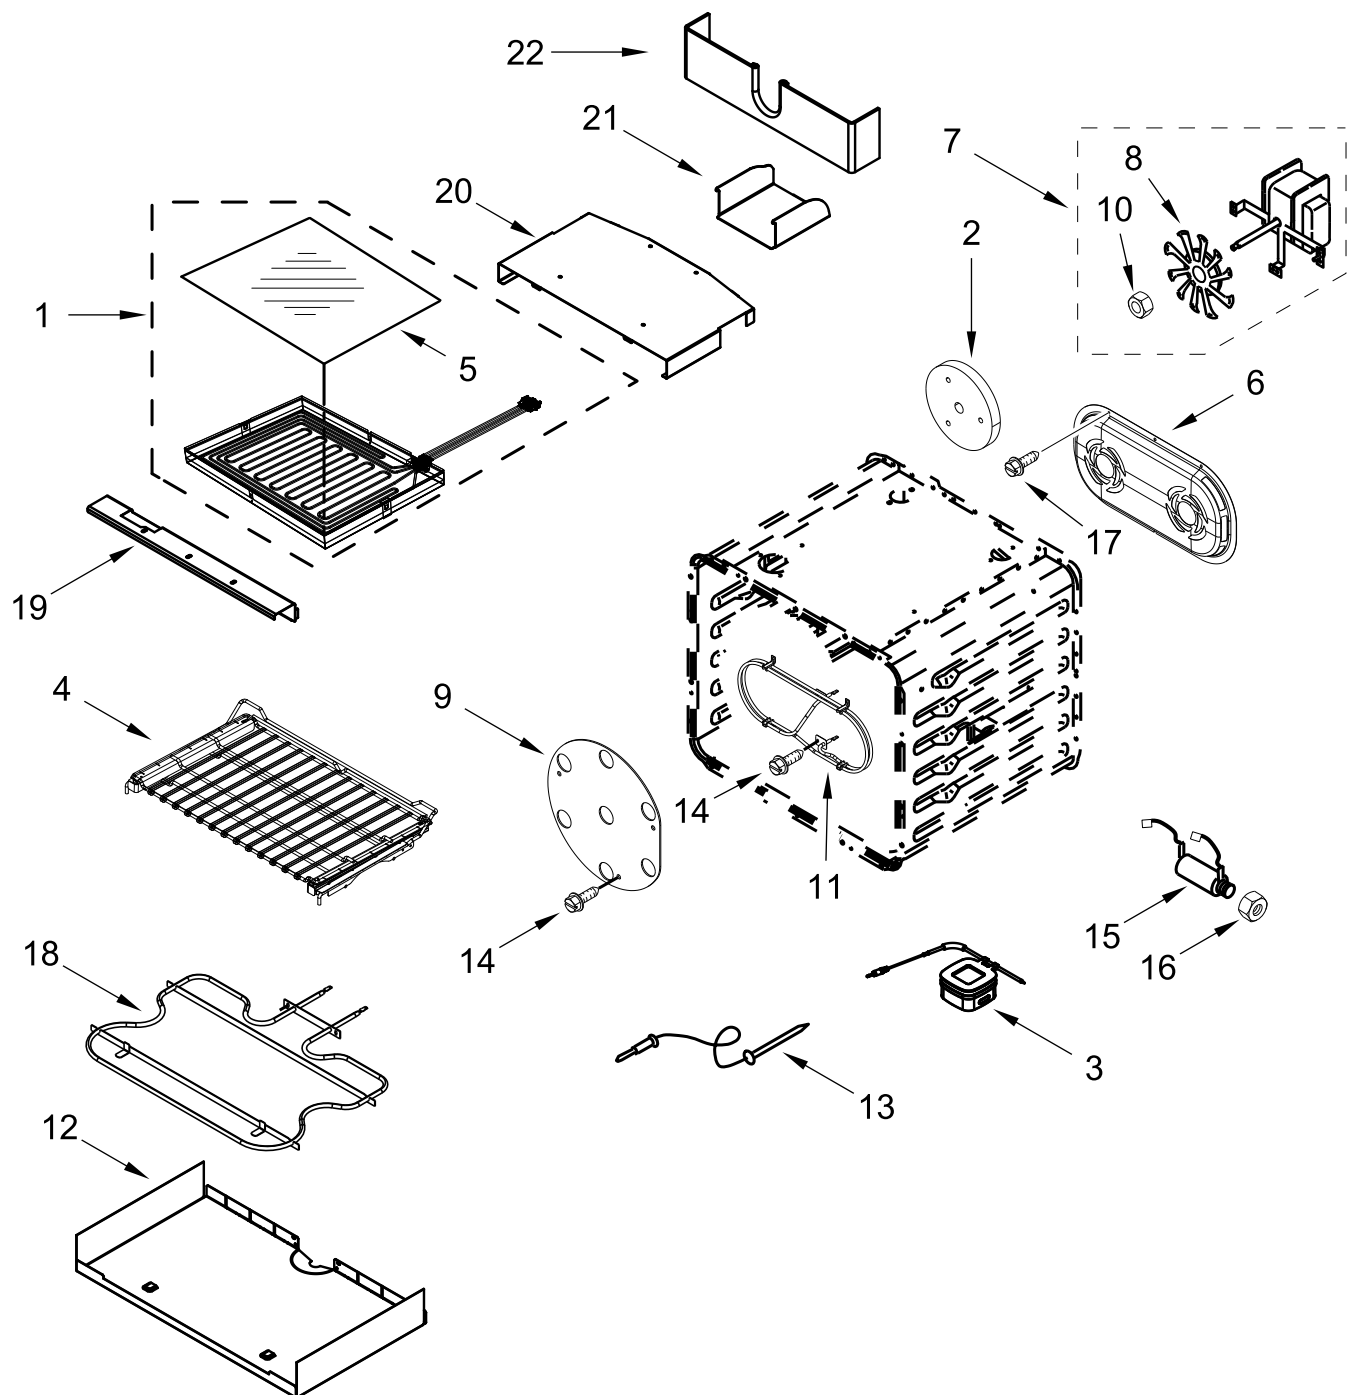

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	8	W11108376	Blade, Fan	16	W11033111	Nut, Locking
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	17	W10739592	Screw
3	W11186918	Probe, Wireless Meat	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
4	W11111342	Rack, Oven (Sliding)	11	W10116434	Element, Convection	19	W11112336	Bracket, Broil Front
5	W11193191	Glass, Broil Element	12	W11109421	Tray, Hidden Bake	20	W11158843	Bracket, Broil Top
6	W11232487	Baffle, Convection	13	9755542	Probe, Temperature	21	W11111391	Cover, Broil Terminal
7	W11121400	Fan, Convection	14	4449154	Screw	22	W11170823	Cover Plate, Terminal Hole
			15	9755543	Jack, Meat Probe			

18" INTERNAL OVEN PARTS

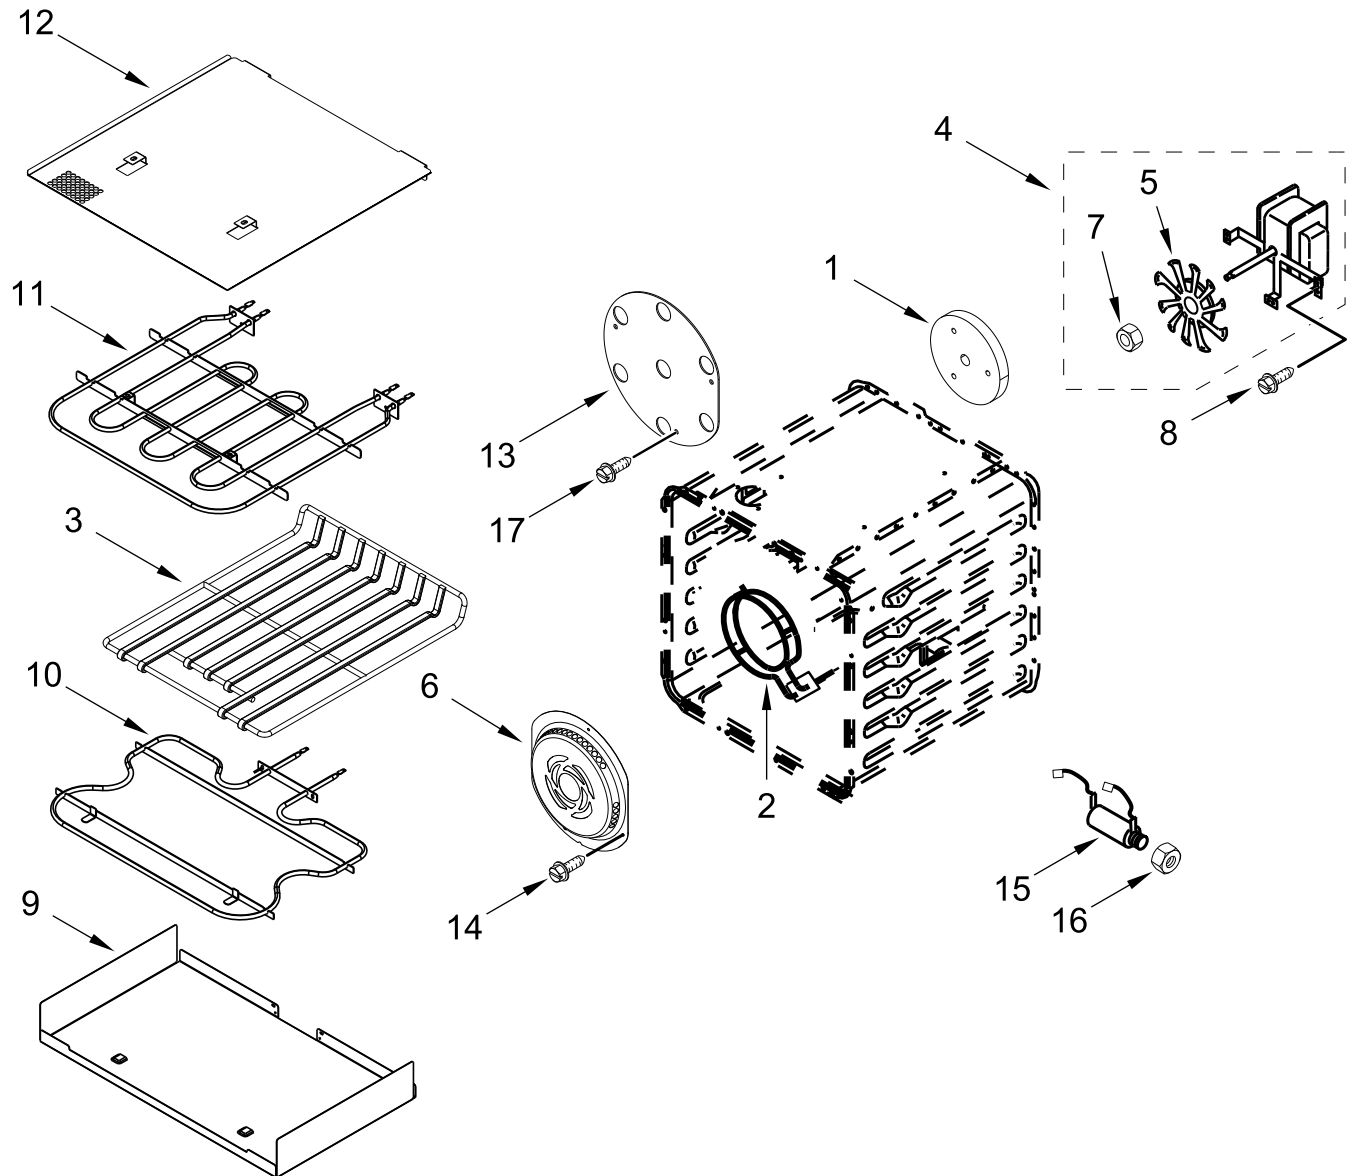

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
2	9762242	Element, Convection Steam	8	4449154	Screw	15	9755543	Jack, Meat Probe
3	W11111351	Rack, Oven (18")	9	W11110223	Tray, Hidden Bake	16	W11033111	Nut, Locking
4	W11121400	Fan, Convection	10	W11045324	Element, Hidden Bake	17	W10720084	Screw
5	W11108376	Blade, Fan	11	W10116010	Element, Broil			
6	W11368180	Cover, Fan	12	W10160855	Shield, Element Broil			
			13	W10261523	Plate, Fan			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill