




ELECTRIC RANGE

MODELS:

JES1450ML1 (Stainless)


COOKTOP PARTS

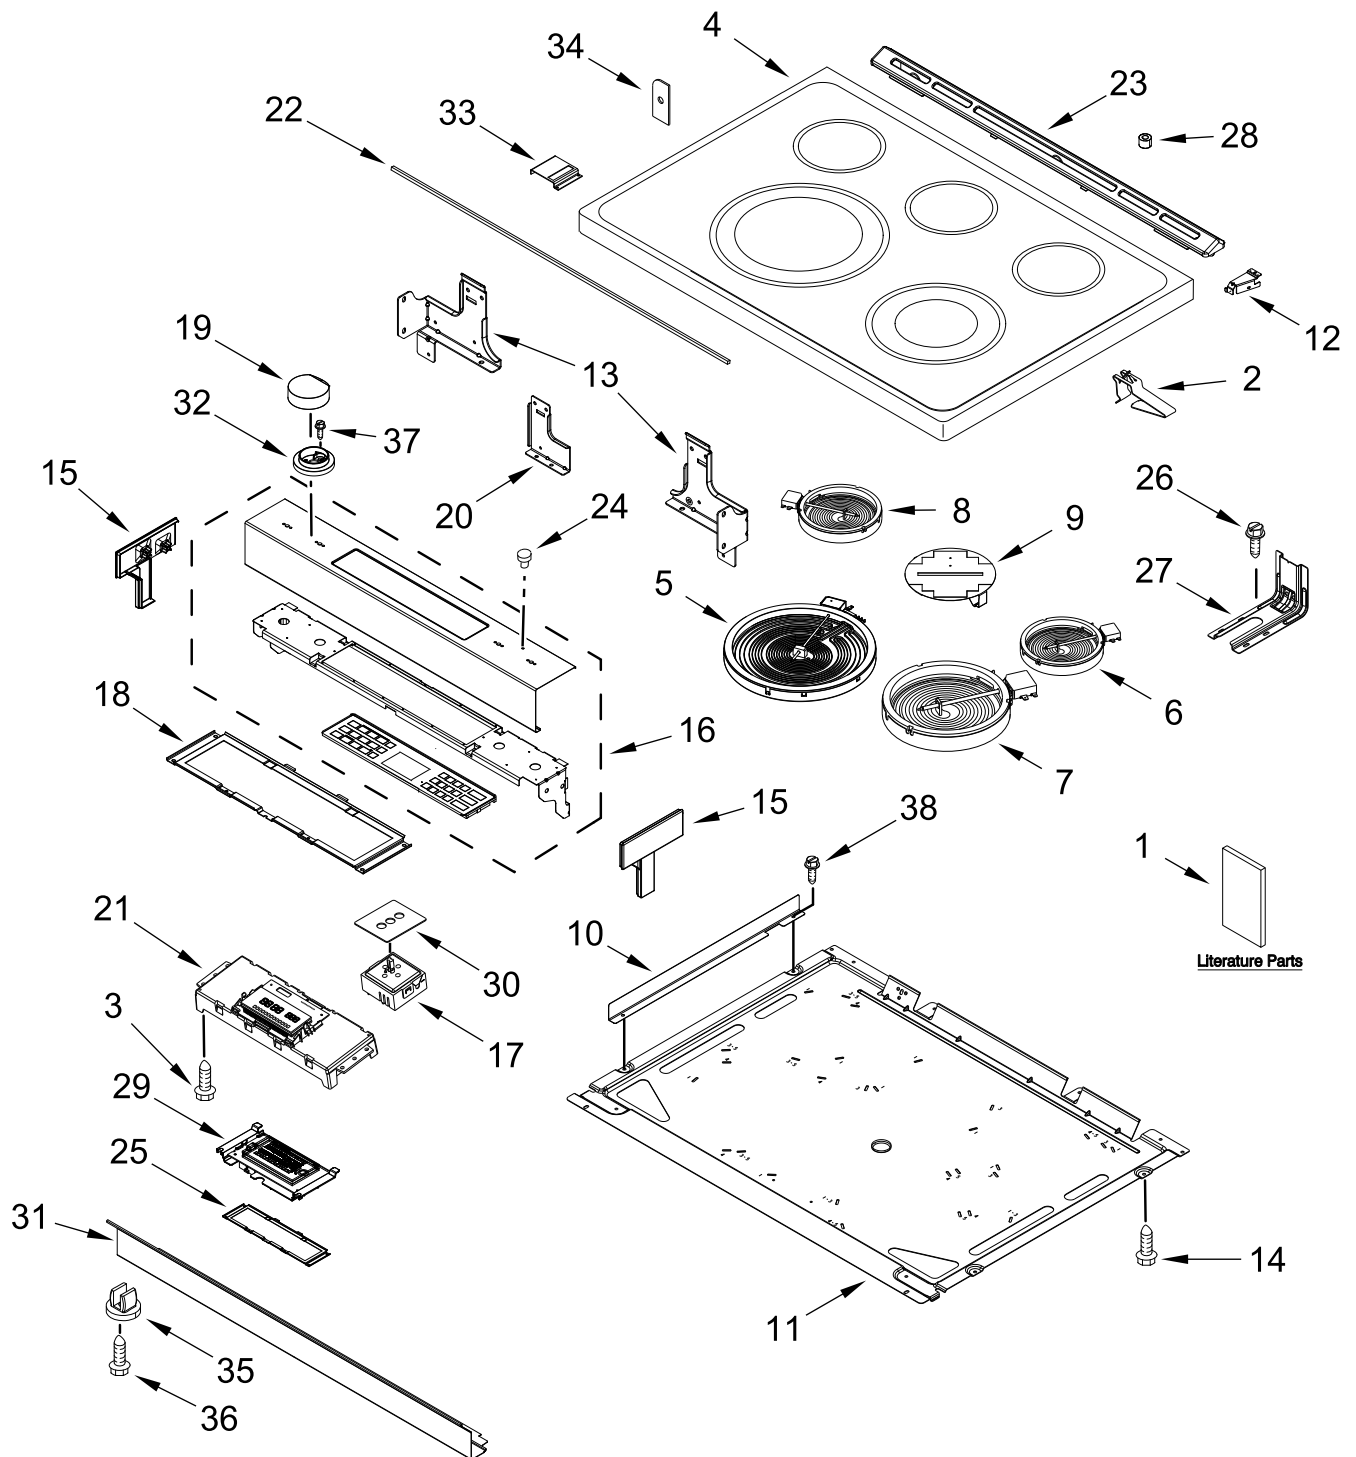

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	15		Endcap	31		Console, Lower Panel
	W11604186	Control Guide		W10557751	Stainless (Left)		W10565662	Stainless
	W11602517	Owners Manuel		W10557754	Stainless (Right)	32		Bezel
	W11382913	Tech Sheet	16		Console		W11592977	Stainless
	W11602530	Quick Start Guide		W11606820	Stainless	33	W11158783	Shield, Keypad
	W11615555	Dimension Guide	17	W10437097	Switch, Infinite	34	W10882900	Gasket
2	W11600012	Spring, Element			(Left Front)	35	W10645947	Grommet
3	3196178	Screw		W10578768	Switch, Infinite	36	W10516115	Screw
4		Cooktop			(Right Rear)	37	W10498399	Screw
	W10536299	Stainless		W10437094	Switch, Infinite	38	3196169	Screw
5	W11318371	Element (3000W)			(Right Front and Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
		(Left Front)	18	W10557780	Bracket , Control		W11630995	Harness, Main
6	8273994	Element (1200W)	19		Knob		W11172426	Harness, Display
		(Right Rear)		W10505763	Stainless		W11172417	Harness, Console
7	W10251108	Element (3200W)	20	W10598048	Bracket, Console		W10664316	Clip, Harness
		(Right Front)			(Center)			(Cooktop)
8	W10342780	Element (1300W)	21	W11603769	Control MRC2		W10575120	Harness, Keypad
		(Left Rear)	22	W10612719	Gasket, Console and Cooktop		W11630991	Harness, Bake Drawer
9	W11684384	Element, Warm Zone					W11134658	Harness, Cooktop
		(Center Rear)	23		Vent, Trim Top		313438	Clip, Harness
10	W11175271	Bracket, Radiant		W10636529	Stainless		7111P017-60	Clamp, Wire
11	W10536275	Pan, Radiant	24	3196068	Lens, Indicator		3196520	Clip, Wire
12	W10162253	Brace, Corner (Left)	25	W10558372	Bracket, Control			
	W10162252	Brace, Corner (Right)	26	7101P485-60	Screw, Anti-Tip Kit			
13	W10289170	Support, Cooktop (Left)	27	W11379947	Bracket, Anti-Tip			
	W10289169	Support, Cooktop (Right)	28	W10854253	Bumper			
14	3196173	Screw	29	W10759324	Assembly, Display			
			30	7201P077-60	Gasket, Infinite Switch			


CHASSIS PARTS

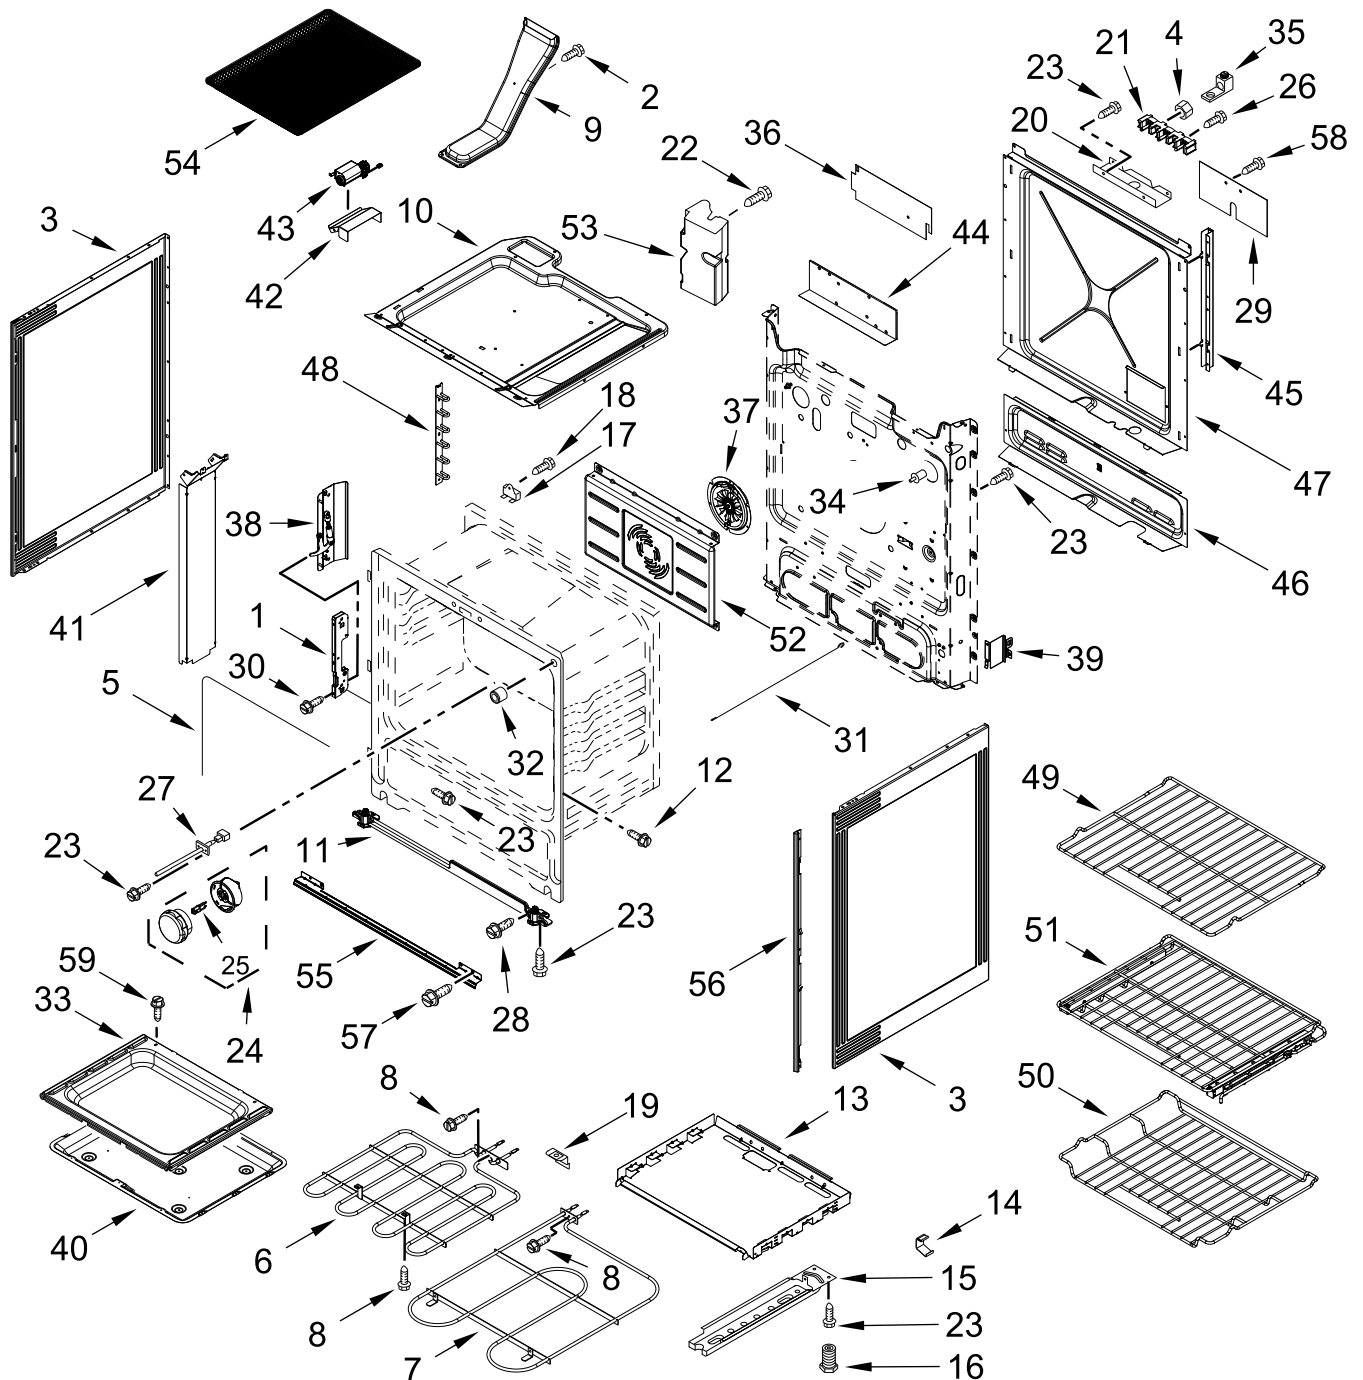

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10634238	Hinge, Receiver	24	W11634772	Light Assembly	48	W10603482	Rack, Ladder
2	W10362924	Screw	25	W10571723	Bulb, Halogen 40 Watts	49	W10554005	Rack, Heavy Duty
3		Panel, Side				50	W10554006	Rack, Maximum Capacity
	W11445467	Black	26	3400016	Screw			
4	3400029	Nut	27	W10586204	Sensor	51	W10911366	Rack, Sliding
5	W11491752	Gasket, Door	28	3196169	Screw	52	W10554262	Baffle, Full Convection
6	W10544952	Element, Broil	29	W10655441	Shield, Power Cord	53	W10914589	Counterweight
7	W10774342	Element, Bake	30	W10031780	Screw	54	W11661815	Basket, Airfry
8	W10362924	Screw	31	W10273192	Rod, Door Switch	55	W11620269	Bracket, Front Frame
9	W11122085	Assembly, Flue	32	9758701	Spacer, Door			
10	W10289168	Box, Burner SI	33	W10774446	Bottom, Oven	56	W11510561	Barrier Rail, Rubber (Front Left)
11	W11456179	Front Foot Assembly	34	W11511828	Switch, Door		W11510562	Barrier Rail, Rubber (Front Right)
12	W10067840	Screw	35	W10281322	Kit, Bare Wire Adapter Block			
13	W10541959	Shield, Bake	36	W11117035	Shield, Wire	57	3196560	Screw
14	W10137382	Clip, Panel	37	W11353932	Convection Assembly	58	3400080	Screw
15	W10390008	Base Rail Assembly (Left)	38	W10605411	Receiver, Slow Close Hinge	59	W10516115	Screw
	W10390007	Base Rail Assembly (Right)						FOLLOWING PARTS NOT ILLUSTRATED
16	W10058460	Foot, Leveling	39	W10273002	Bracket, Oven Support		W10655489	Insulation, Wrapper
17	3196548	Fuse, Thermal	40	W11379357	Bake Pan		W10575374	Insulation, Bottom
18	3196172	Screw	41	W10162255	Duct, Cover		4820F015-59	Insulation, Strap
19	W10035900	Support, Oven Bottom	42	W10162254	Duct, Cooling		W10655490	Insulation, Main Back
20	3186034	Bracket, Service	43	W11467246	Cooling Fan		W10655442	Insulation, Heat Shield
21	W10246624	Block, Terminal	44	W10162260	Shield, Heat		W10624592	Cord, Power
22	W11034869	Screw	45	W10162241	Channel, Rear			
23	3196178	Screw	46	W10162248	Cover, Wire			
			47	W11379354	Cover, Back			

DOOR PARTS

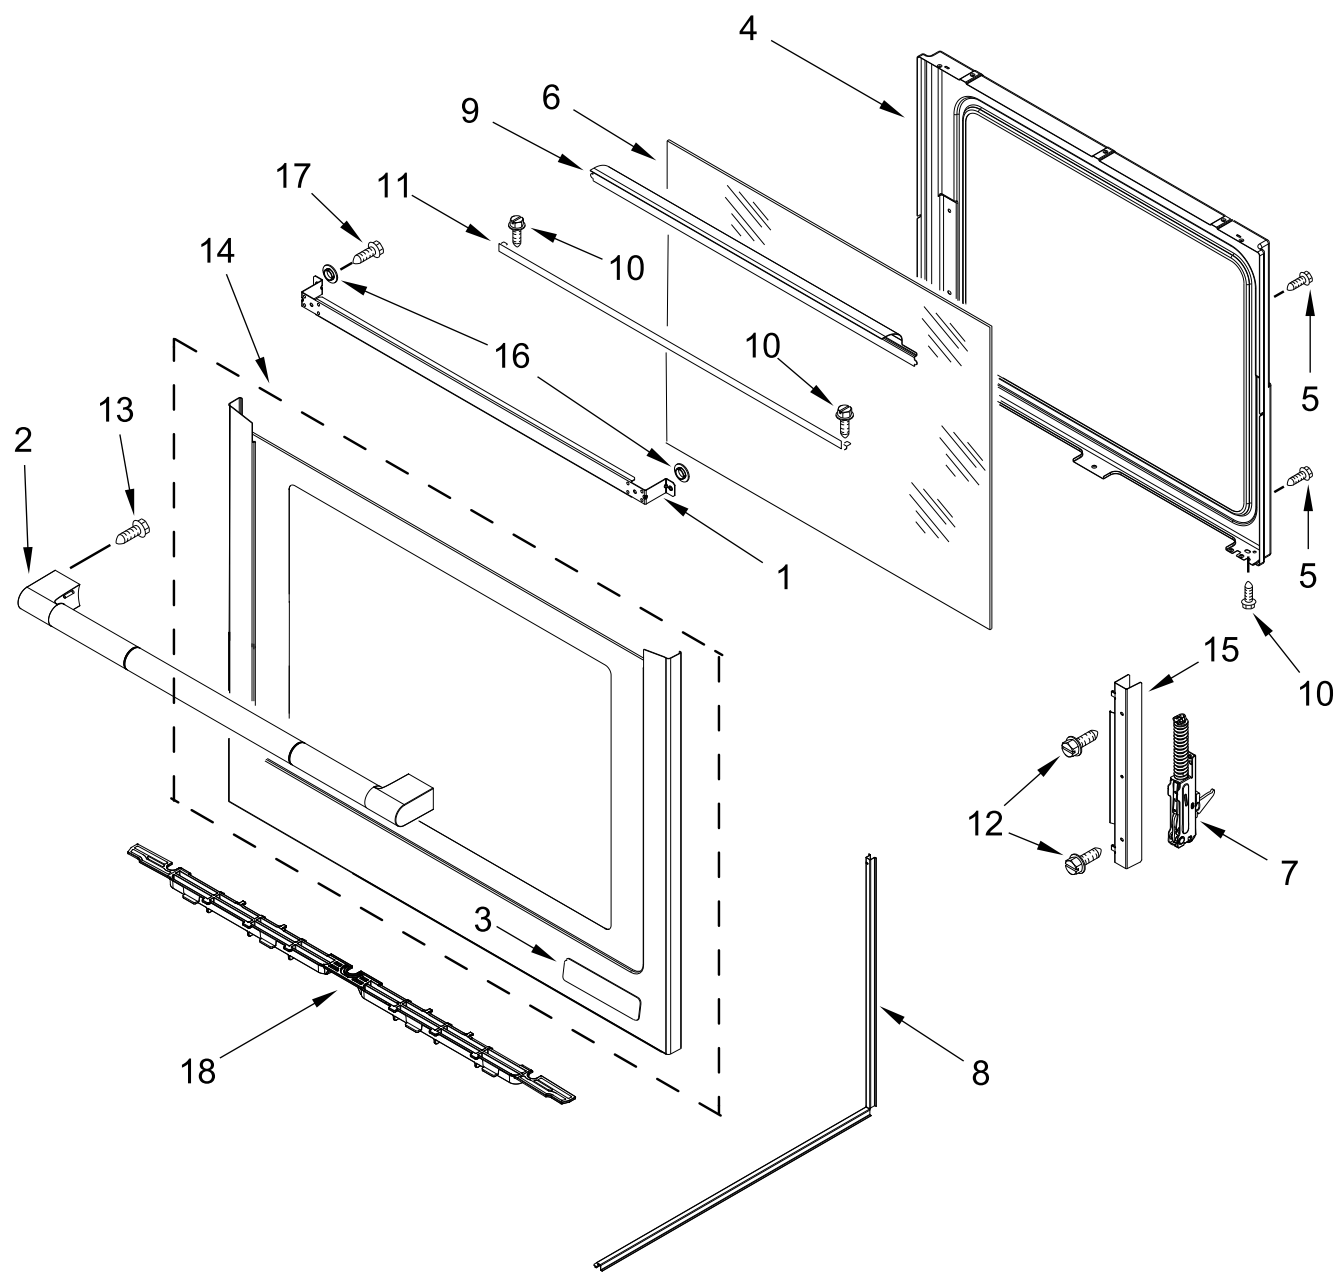


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle
2		Assembly, Door Handle
	W11600908	Stainless
3		Badge
	W11238658	Stainless
4	W10826568	Liner, Door
5	W10031790	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W11223202	Glass, Inner
7	W11592970	Hinge, Slow Close
8	W11379948	Glass Spacer
9		Scoop, Door
	W10551024	Stainless
10	9780274	Screw
11	W10813140	Rail, Horizontal Support
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	8533988	Screw
14		Assembly, Outer Door
	W11618950	Stainless
15	W10813139	Rail, Vertical Support
16	W10319024	Washer, Door
17	W11091878	Screw
18	W11440161	Bottom, Door Cover

DRAWER PARTS

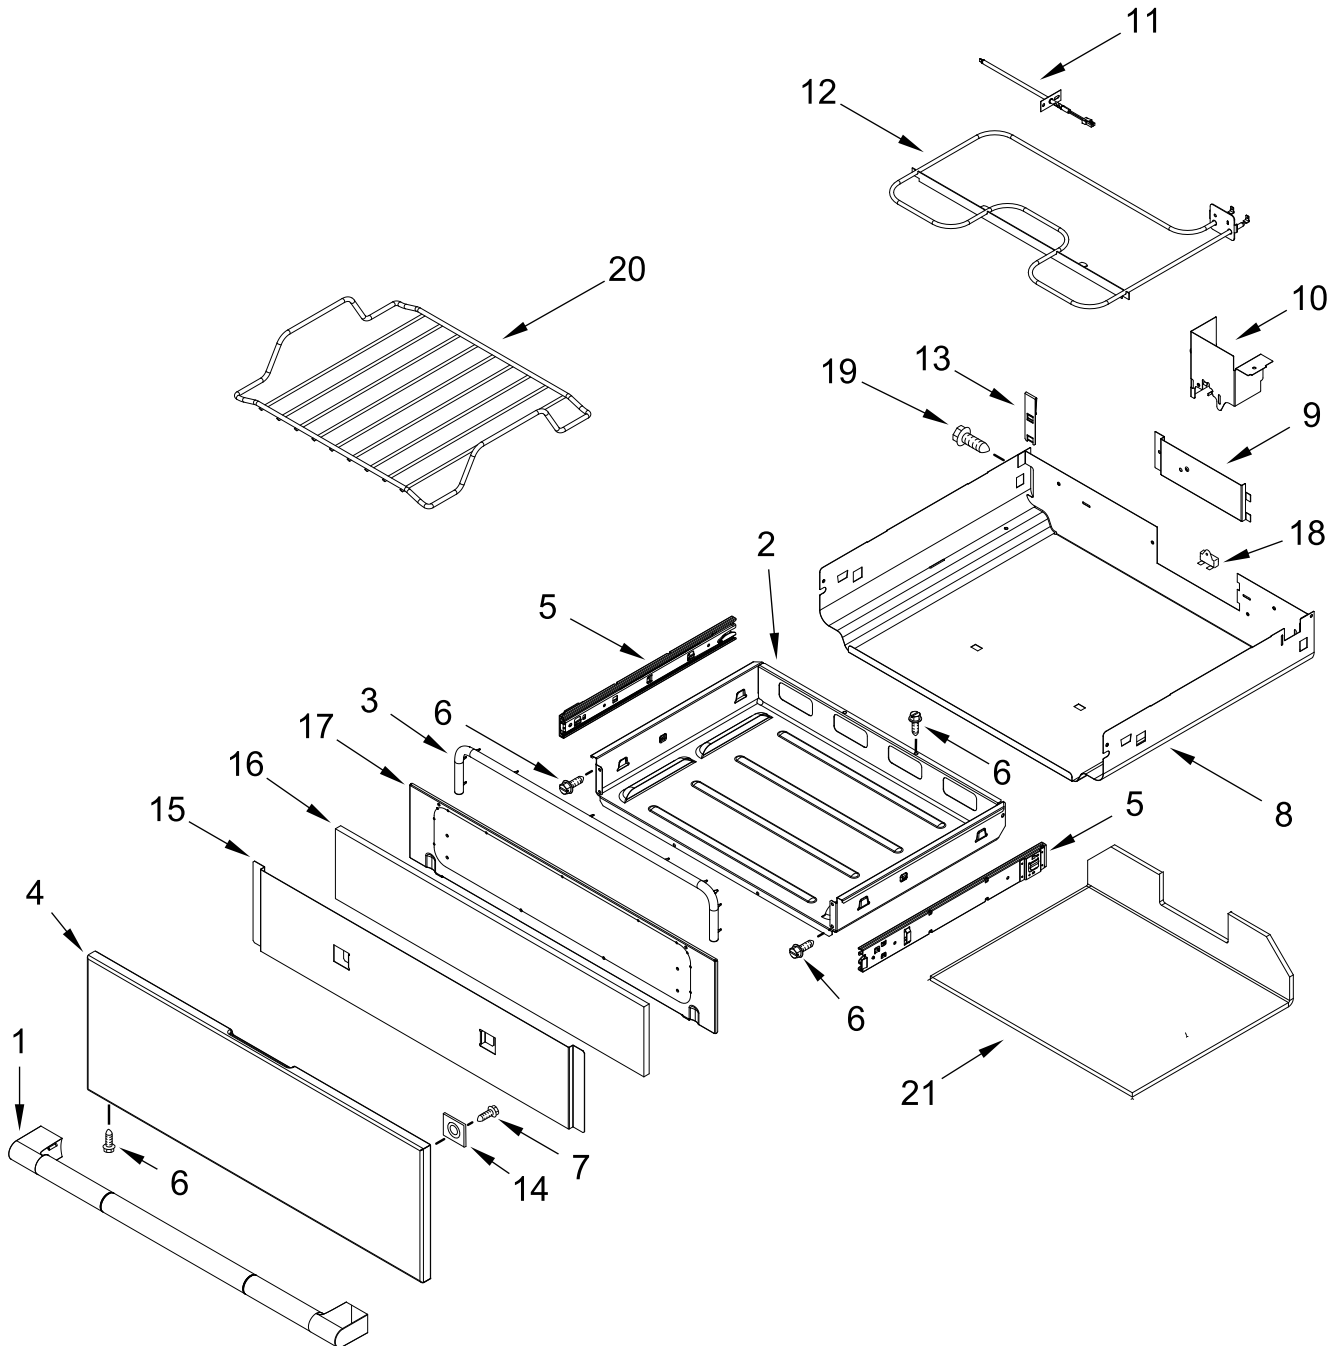

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	6	3196169	Screw	15	W10551018	Insulation, Drawer Front
	W11600908	Stainless	7	8533988	Screw	16	W10550982	Insulation, Drawer
2	W10757442	Drawer,Bake	8	W10634260	Enclosure, Warming	17	W10541947	Panel, Front Inner
3	W10550987	Seal, Drawer	9	W10727084	Cover, Gas Valve	18	W10729897	Fuse, Thermal
4		Panel, Drawer Front	10	W10634259	Cover, Wire	19	3196560	Screw
	W10541958	Stainless	11	W10720530	Sensor	20	W10602493	Rack, Bake Drawer
5	W11399928	Slide, Drawer (Left)	12	W10541944	Element, Bake	21	W10551011	Insulation, Bake Drawer Bottom
	W11399929	Slide, Drawer (Right)	13	W10551019	Cover, Side			
			14	3823F017-45	Spacer, Handle			

OPTIONAL PARTS (NOT INCLUDED)

Illus.
No.

Part No. **Description**

	PAINT, TOUCH-UP (1/2oz.)
72032	Black
72017	White
4392899	Biscuit and Bisque
511873	White Porcelain (2 oz.)
	PAINT, PRESSURIZED SPRAY (12 Oz.):
285006	Black
350930	White
4392901	Biscuit and Bisque
	PAINT, BULK (1 qt.)
799344	White (Uncut)
4392900	Biscuit/Bisque
799344	White (Uncut)
	REFINISHING MATERIAL:
242756	Oven Liner Touch Up Paint
	INSULATION
261514	Insulation (1-1/2 x 24 x 120 in)
240132	Insulation (2-1/2 x 22 x 120 in)
	CLEANERS AND POLISHES
31605	Kit, Cooktop Care
W10355051	Cleaner, Cooktop
W10432019	Alt Cleaning Kit
W10391473	Pad, Cooktop Cleaning
WA906B	Scraper, Cooktop
	MISCELLANEOUS
4396923	Broiler Pan and Grid
W10123240	Rack, Broiler Pan and Roasting
W10432539	Griddle
W10432545	Kit, Grill
	TRIM KITS
W10675026	Black
W10675027	White
W10675028	Stainless
	BACKSPLASH ASSEMBLY
W10655449	Black
W10655448	White
W10655450	Stainless