




GAS RANGE

MODELS:

JGRP430HL05 (Stainless)


BURNER BOX PARTS

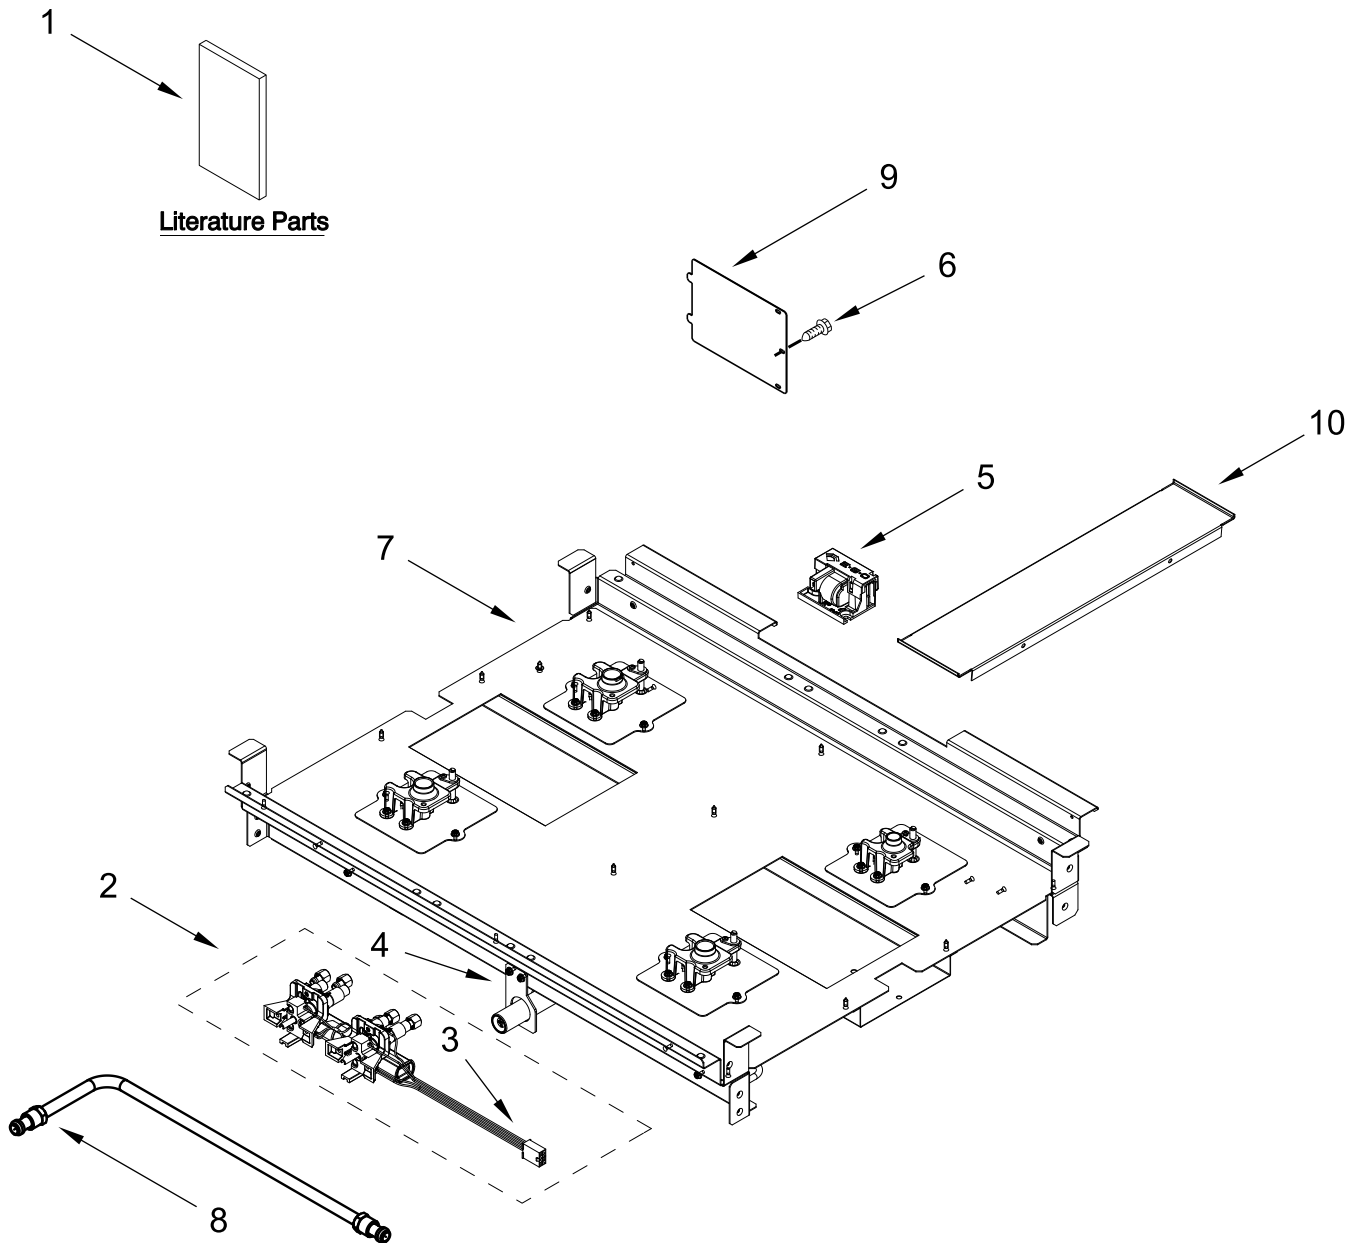

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10893051	Assembly, Valve Manifold	9	W10115843	Cover, Ignition
	W11508896	Use and Care Guide			(Left Front And Left Rear)	10	W11121361	Filler, Cooktop
	W11508888	Installation Instructions		W10893058	Assembly, Valve Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start			(Right Front and Right Rear)		W11448065	Harness, Main
	W11184746	Guide, Internet Connectivity					W11200328	Harness, Cooktop
	W11575703	Diagram, Wiring (Cooktop)	3	W11106300	Switch, Harness		W10780278	Harness, Door Lock
	W11565476	Diagram, Wiring (Oven)	4	W11121194	Bracket, Manifold		W11200325	Harness, Communication
	W11202275	Sheet, Tech	5	W11121317	Module, Spark		W11242785	Harness, WIFI
			6	7101P426-60	Screw		313438	Clip, Harness
			7		Box, Burner (Not Serviced)		W10624584	Cord, Power
							4450800	Screw, Grounding
			8	W10892073	Tube, Manifold Supply (Left)		W11311196	Ignitor Wire, Wire-Electrode Bake
				W10892076	Tube, Manifold Supply (Right)		W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11422176	Kit, LP Conversion


COOKTOP, BURNER, AND GRATE PARTS

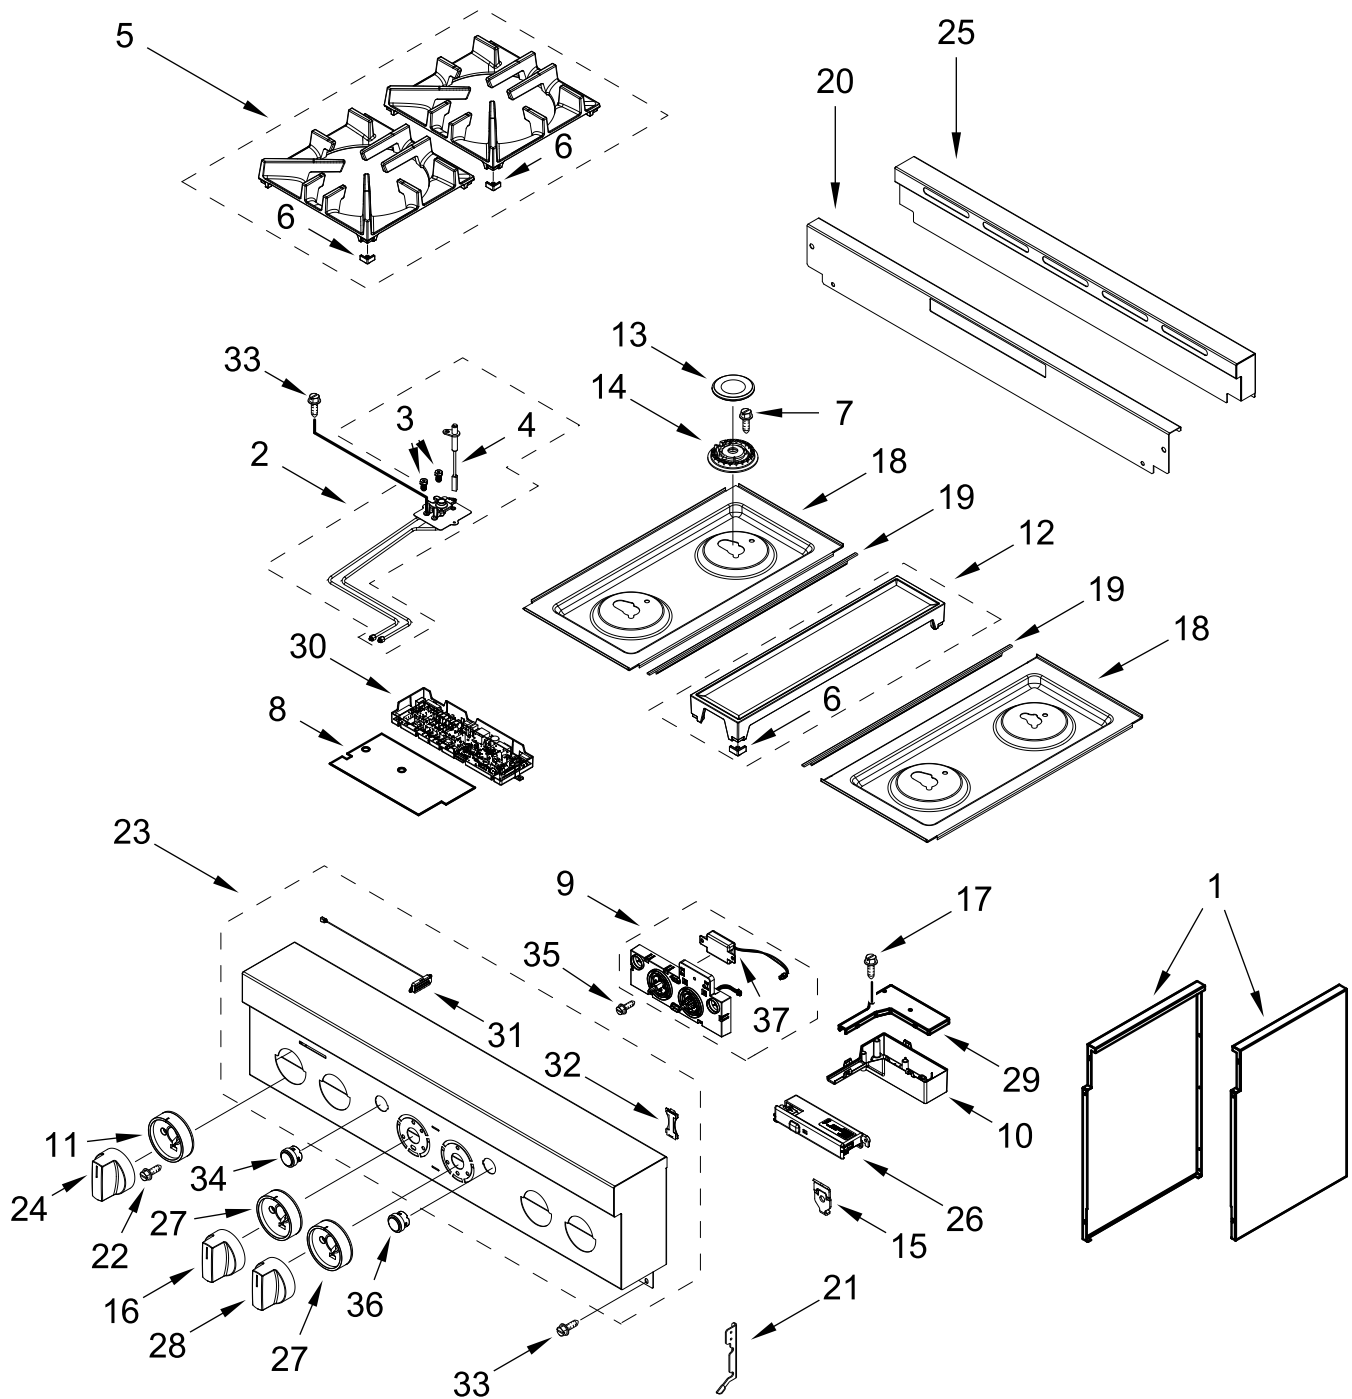

COOKTOP, BURNER, AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5		Assembly, Grate Black (Set of 2)	21	W10130760	Bracket, Moving Console (Left)
	W11106880	Panel, Cabinet Side (Right)	6	W11042504	Bumper, Grate		W10130759	Bracket, Moving Console (Right)
2	W10892793	Assembly, Orifice Holder (Left Front)	7	W11323260	Screw	22	W11328357	Screw
	W10892494	Assembly, Orifice Holder (Left Rear)	8	W11281269	Barrier, Appliance Manager	23	W10878251	Panel, Console Knob, Burner (For 4 Cooktop Burners)
	W10892475	Assembly, Orifice Holder (Right Front)	9	W11436328	Interface, User	24		
	W10892730	Assembly, Orifice Holder (Right Rear)	10	W11205795	Cover, WIFI Outer Bezel, Cooktop (For 4 Cooktop Burners)		W11496088	Stainless
3	W10892422	Orifice, Main (17.4K) (Left Front)	11			25	W11477029	Trim, Island
	W10892418	Orifice, Main (15.4K) (Left Rear and Right Front)	12	W11090283	Brass	26	W11110768	Assembly, WIFI Module
	W10892440	Orifice, Main (7.2K) (Right Rear)	13	W11291175	Grate Filler Kit	27		Bezel, Oven (For 2 Oven Knobs)
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	14	W11121391	Black (Set of 4)		W10914998	Stainless
	W10892429	Orifice, Simmer (2.0K) (Right Rear)	15	W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)	28		Knob, Oven Temperature
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	16	W10892022	Spreader, Flame (Low) (Right Rear)		W11496091	Stainless
	W11238756	Igniter (Right Rear)	17	W11036559	Spring Clip, Range	29	W11205794	Cover, WIFI Inner
			18	W11496094	Knob, Oven Mode	30	W11543347	Manager, Appliance (Powermax)
			19	7101P624-60	Stainless	31	W11130078	Antenna, WIFI
			20	W10803515	Screw	32	W10896369	Assembly, Light Pipe
				W10804371	Panel, Cooktop	33	7101P426-60	Screw
					Black (Left)	34	W11090651	Button Assembly, Oven Light
					Black (Right)	35	3400814	Screw
					Trim, T-Strip	36	W11090650	Button Assembly, Oven Start
					Black	37	W10568405	Assembly, Speaker
					Insert, Island Trim			


CHASSIS PARTS

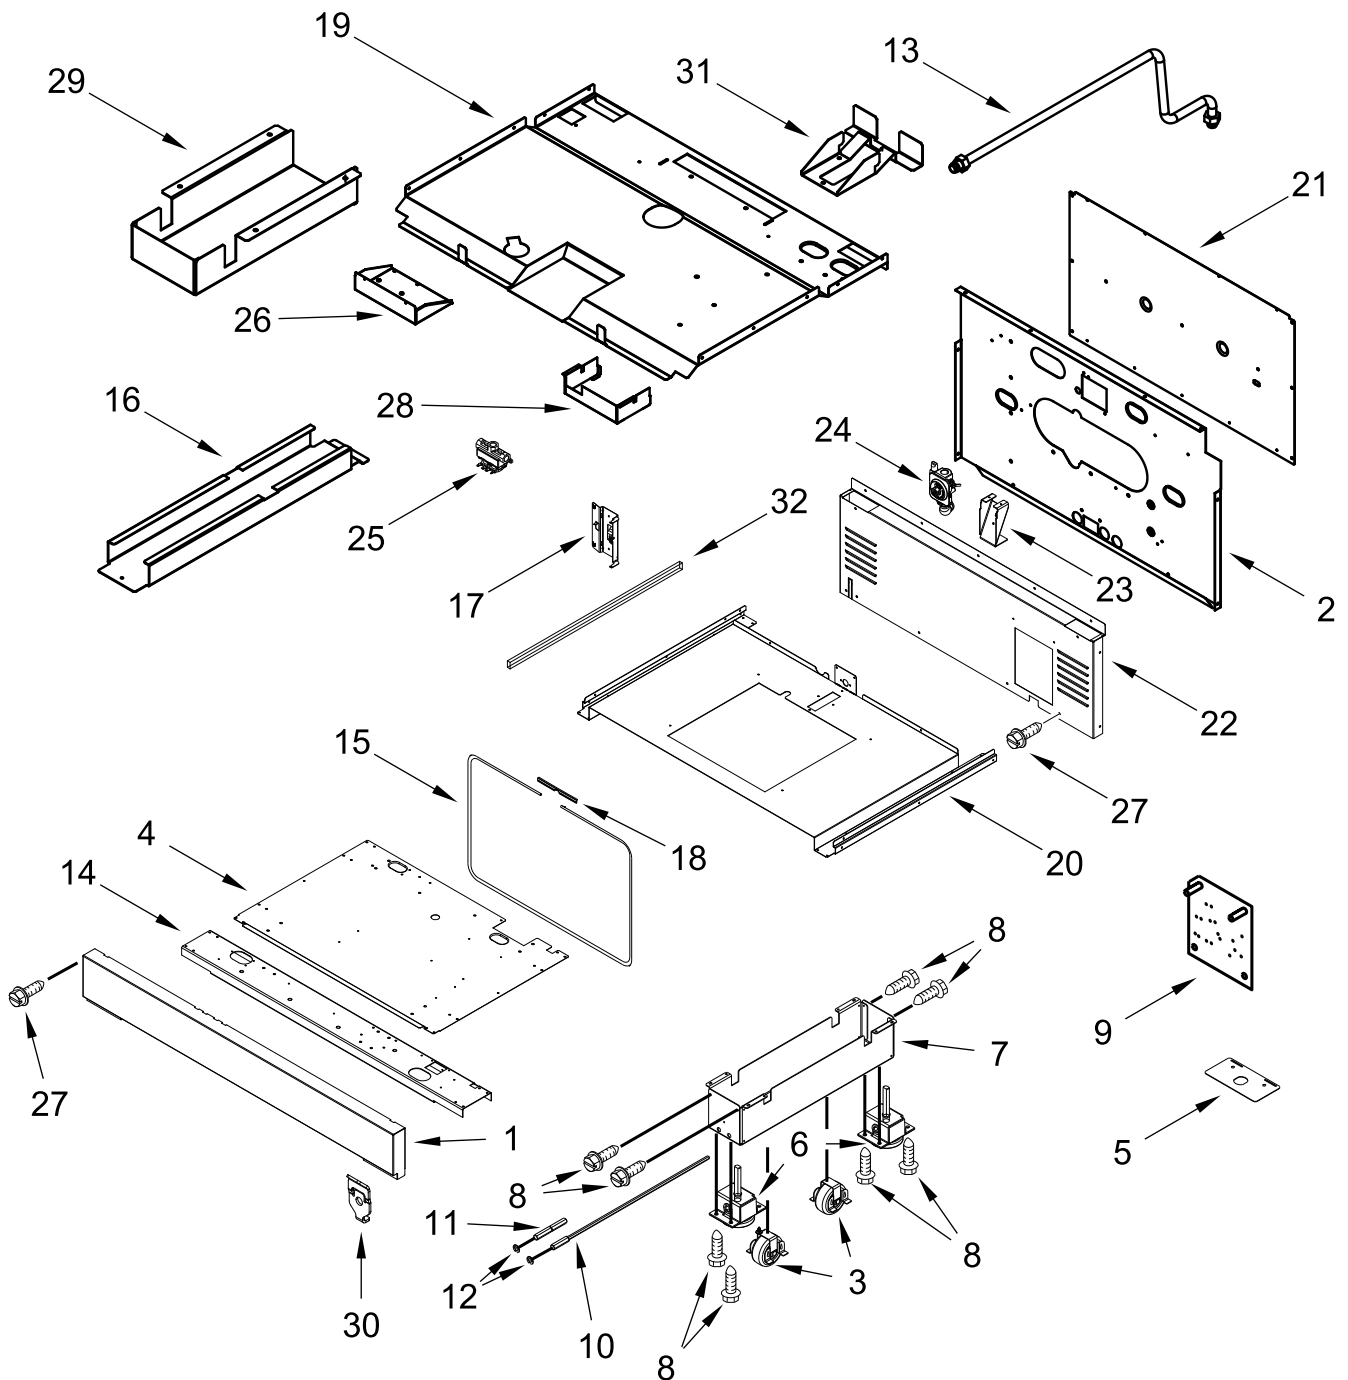

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883795	Kickplate	14	W11087491	Support, Channel	25	W10145680	Valve, Dual
2	W11324989	Back, Chassis	15	W11115328	Gasket, Oven (30")	26	W11106341	Drawer, Appliance Manager
3	W10138054	Assembly, Roller	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
4	W11109583	Duct, Bottom (30")	17	W10145362	Bracket-Board, DSI	28	W11369237	Cabinet, Appliance Manager
5	W10115855	Holder, Strain Relief	18	W11362015	Retainer, Gasket (9" Long)	29	W11368831	Channel, Wire
6	9760860	Leveler	19	W11324986	Top, Chassis	30	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	20	W11040802	Chassis, Bottom	31	W11190223	Bracket, Bake Alignment
8	4449743	Screw	21	W11103334	Panel, Back Top	32	W10919715	Gasket
9	W10511278	Module, Spark DSI	22	W11034134	Panel, Back Bottom			
10	W10115869	Shaft, Long	23	W11096823	Bracket, Pressure Regulator			
11	W10115793	Shaft, Short	24	W10896959	Regulator, Pressure			
12	489504	E-Ring						
13	W11181648	Tube, Pressure Regulator						


OVEN PARTS

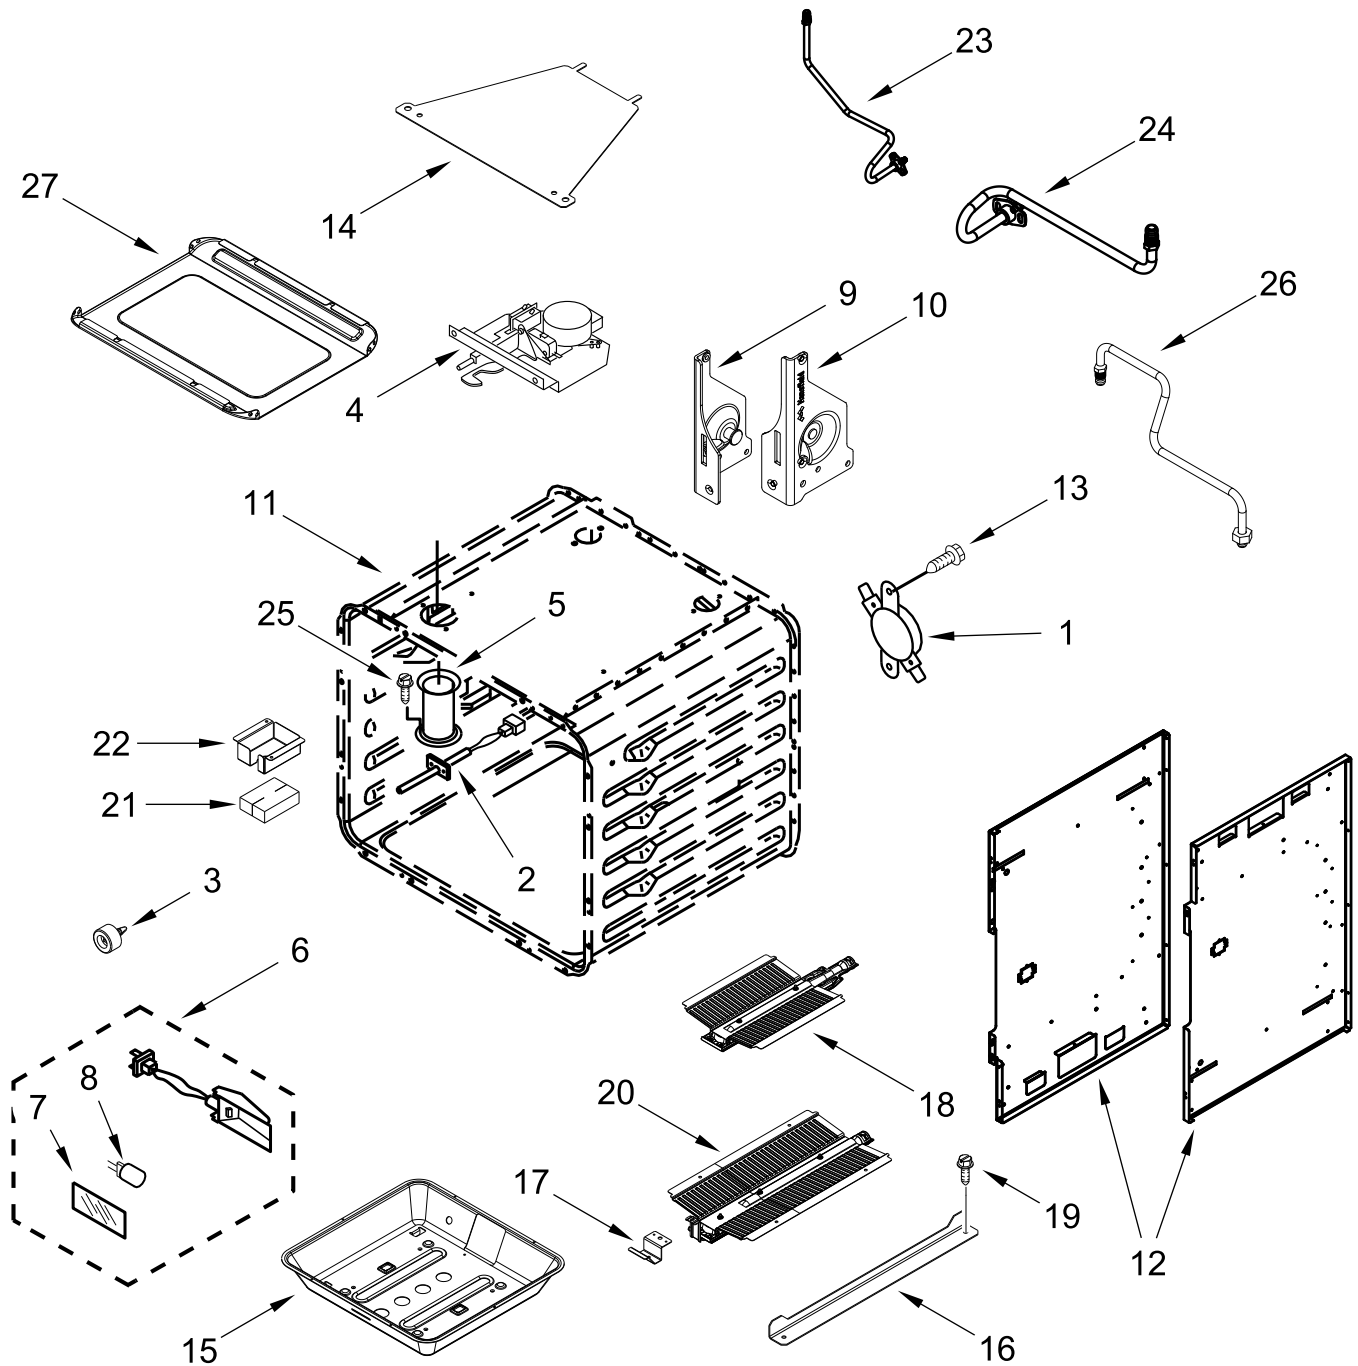

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10310985	Cover, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W11109238	Tube, Broil
3	W10351278	Bumper & Screw	13	7101P426-60	Screw	24	W11106980	Tube, Bake
4	W10830016	Latch, Motorized	14	W10160858	Cover, Latch	25	3196176	Screw
5	W10145743	Tube, Vent	15	W10145744	Support, Bake Pan	26	W11109167	Tube, Gas
6	W11223932	Assembly, Oven Light	16	W10317437	Bracket, Broil Standoff	27	W10496809	Pan, Oven Bottom
7	W10169756	Lens, Light	17	W10308040	Bracket, Bake Burner			FOLLOWING PARTS NOT ILLUSTRATED
8	W10169757	Bulb, Light	18	W10878504	Burner, Bake	W10282810		Insulation, Wrap, 30"
9	W11096294	Receiver, Hinge (Left)	19	7101P434-60	Screw	W10299350		Insulation, Back, 30"
10	W11096293	Receiver, Hinge (Right)	20	W10311335	Burner, Broil	W10299354		Insulation, Bottom
11		Liner, Oven (Not Serviced)	21	W10311009	Insulation, Broil Cover	3400968		Nut


VENTING PARTS

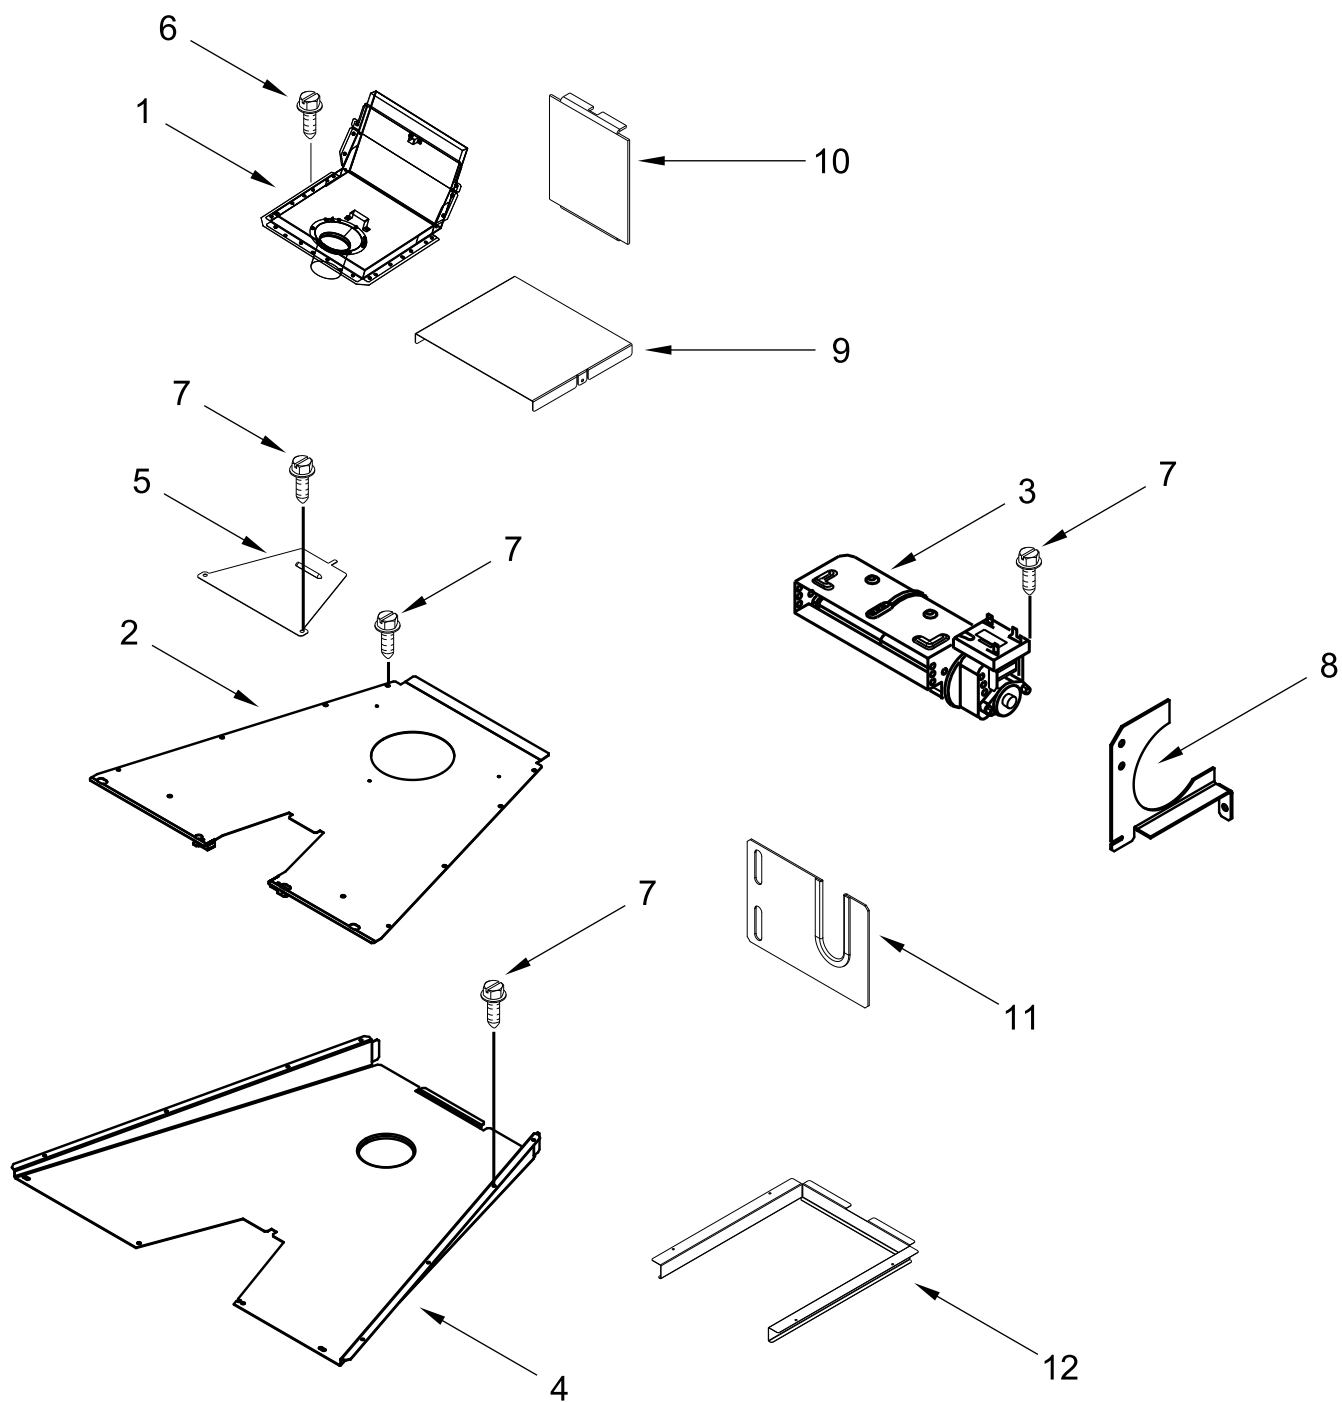

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	9	W10246086	Retainer, Insulation
3	W11200129	Blower	6	3400805	Screw (Zinc)	10	W10246087	Insulation, Chimney
			7	7101P426-60	Screw	11	W11106956	Cover, Channel
						12	W10145363	Duct, Primary Air (30")


OVEN DOOR PARTS

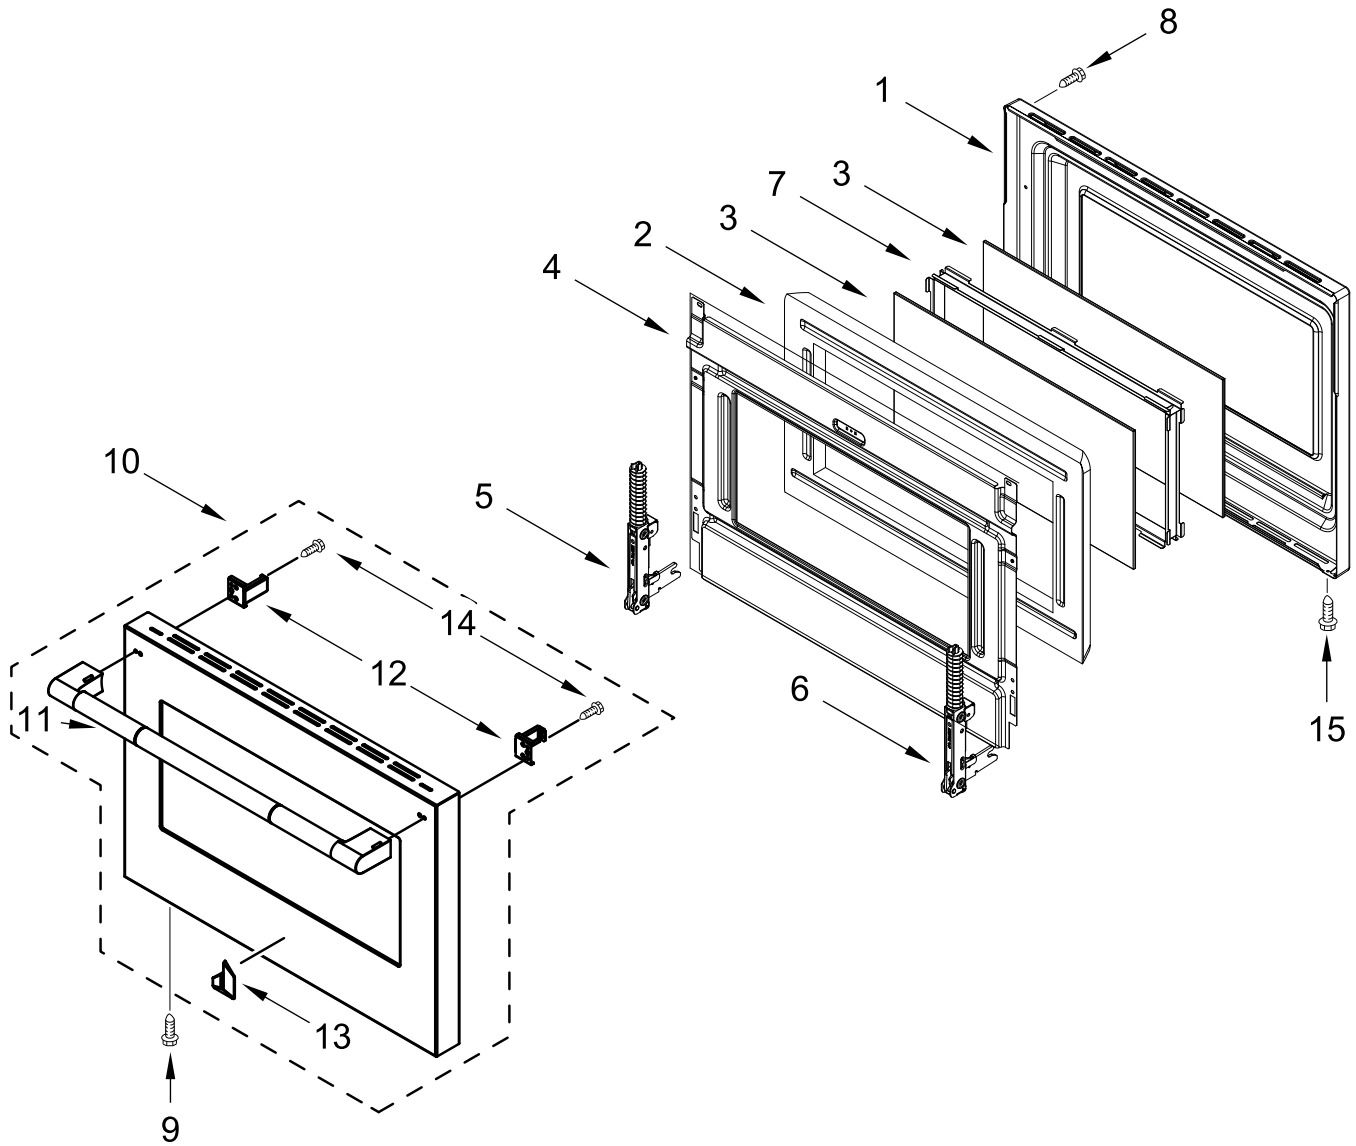

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W10799308	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			

INTERNAL OVEN PARTS

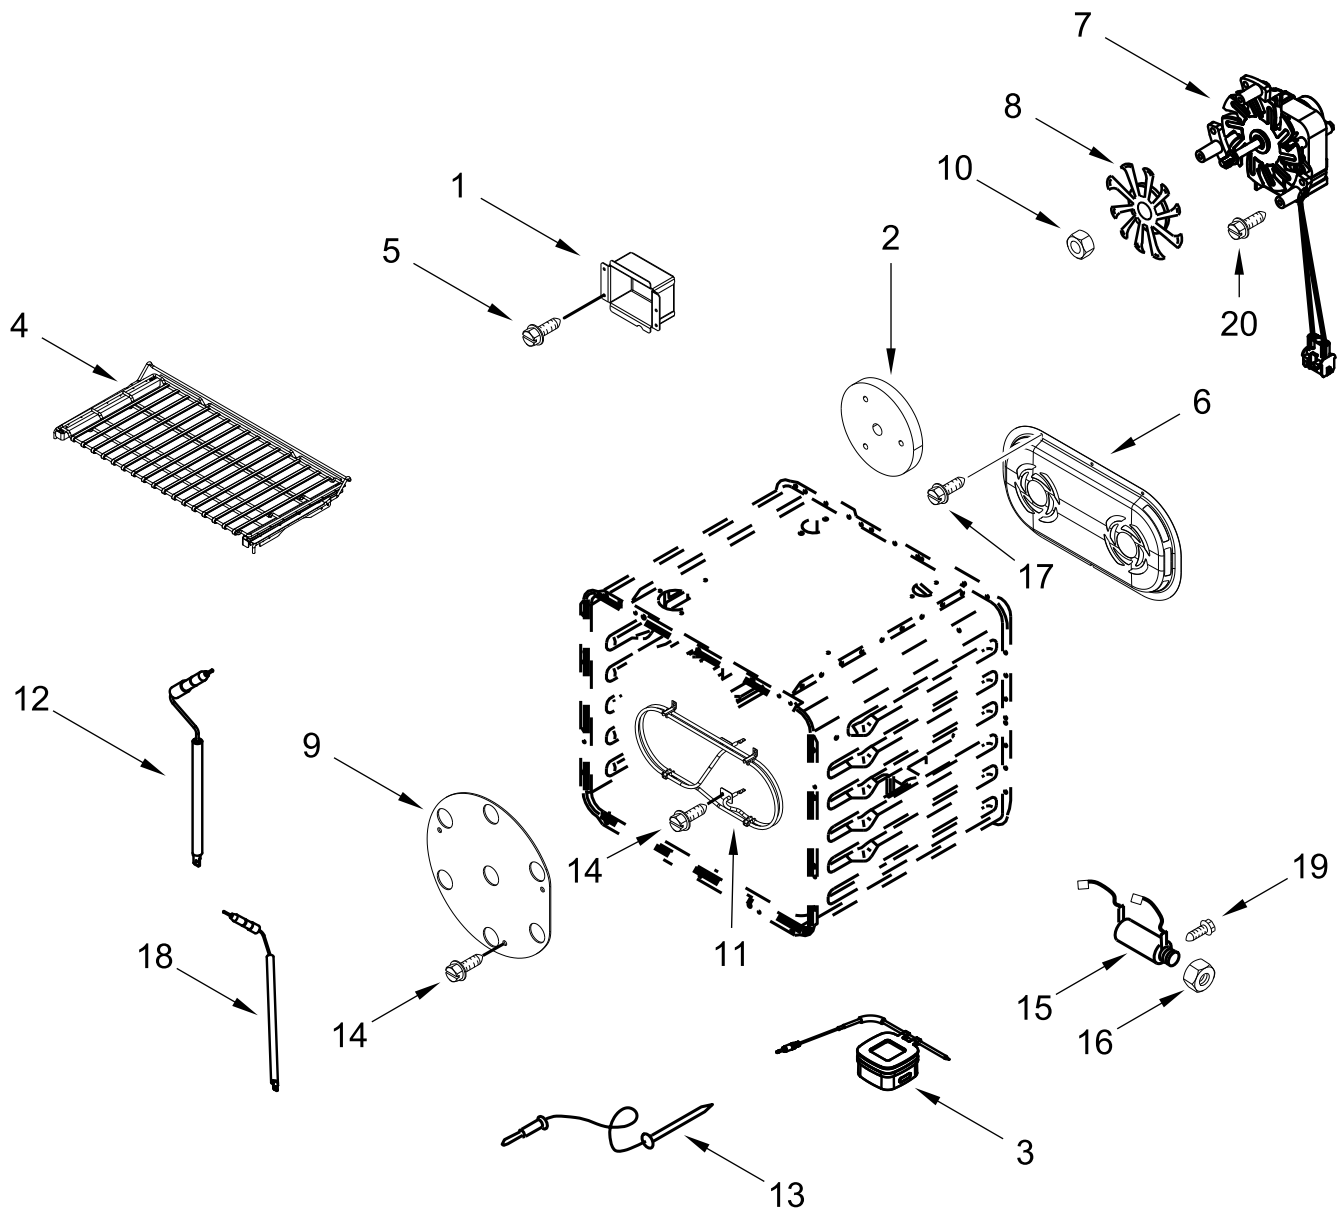

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491351	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10115773	Backguard 9"(22.9cm)
	W11035424	Wok, Round Bottom
		Backsplash
	W10285447	30" With Shelves
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11316873	Brass, Surface and Grill
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill