




GAS RANGE

MODELS:

JGRP436HL05 (Stainless)


BURNER BOX PARTS

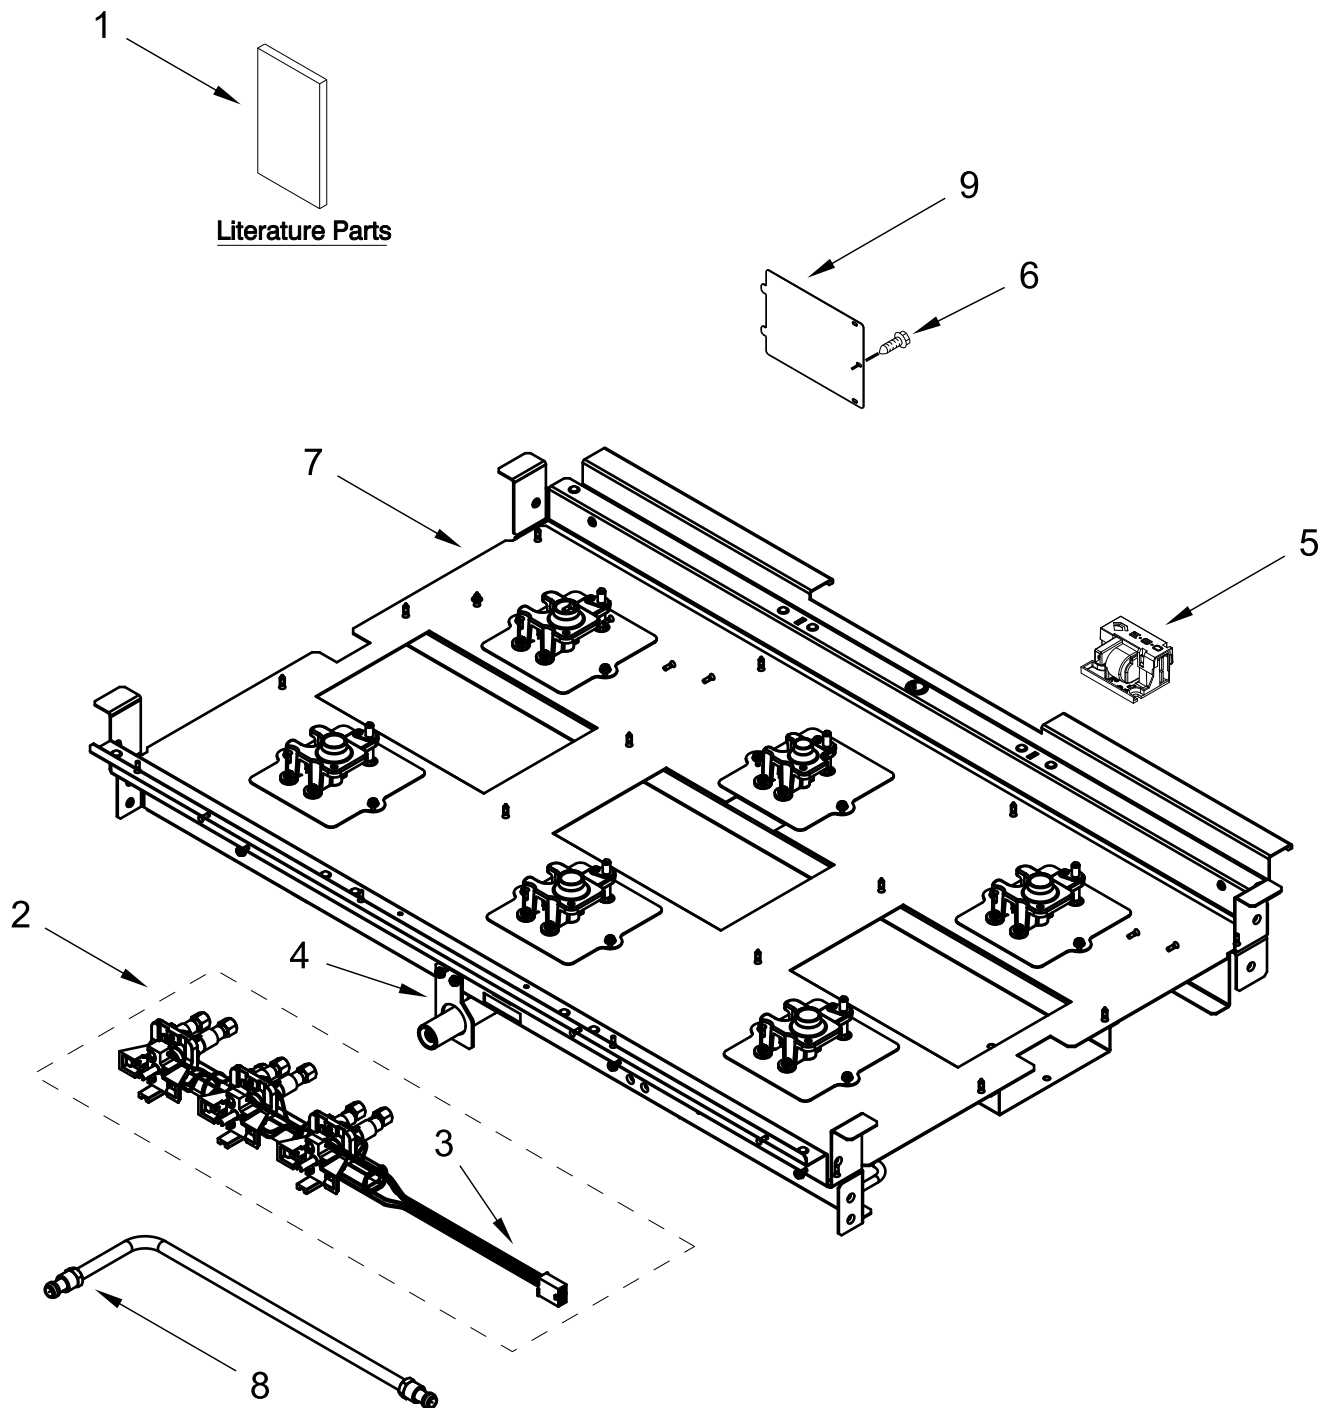

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106302	Switch, Harness	9	W10115843	Cover, Ignition
	W11508896	Use and Care Guide	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11508888	Installation Instructions	5	W11121317	Module, Spark		W11448067	Harness, Main (36")
	W11177312	Guide, Quick Start	6	7101P426-60	Screw		W11200332	Harness, Cooktop
	W11184746	Guide, Internet Connectivity	7		Box, Burner (Not Serviced)		W10780278	Harness, Door Lock
	W11575703	Diagram, Wiring (Cooktop)	8	W10892370	Tube, Manifold Supply (Left)		W11200325	Harness, Communication
	W11565476	Diagram, Wiring (Oven)		W10892417	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
	W11202275	Sheet, Tech					313438	Clip, Harness
2	W10893052	Assembly, Valve Manifold (Left Front, Left Rear, Center Rear)					W10624584	Cord, Power
	W10893059	Assembly, Valve Manifold (Center Front, Right Front, Right Rear)					4450800	Screw, Grounding
							W11311196	Ignitor Wire, Wire-Electrode Bake
							W11311197	Ignitor Wire, Wire-Electrode Broil
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11422176	Kit, LP Conversion


COOKTOP AND BURNER PARTS

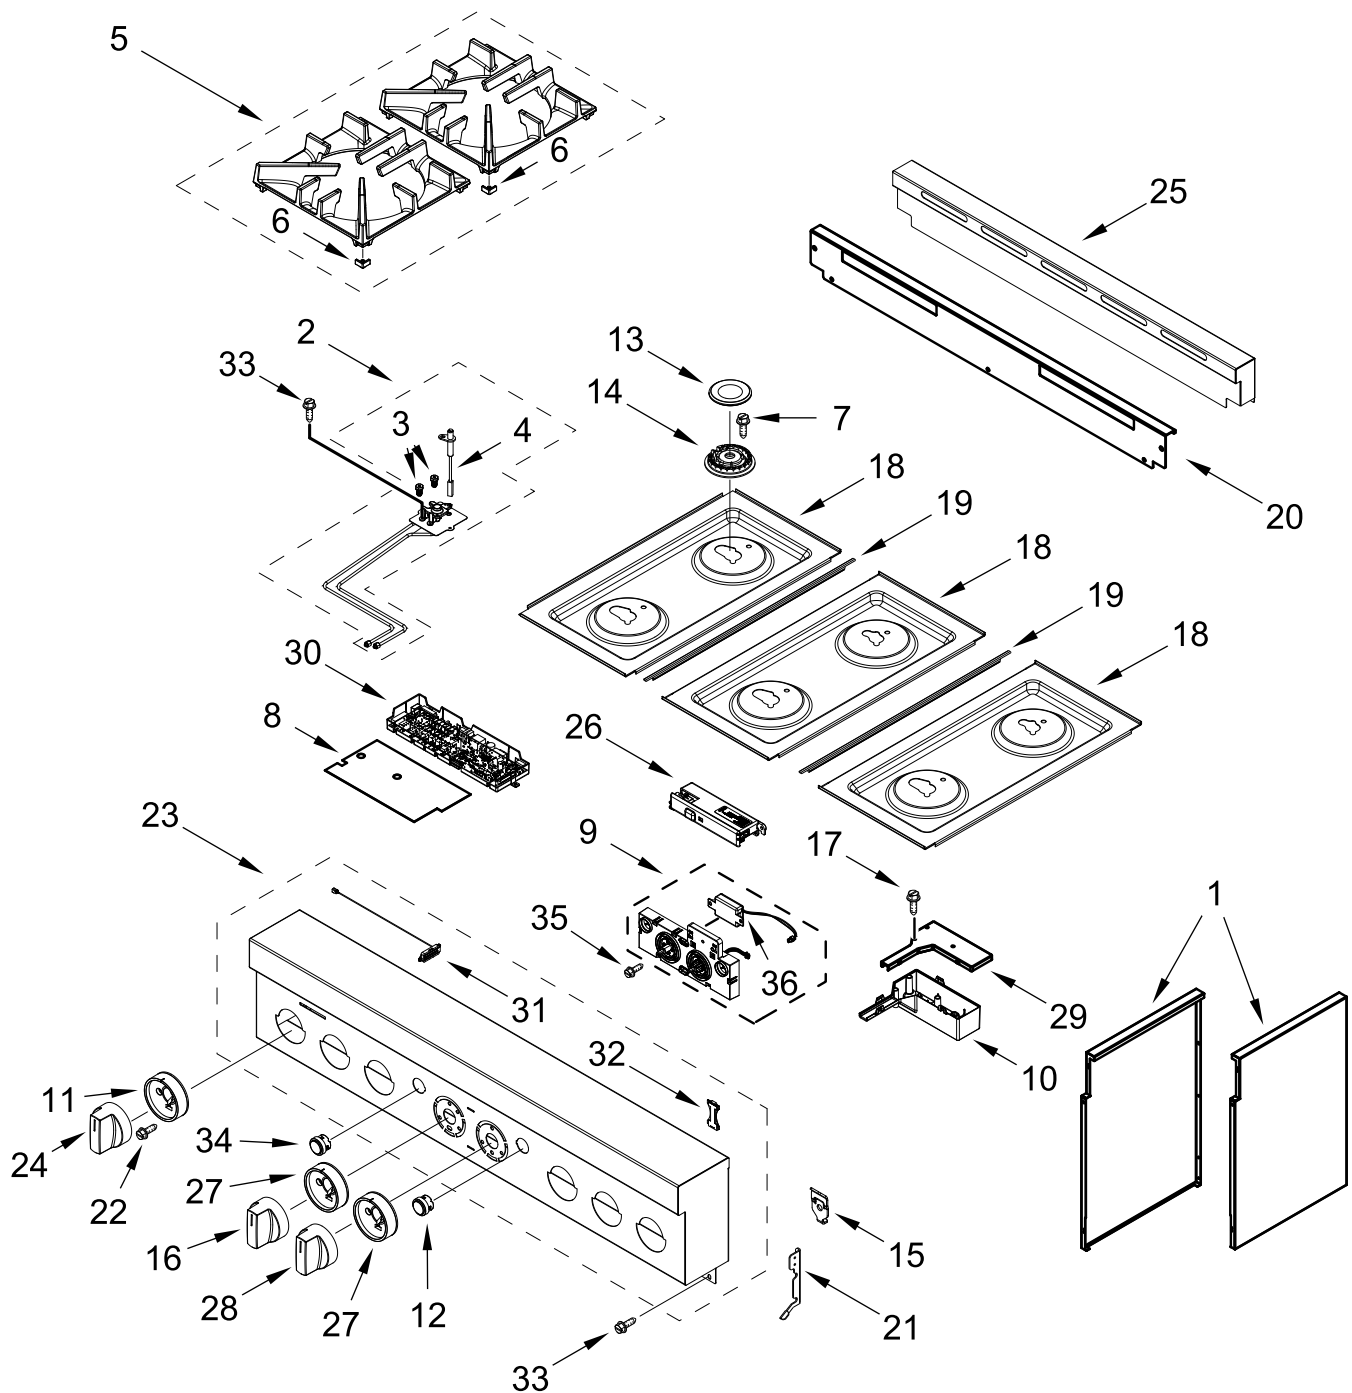

COOKTOP AND BURNER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	4	W11238757	Igniter (Left Front, Left Rear, Right Front, Right Rear)	18		Panel, Cooktop
	W11106880	Panel, Cabinet Side (Right)		W11238758	Igniter (Center Front)		W10803515	Black (Left)
2	W10892793	Assembly, Orifice Holder (Left Front)		W11238756	Igniter (Center Rear)		W10803519	Black (Center)
	W10892494	Assembly, Orifice Holder (Left Rear)	5		Assembly, Grate		W10804373	Black (Right)
	W10892501	Assembly, Orifice Holder (Center Front)	6	W11291176	Black (Set of 2)	19		Trim, T-Strip
	W10892810	Assembly, Orifice Holder (Center Rear)	7	W11042504	Bumper, Grate		W10271524	Black
	W10892731	Assembly, Orifice Holder (Right Front)	8	W11323260	Screw	20	W10323250	Insert, Island Trim
	W10892482	Assembly, Orifice Holder (Right Rear)	9	W11281269	Barrier, Appliance Manager	21	W10130760	Bracket, Moving Console (Left)
3	W10892422	Orifice, Main (17.4K) (Left Front and Right Front)	10	W11436327	Interface, User		W10130759	Bracket, Moving Console (Right)
	W10892418	Orifice, Main (15.4K) (Left Rear, Center Front, Right Rear)	11	W11205795	Cover, WIFI Outer	22	W11328357	Screw
	W10892440	Orifice, Main (7.2K) (Center Rear)	12		Bezel, Cooktop (For 6 Cooktop Burners)	23	W10878252	Panel, Console
	W10892435	Orifice, Simmer (2.6K) (All Except Center Rear)	13	W11090283	Brass	24		Knob, Burner (For 6 Cooktop Burners)
	W10892429	Orifice, Simmer (2.0K) (Center Rear)	14	W11090650	Button Assembly, Oven Start		W11496088	Stainless
			15	W11121392	Cap, Burner	25	W11476245	Trim, Island
			16	W10891987	Black (Set of 6)	26	W11110768	Assembly, WIFI Module
			17	W10892022	Spreader, Flame (High)	27		Bezel, Oven (For 2 Oven Knobs)
					(All Except Center Rear)		W10914998	Stainless
					Spreader, Flame (Low) (Center Rear)	28		Knob, Oven Temperature
			15	W11036559	Spring Clip, Range		W11496091	Stainless
			16	W11496094	Knob, Oven Mode	29	W11205794	Cover, WIFI Inner
			17	3196560	Screw	30	W11543348	Manager, Powermax Appliance
						31	W11130078	Antenna, WIFI
						32	W10896369	Assembly, Light Pipe
						33	7101P426-60	Screw
						34	W11090651	Button Assembly, Oven Light
						35	3400814	Screw
						36	W10568405	Assembly, Speaker


CHASSIS PARTS

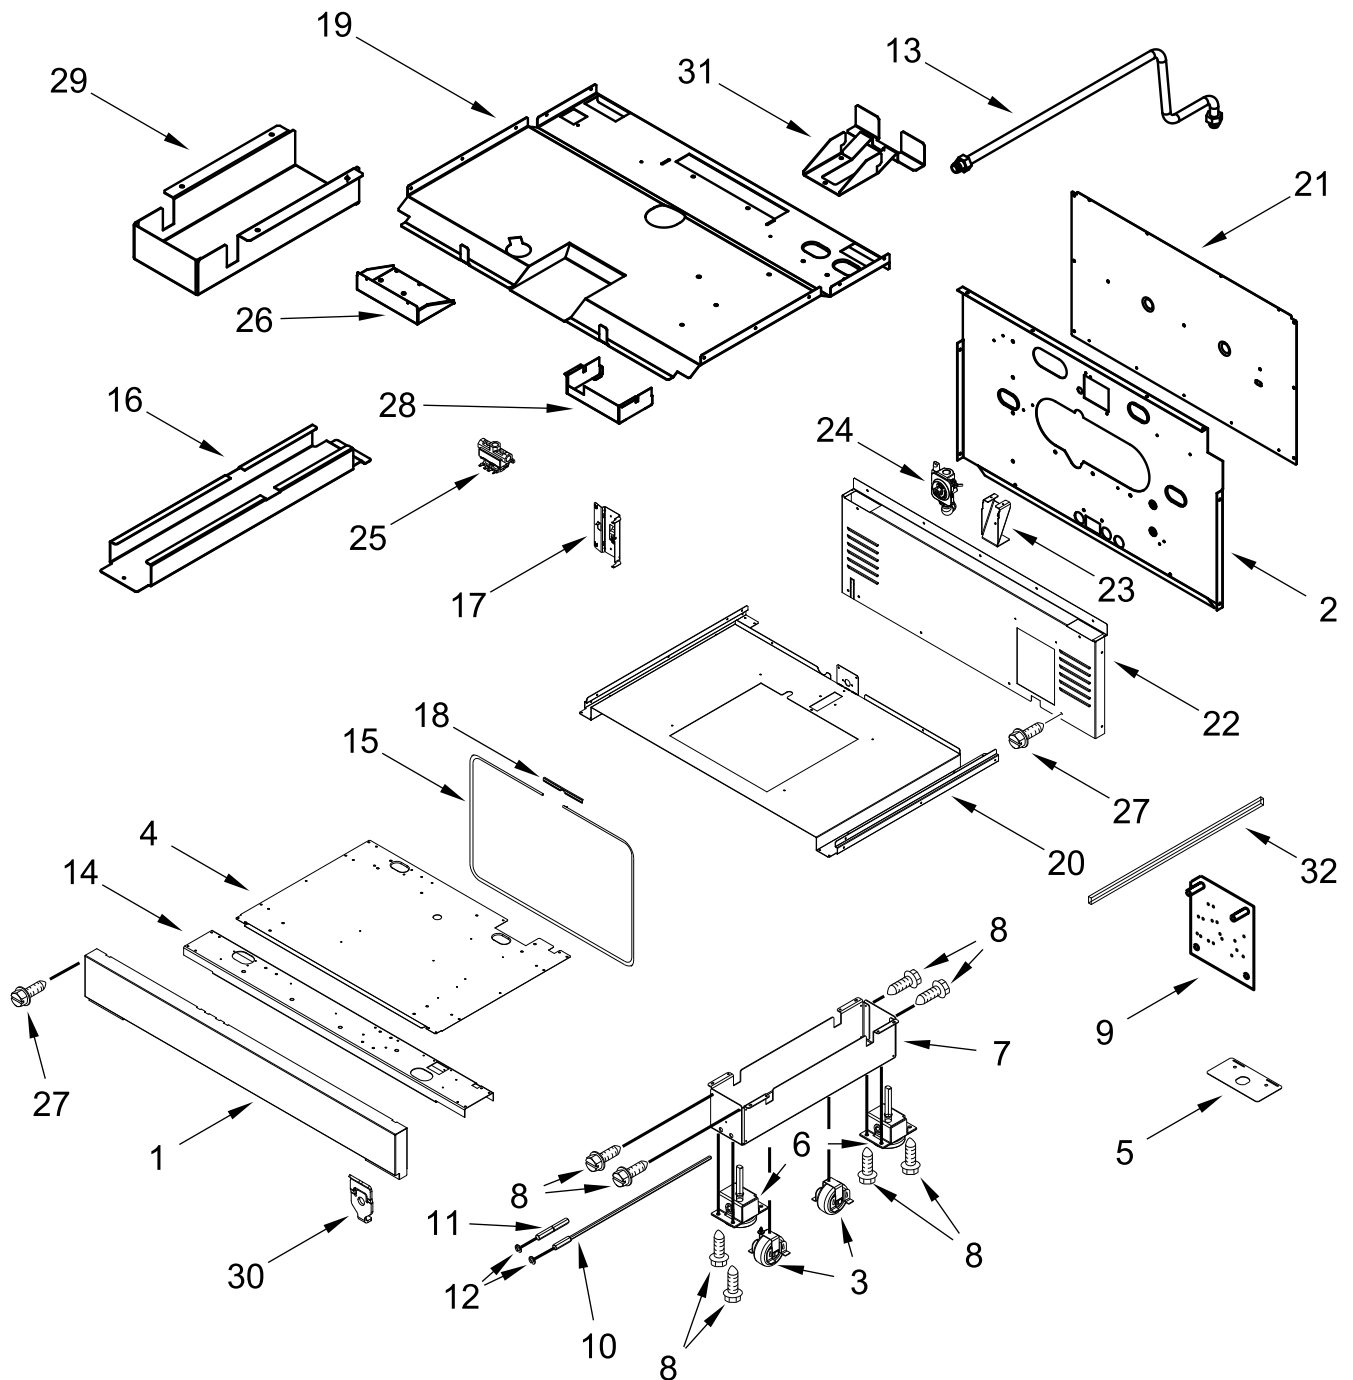

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	14	W11087493	Support, Channel	25	W10145680	Valve, Dual
2	W11324988	Back, Chassis	15	W11115330	Gasket, Oven (36")	26	W11106341	Drawer, Appliance Manager
3	W10138054	Assembly, Roller	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
4	W11095572	Duct, Bottom (36")	17	W10145362	Bracket-Board, DSI	28	W11369237	Cabinet, Appliance Manager
5	W10115855	Holder, Strain Relief	18	W11362015	Retainer, Gasket (9" Long)	29	W11368831	Channel, Wire
6	9760860	Leveler	19	W11324985	Top, Chassis	30	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	20	W11040801	Chassis, Bottom	31	W11190223	Bracket, Bake Alignment
8	4449743	Screw	21	W11103333	Panel, Back Top	32	W10919715	Gasket
9	W10511278	Module, Spark DSI	22	W11034133	Panel, Back Bottom			
10	W10115869	Shaft, Long	23	W11096823	Bracket, Pressure Regulator			
11	W10115793	Shaft, Short	24	W10896959	Regulator, Pressure			
12	489504	E-Ring						
13	W11181648	Tube, Pressure Regulator						

OVEN PARTS

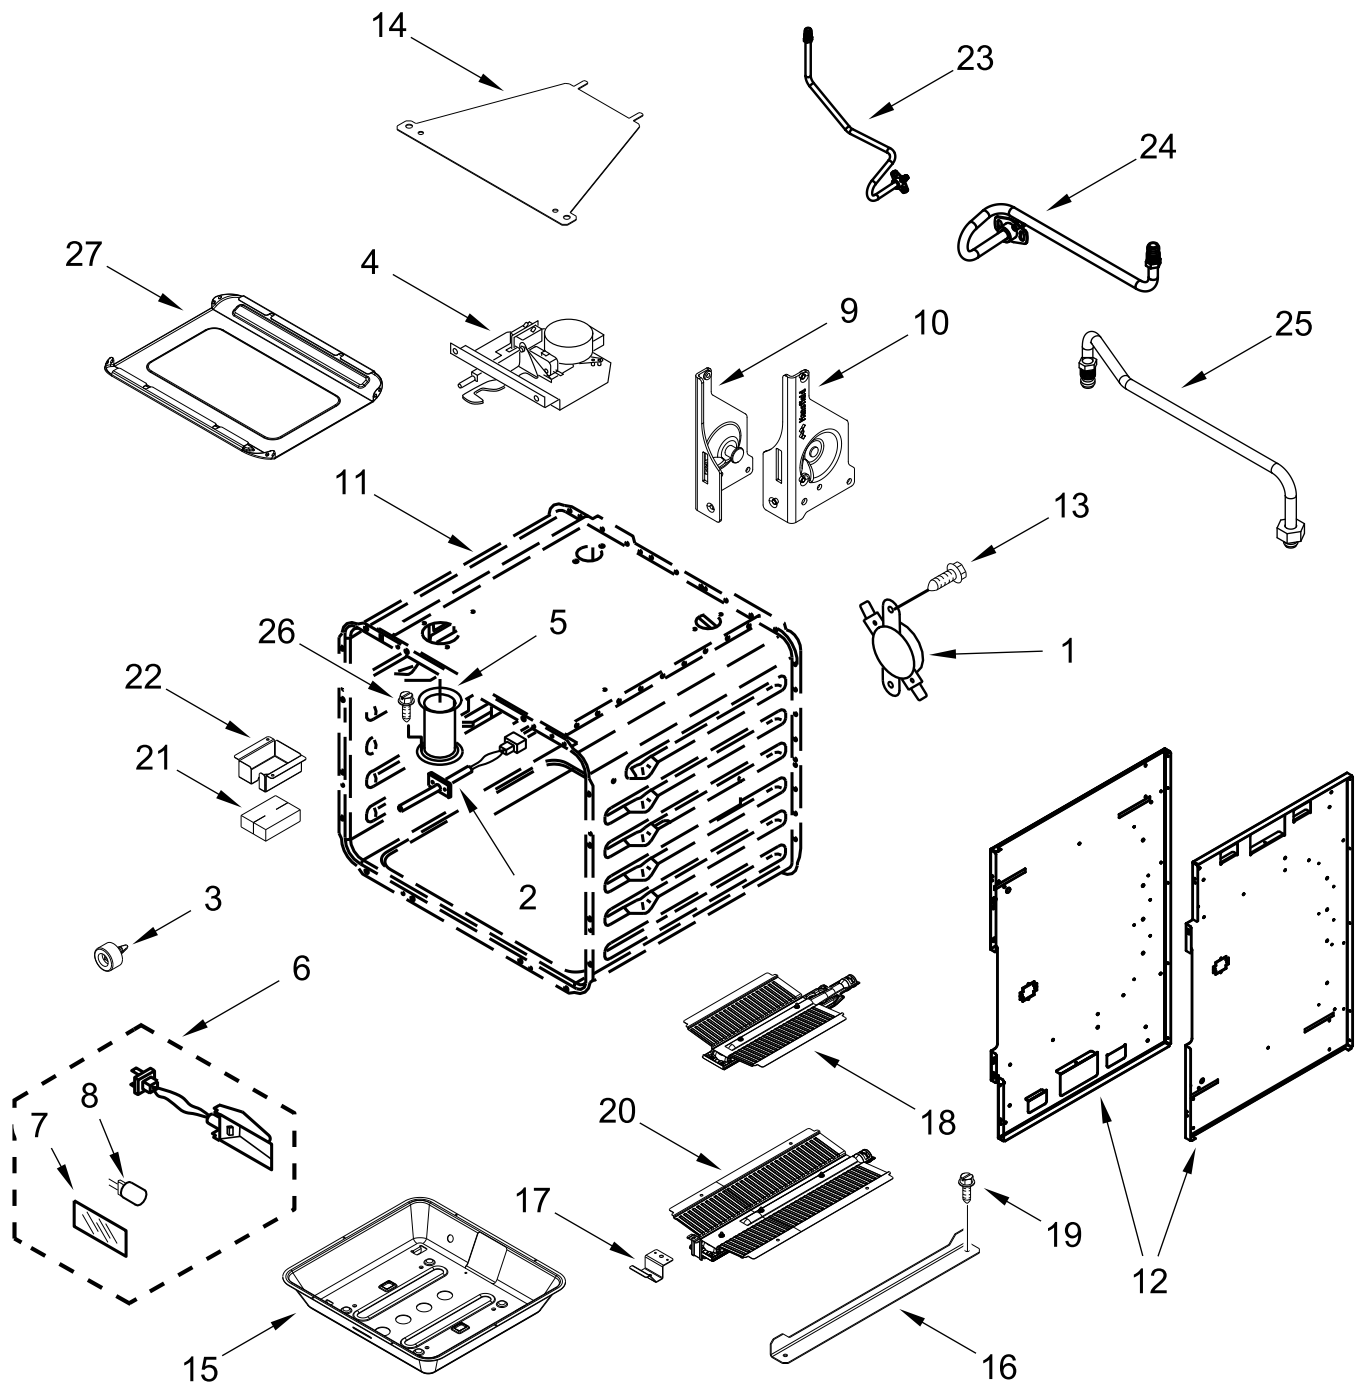

OVEN PARTS

Illus.
No.

Part No.

Description

1	4450249	Thermostat (TOD)
2	W10622170	Probe, Sensor
3	W10351278	Bumper & Screw
4	W10830016	Latch, Motorized
5	W10145743	Tube, Vent
6	W11223932	Assembly, Oven Light
7	W10169756	Lens, Light
8	W10169757	Bulb, Light
9	W11096294	Receiver, Hinge (Left)
10	W11096293	Receiver, Hinge (Right)
11		Liner, Oven (Not Serviced)
12	W11102297	Chassis, Side (Left)
	W11102296	Chassis, Side (Right)

Illus.
No.

Part No.

Description

13	7101P426-60	Screw
14	W10160858	Cover, Latch
15	W10145744	Support, Bake Pan
16	W10317437	Bracket, Broil Standoff
17	W10308040	Bracket, Bake Burner
18	W10878504	Burner, Bake
19	7101P434-60	Screw
20	W10311335	Burner, Broil
21	W10311009	Insulation, Broil Cover
22	W10310985	Cover, Broil
23	W11109238	Tube, Broil
24	W11106980	Tube, Bake
25	W11107279	Tube, Gas
26	3196176	Screw


Illus.
No.

Part No.

Description

27	W10496809	Pan, Oven Bottom
		FOLLOWING PARTS NOT ILLUSTRATED
	W10282811	Insulation, Wrap
	W10299351	Insulation, Back
	W10299356	Insulation, Bottom
	3400968	Nut


VENTING PARTS

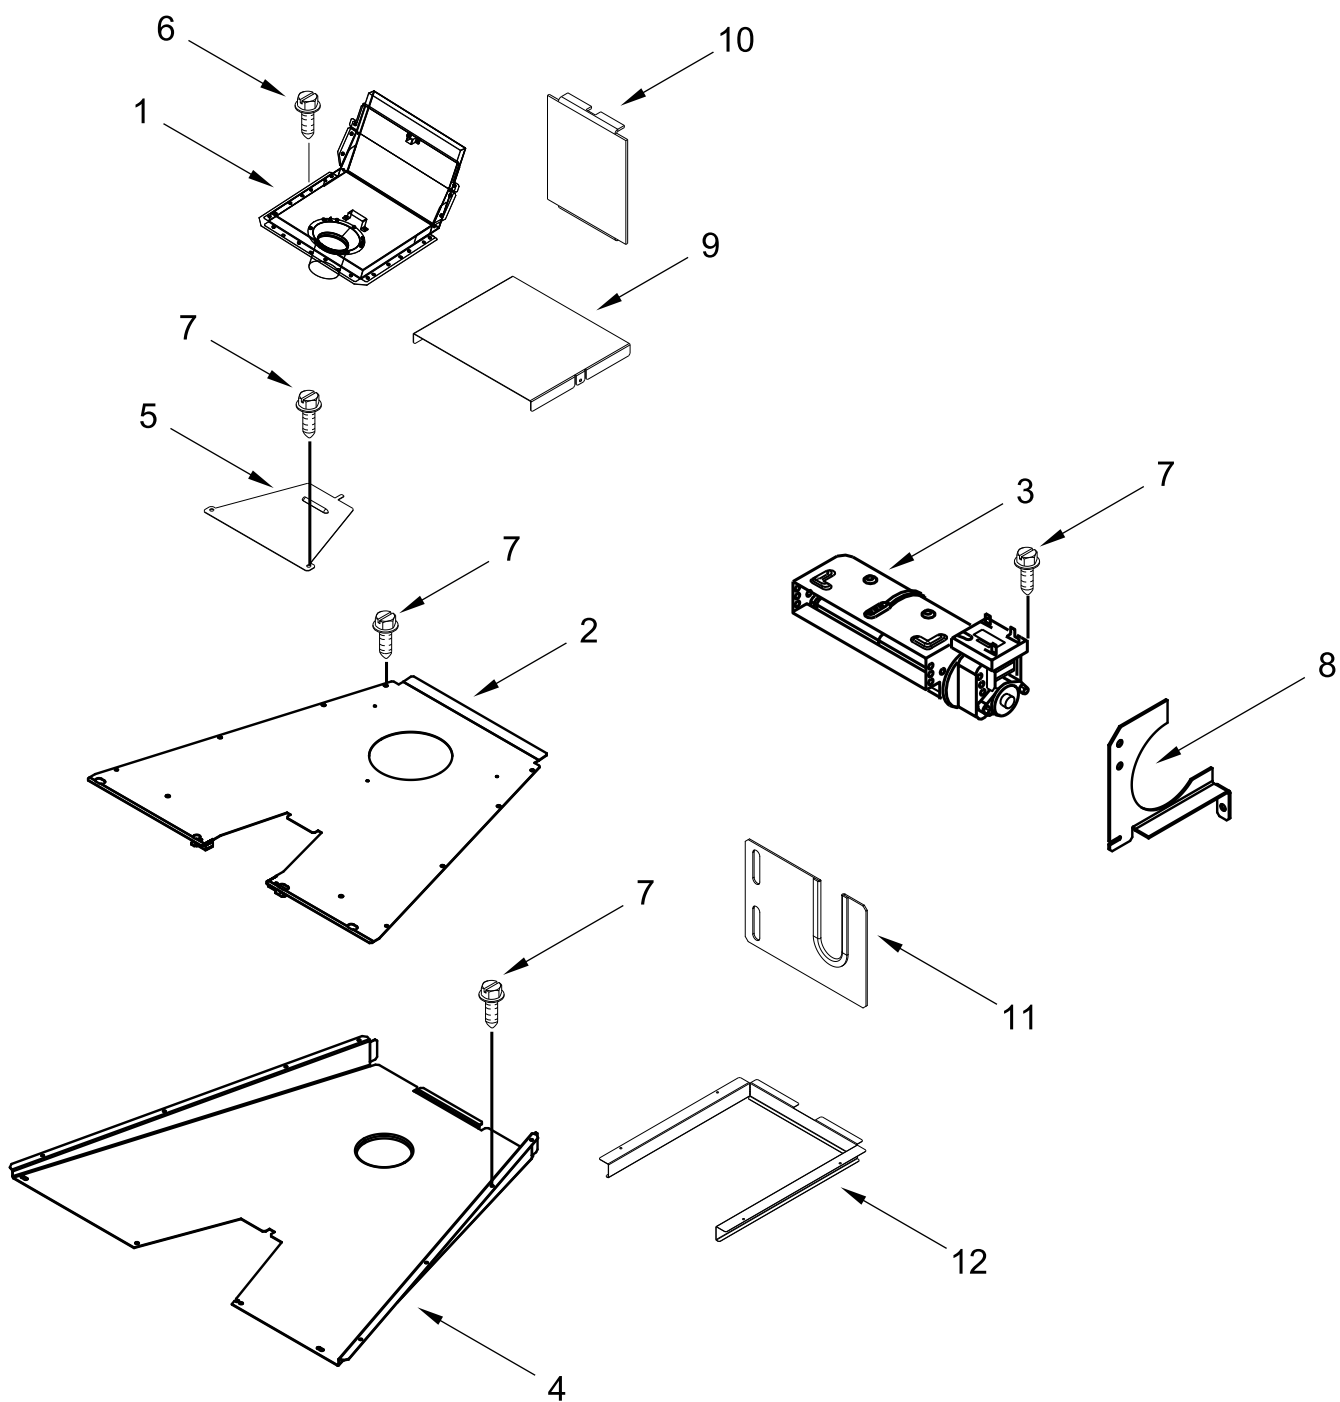

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	9	W10246086	Retainer, Insulation
3	W11200129	Blower	6	3400805	Screw (Zinc)	10	W10246087	Insulation, Chimney
			7	7101P426-60	Screw	11	W11106956	Cover, Channel
						12	W10145363	Duct, Primary Air (30")


OVEN DOOR PARTS

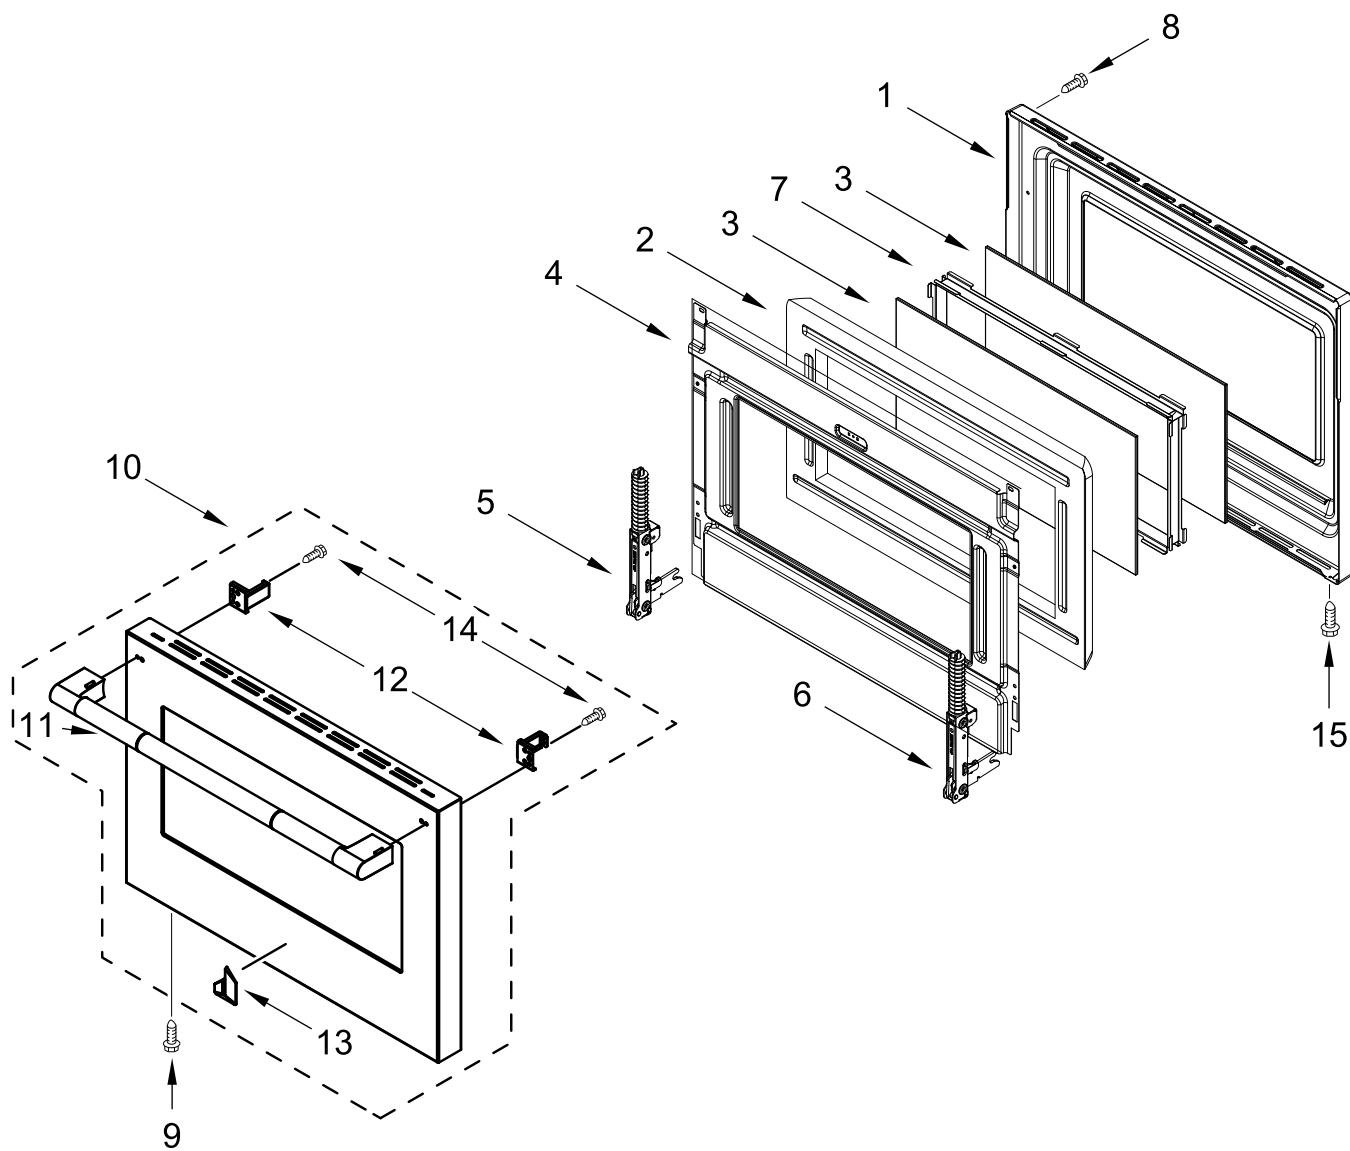

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10898280	Screw	13		Badge
2	W10884823	Insulation, Door	9	W10162096	Screw		W11238656	Stainless
3	W11036791	Glass, Inner	10	W10799310	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
4	W11194820	Retainer, Glass				15	W10607120	Screw
5	W11096978	Hinge, Door (Left)	11	W11102828	Handle, Door			
6	W11096977	Hinge, Door (Right)	12	W11197830	Bracket, Handle			
7	W11194814	Frame, Glass						

INTERNAL OVEN PARTS

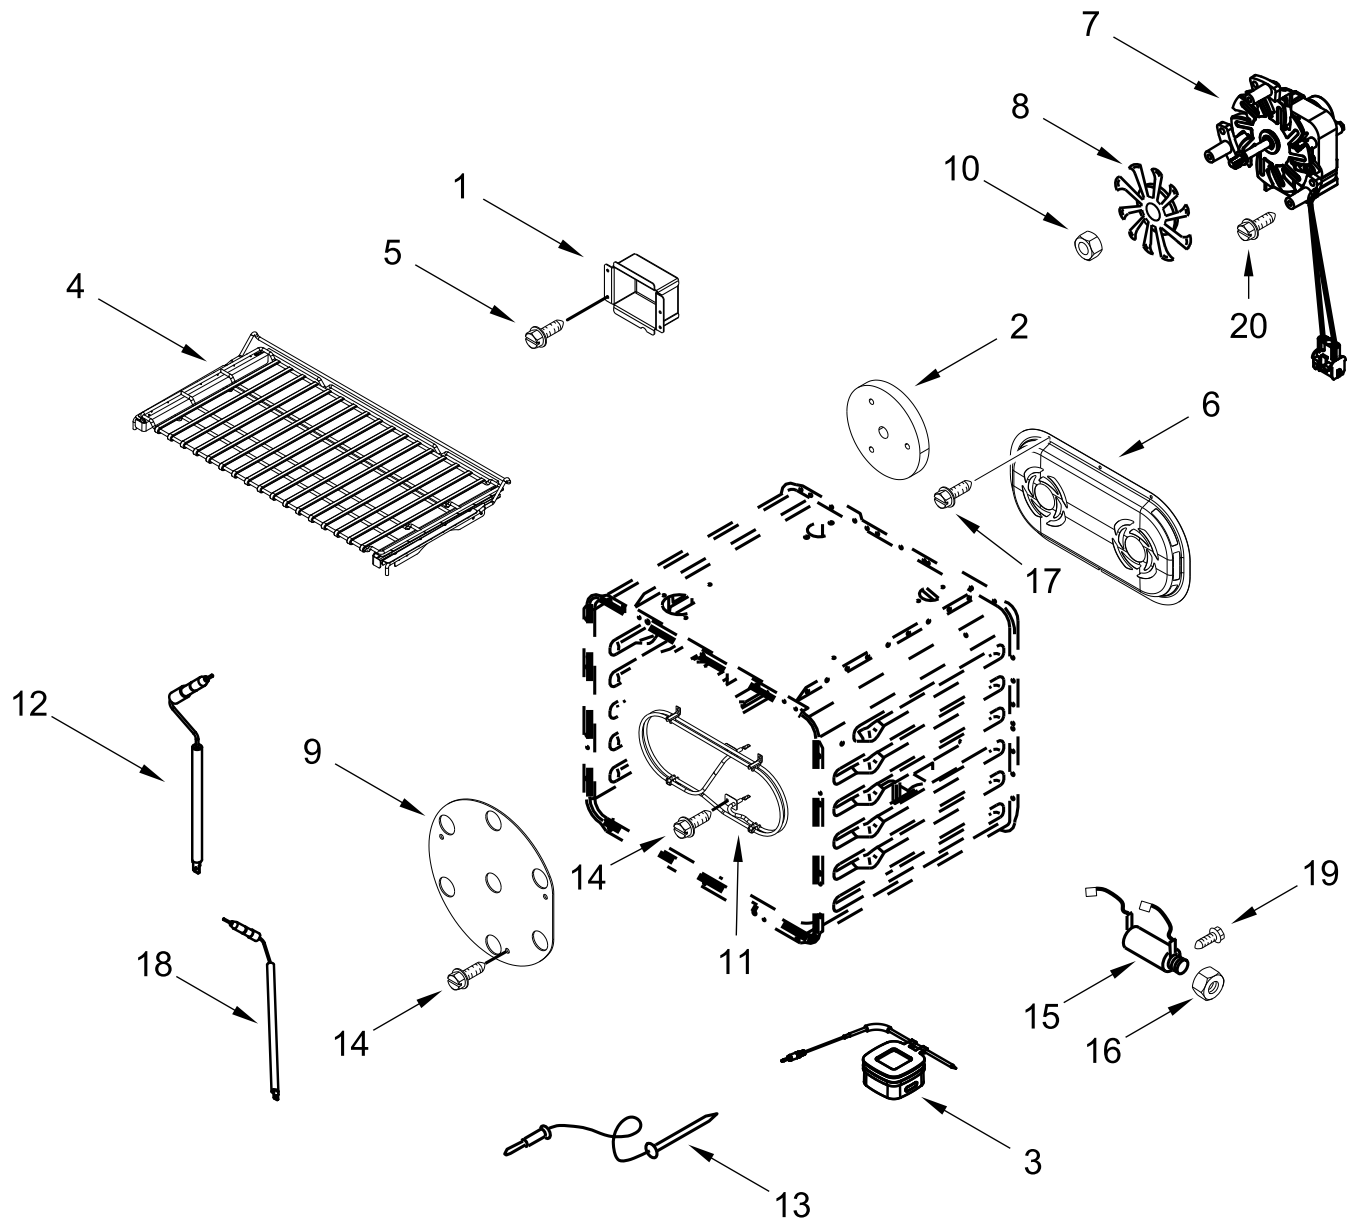

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491350	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W11035424	Wok, Round Bottom
	31464	Cleaner, Cooktop
	W10115776	Backguard (36") Backsplash
	W10285448	36" With Shelf Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11316873	Brass, Surface and Gril
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill