

# INSTALLATION


## Countertop Installation

Before installing, remove all packaging materials and examine the oven for any damage, such as dents or a broken door. Do not install if the oven is damaged.

For the cabinet, remove any protective film on the microwave oven's exterior. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

## Installation Instructions:

1. Place the oven on a flat and level surface that allows enough clearance for air intake and/or outlet vents.
2. Ensure a minimum clearance of 3 inches (7.5cm) between the oven and any adjacent walls. One side must be open at least 12 inches (30cm) above the countertop to ensure proper ventilation.
3. Do not block the intake and/or outlet openings as this can damage the oven.
4. To prevent interference with household electronics, position the oven as far away from radios and TVs as possible.
5. Connect the oven to a standard household outlet, ensuring that the voltage and frequency match those listed on the oven's rating label.

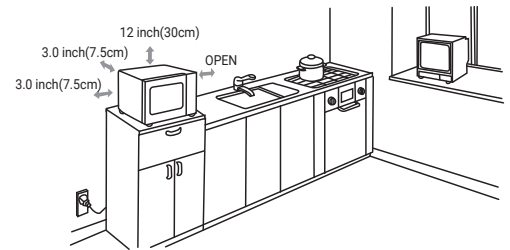

## Warning:


Do not install the microwave oven over a range cooktop or other heat-producing appliances. Installing over a heat source could damage the oven and void the warranty.

Be cautious during use, as the accessible surface may be hot.



# OPERATION

## Control Panel and Features

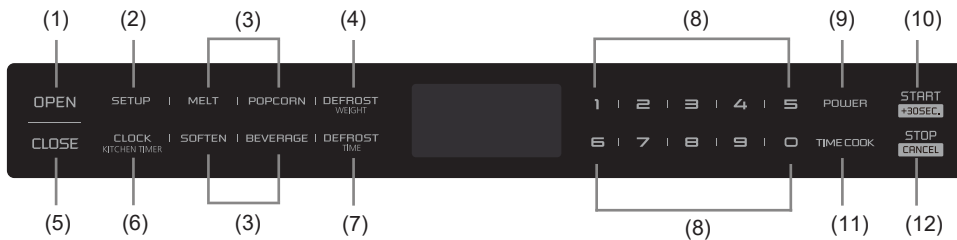

- |                         |                     |
|-------------------------|---------------------|
| (1) Open                | (7) Time Defrost    |
| (2) Setup               | (8) Number keys     |
| (3) Auto Menu           | (9) Power           |
| (4) Weight Defrost      | (10) Start/ +30sec. |
| (5) Close               | (11) Time Cook      |
| (6) Clock/Kitchen timer | (12) Stop/Cancel    |

## Power On

- When the microwave oven is plugged into an outlet, buzzer sounds once. Screen displays "WELCOME". Then the oven turns into waiting state. The screen displays "0:00".
- In waiting state, the screen will display the current time if the clock has been set. Otherwise, "0:00" will display.
- Press "OPEN" button to open the drawer, and screen displays "OPEN". The screen will display "PLEASE CLOSE" when the drawer is fully opened.
- Press "CLOSE" button to close the drawer, and the screen displays "CLOSE". The screen will display the current time or "0:00" when the drawer is fully closed.
- If there are mistakes to open or close the drawer, buzzer will sound five times, and the screen will display "OPEN OR CLOSE".

## Clock Setting

- Press "CLOCK/KITCHEN TIMER" button once. The first hour figure will flash and other "0" will light.
- Press the number buttons to enter the correct time. The input time should be between 01:00-12:59.
- Press "CLOCK/KITCHEN TIMER" to finish the setting. "\*" will flash.
- Note: In the process of clock setting, if the "STOP/CANCEL" button is pressed or if there is no operation within 1 minute, the oven will go back to former setting automatically.

## Kitchen Timer

- Press "CLOCK/KITCHEN TIMER" button twice, Screen will display 00:00. "FUNCTION" will light.
- Press the number buttons to enter the time. The maximum cooking time is 90 minutes (99

seconds).

- Press "START/+30SEC." to confirm the setting. The time begins to count down.
- When the kitchen time arrives, buzzer will ring 5 times. The oven turns into waiting state. Screen will display the current time if the clock has been set. Otherwise, Screen will display "0:00".

Note: The kitchen timer is differ from 12-hour system. Kitchen Timer is a timer.

- In the process of Kitchen Timer operation, any cooking programme cannot be operated.
- "STOP/CANCEL" can be pressed to cancel the Kitchen Timer.

## Microwave Cooking Function

11 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL90	PL80	PL70	PL60	PL50	PL40	PL30	PL20	PL10	PL00

(1) Press "TIME COOK" button, Screen will display "00:00". "FUNCTION" will light. Press number buttons to input the cooking time. The maximum cooking time is 99 minutes 99 seconds.

(2) Press "POWER" button to set the power. The default power level is "PL100". Press number buttons to select different power levels.

(3) Press "START/+30SEC." to start cooking. Buzzer sounds once. The cooking time begins to count down. When cooking finished, buzzer sounds five times and "FINISH" displays.

Note: In the process of setting, if the "STOP/CANCEL" button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

## Fast Cooking

(1) In waiting state, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing "START/+30SEC". Each press on the same button will increase cooking time by 30 seconds.

(2) During microwave and defrost by time, "START/+30SEC." can be pressed to increase cooking time. Each press will increase 30 seconds.

Note: "START/+30SEC." cannot be pressed to increase cooking time for defrost by weight and Auto menu cooking.

## Weight Defrost Function

(1) Press "DEFROST WEIGHT" button. Screen displays "WEIGHT DEFROST". And "FUNCTION" will light.

(2) Press number buttons to input the weight to be defrosted.

The input weight should be between 0.1-6.0 lbs.

(3) Press "START/+30SEC." to start defrosting. Buzzer sounds once. The defrosting time begins to count down. When cooking finished, buzzer sounds five times and "FINISH" displays.

## Menu Options for Auto Menu-Soften

Menu	Display	Weight
Butter/Margarine	BUTTER	1(STICK)
		2(STICKS)
		3(STICKS)
Chocolate	CHOCOLA	4
		8
Cheese	CHEESE	8
		16
Marshmallows	MARSHMA	5
		10

### 11. Auto Menu-Soften

- (1) Press "SOFTEN" button. Screen displays "BUTTER". "AUTO MENU" indicator will light.
- (2) Continue to press "SOFTEN" button, "BUTTER", "ICE-CRE" or "CHEESE" will display in order.
- (3) Press "START/+30SEC." to confirm the selection.
- (4) Press "SOFTEN" button to select the weight. "OZ" will light except butter menu.
- (5) Press "START/+30SEC." to start cooking. Buzzer sounds once. "OZ" will go out. The cooking time begins to count down. When cooking finished, buzzer sounds five times and "FINISH" displays.

Menu	Display	Weight
Butter	BUTTER	1(STICK)
		2(STICKS)
		3(STICKS)
Ice cream/Frozen juice	ICE-CRE	8
		16
		32
Cream Cheese	CHEESE	8

### 12. Buzzer On/Off

- (1) Press "SETUP" button. Screen displays "BUZ OFF".
- (2) Press "START/+30SEC." button. The oven will turn to waiting state. Buzzer is turned off. No beep will sound.
- (3) Press "SETUP" button. Screen displays "BUZ ON".
- (4) Press "START/+30SEC." button. The oven will turn to waiting state. Buzzer is turned on. Buzzer will sound normally.

### 13. LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press "STOP/CANCEL" for 3 seconds, the oven will enter into the children-lock state. Screen will display the current time if the clock has been set. Otherwise, "00:00" will display.

Lock quitting: In locked state, press "STOP/CANCEL" for 3 seconds to release the lock.

#### 14. INQUIRING FUNCTION

(1) In cooking state, press "CLOCK/KITCHEN TIMER" button to check the clock. The current time will display for 3 seconds.

(2) In the microwave cooking state, press "POWER" button to inquire the microwave power. The current microwave power will display for 3 seconds.

#### 15. OTHER SPECIFICATIONS

(1) The buzzer sounds once by efficient press, inefficient press will be no response. (2) In cooking state, "OPEN" cannot be pressed to open the drawer unless "STOP/CANCEL" button is pressed to pause the cooking. Press "CLOSE" button to close the drawer. Then "START/+30SEC." button must be pressed to continue cooking.

(3) If the cooking programme has been set, "START/+30SEC." is not pressed in 1 minute, The current time will be displayed. The setting will be cancelled.

(4) If the oven door is open, the lamp will light until the oven is powered off.

# TROUBLESHOOTING

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
<b>Oven will not start</b>	Electrical cord for oven is not plugged in.	Plug into the outlet.
	Door is open.	Close the door and try again.
	Wrong operation is set.	Check instructions.
<b>Arcing or sparking</b>	Materials to be avoided in microwave oven were used.	Use microwave-safe cookware only.
	The oven is operated when empty.	Do not operate with oven empty.
	Spilled food remains in the cavity.	Clean cavity with wet towel.
<b>Unevenly cooked foods</b>	Materials to be avoided in microwave oven were used.	Use microwave-safe cookware only.
	Food is not defrosted completely.	Completely defrost food.
	Cooking time, power level is not suitable.	Use correct cooking time, power level.
	Food is not turned or stirred.	Turn or stir food.
<b>Overcooked foods</b>	Cooking time, power level is not suitable.	Use correct cooking time, power level.
<b>Undercooked foods</b>	Materials to be avoided in microwave oven were used.	Use microwave-safe cookware only.
	Food is not defrosted completely.	Completely defrost food.
	Oven ventilation ports are restricted.	Check to see that oven ventilation ports are not restricted.
	Cooking time, power level is not suitable.	Use correct cooking time, power level.
<b>Improper defrosting.</b>	Materials to be avoided in microwave oven were used.	Use microwave-safe cookware only.
	Cooking time, power level is not suitable.	Use correct cooking time, power level.
	Food is not turned or stirred.	Turn or stir food.