




USER MANUAL

BUFFET TABLE

KoolMore Commercial Outdoor Refrigerated Buffet Table

Models: KM-RBT-54ACS

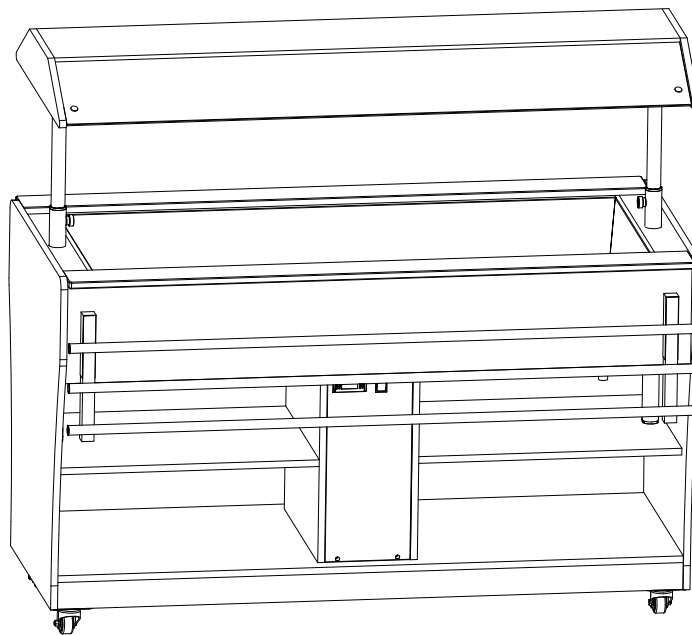

Before using, please read the operating instructions carefully to ensure proper application and achieve satisfactory results.

For any service-related issues, please contact us:



718-576-6342



support@koolmore.com

***Stay informed with the latest information
for your KoolMore Appliance.***

**If you need any assistance or have questions, our customer
support team is here to help.**

Contents

Safety.....	4
Installation.....	6
Parts List.....	7
Operation.....	9
Cleaning And Maintenance.....	10
Warranty	12

SAFETY

General Information

This manual provides essential information for installing, operating, and maintaining the device. It's an important reference for safe and proper use. Always follow the safety instructions here to avoid accidents and damage.

Keep this manual near the device for easy access during installation, maintenance, or cleaning. Follow all local health and safety regulations.

Symbols Key

This manual uses symbols to highlight important safety instructions. Pay careful attention to avoid accidents, injuries, or damage.

WARNING

This symbol indicates hazards that could lead to injury. Follow the instructions carefully.

CAUTION

This symbol indicates instructions to avoid device damage or malfunction.

NOTE:

Read the manual carefully before using the device. We are not liable for damage or malfunction from not following the instructions.

Keep this manual near the device for easy access. We may update it to improve the device.

Safety Instructions for Use

This section provides an overview of all important safety aspects. Each chapter includes specific safety advice to prevent dangers, highlighted by the symbols mentioned earlier. Always keep all pictograms, markers, and labels on the device readable.

Following these safety tips will ensure optimal protection against hazards and trouble-free operation.

1. Do not let individuals (including children) with physical or mental disabilities, insufficient experience, or knowledge use the device without supervision or proper instruction.
2. Keep children away from the device.
3. Keep this manual with the device. If selling or giving away the device, include the manual.
4. Follow the manual and safety advice when using the device.
5. Use the device indoors only.

Intended Use

CAUTION

- This device is designed for commercial use only and should be operated by qualified personnel.
- Safe operation is guaranteed only when using the device for its intended purpose.
- Any technical work, assembly, or maintenance must be done by qualified customer service only.
- The Gastro Buffet - Cold Display is for keeping prepared food warm in appropriate GN containers.

WARNING

- Do not use the device for any other purpose.
- Claims for damages due to unconventional use are not accepted.
- The operator is liable for any damages from improper use.

Installation

WARNING

Delivery Check

Check the delivery for completeness and transport damage immediately upon receipt. If there is visible damage, do not accept the delivery or accept it with reservations. Note the damage on the carrier's bill of delivery and trigger a complaint.

Report hidden damages immediately as claims can only be made within the effective period.


Inspect the device for completeness. If any part is missing, contact customer service immediately.

Storage

Keep the package closed until installation. Store packages as follows:

- Do not store outdoors.
- Keep it dry and dust-free.
- Keep out of direct sunlight.
- Avoid mechanical shocks and vibrations.
- For storage longer than 3 months, check the packaging and parts regularly.

Parts:

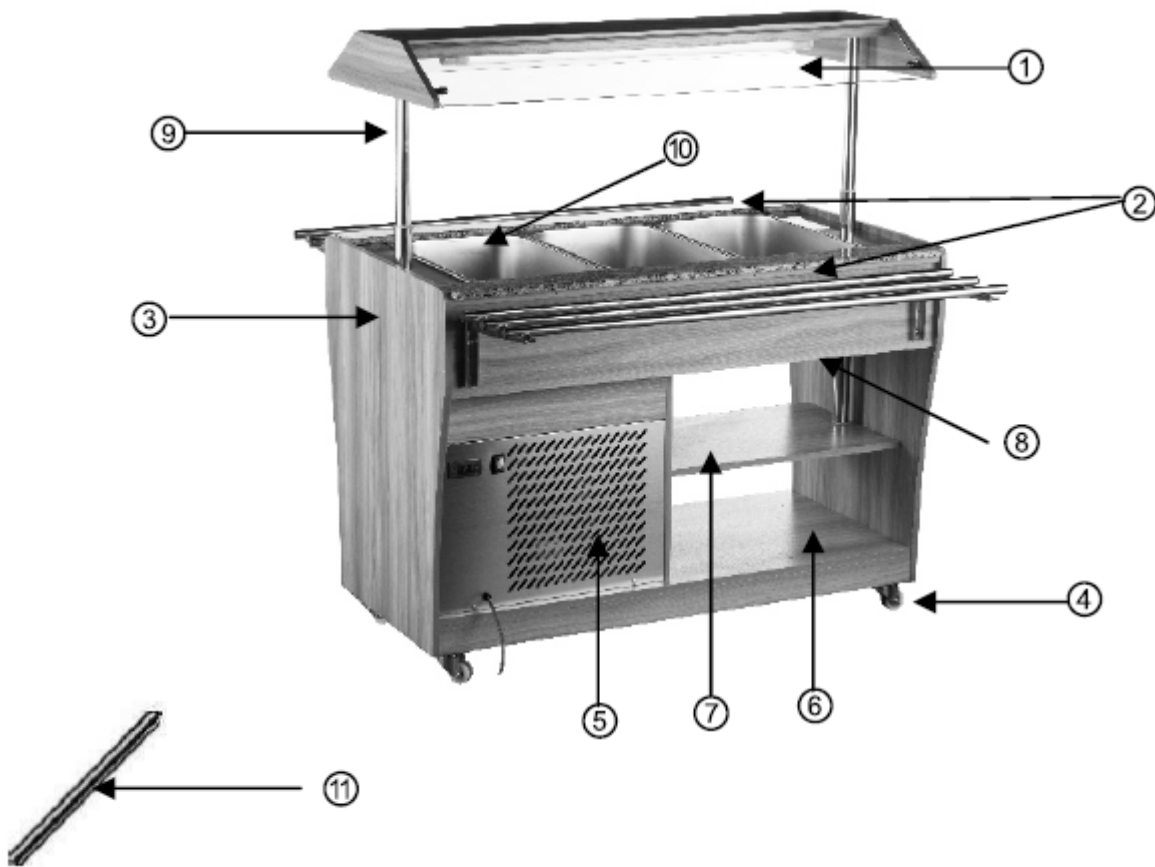

1. Glass cover with lighting
2. Countertops
3. Housing
4. Swivel wheels (4), 2 with locking capability
5. Vent
6. Bottom shelf
7. Middle shelf
8. Drain tap
9. Support poles for glass cover
10. Chamber for GN containers
11. Cross bars for GN containers

Installation and Operation

WARNING

- Connect the device only to a properly installed single socket with protective contact.
- Never yank the cord to disconnect from the outlet.
- The cable must not touch any hot parts.
- Ensure the cable does not touch heat sources or sharp edges. Do not let it dangle over the counter edge.
- Do not use the device if it is not functioning properly, damaged, or dropped.
- Use only accessories or spare parts recommended by the manufacturer. Unapproved parts can be dangerous and void the warranty.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep it away from the operating range and do not dunk it in water.
- Do not move or tilt the device when in operation.
- The device can cause injuries due to improper installation.
- Before installation, compare the local power grid specification with the device's specifications (see type label).
- Connect the device only if compliant with the specifications.
- Follow all safety advice.


Connection

1. Before first use, let the device sit for at least 8 hours before connecting to the power supply.
2. Connect the device only to a properly installed individual protected socket.
3. The socket's circuit must be protected by at least 16A. Connect only to a wall socket; do not use an outlet splitter or multiple sockets.

Operation

Before the First Use


- Wash the device thoroughly (see section 6.2 “Cleaning”).
- Ensure the drain tap is closed.
- Make sure the device is turned off.
- Connect the device to a grounded single outlet.
- Turn on the device using the ON/OFF switch.
- If needed, turn on the lighting on the glass cover using the switch.
- Wait about 40 minutes to ensure the device reaches the correct temperature.
- Only fill the device with food in the appropriate GN containers after it has reached the correct temperature.

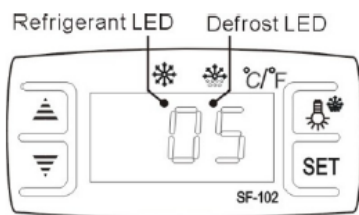

Settings

Set Temperature

Press the “set” button to display the set temperature.


Press the  or  button to adjust and store the temperature.

Press the “set” button again to exit. If no button is pressed within 10 seconds, the current temperature will be displayed.

Illumination

Press the  button to turn on the light; press it again to turn it off.

Manual Defrost

Press and hold the  button for 6 seconds to start or stop defrosting.

 

Indicator Light

The light blinks when the compressor stops and stays on when it is working.

Defrost LED

The LED is on during defrosting and off when defrosting stops. It flashes during the delay display of defrost.

Digital Controller Reset

If “Disorder” is displayed, press the  button for 2 seconds until the buzzer rings. Quickly press the  button for 6 seconds until the buzzer rings again. The display will flash for 3 seconds and restore factory settings.

User Information

- Do not place heavy objects (like stacked plates) on the glass cover. Use the lower or middle shelves for such items.
- Cool hot dishes to room temperature before storing them.
- After a power failure or unplugging the device, wait at least 5 minutes before reconnecting it to the power supply.

CLEANING AND MAINTENANCE

Safety Advice

- Before cleaning or repair, make sure the device is unplugged and has cooled down.
- Do not use acid agents and ensure no water enters the device.
- To avoid electric shock, never immerse the device, cables, or plug in water or other liquids.

CAUTION!

The device is not suited for cleaning with water jets or pressure water jets.

Cleaning

- Clean the device daily after each use.
- Remove GN containers before cleaning. Clean them with hot water, a soft cloth, and mild detergent.
- Rinse and dry thoroughly.
- Wash the housing, countertops, and shelves with a soft cloth and dry them thoroughly.
- If water has collected in the chamber for GN containers, attach the drain hose to the drain tap under the chamber and drain the water.
- Wash the chamber with a damp soft cloth and dry thoroughly.
- Never use pointed or sharp objects for cleaning.
- Never use aggressive cleaning agents (e.g., scouring powders, cleaners with alcohol, solvents) as they could damage the device.

Safety Instructions for Maintenance

- Regularly check the power cable for damage. Never use the device if the cable is damaged.
- Replace damaged cables immediately via customer service or a qualified electrician.

- For damage or malfunction, contact customer service.
- Only qualified technicians using original spare parts should repair the device. Do not attempt to repair it yourself.

Waste Disposal

Discarding Old Devices

When the device reaches the end of its service life, dispose of it according to national regulations. Contact a specialized waste disposal company or your local disposal service for guidance.

WARNING

To prevent misuse and hazards, disconnect the device from the power supply and remove the power cable before disposal.



WARRANTY

LIMITED WARRANTY

Koolmore Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Koolmore product is free from manufacturing defects in material or workmanship for one year from the date of purchase.

Should you discover any such defect within the warranty period, Koolmore Supply, Inc., reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been installed, operated, and maintained as per the instructions provided.

At its sole discretion, Koolmore Supply Inc. may decide to replace the product. In such an event, your replacement

appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a Koolmore-designated service company.

To claim warranty or request repair service:

Email support@koolmore.com. Please include your name, address, phone number, warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit koolmore.com and use the contact us page. A Koolmore customer service representative will promptly arrange service for your appliance.

We thank you for choosing Koolmore.

WARRANTY EXCLUSIONS

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance. This includes using any external device that alters or converts the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance not aligned with the user's manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

