

 
# INSTALLATION

1. Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces.
2. Maintain a distance of 7 inches between the unit and walls or other objects for ventilation. Increase this distance if the obstacle is a heat source.
3. Set the brakes on the castors to keep the appliance in position OR level the appliance by adjusting the screw feet.

*Note: Before using the appliance shelves and interior with soapy water.*

## Lock/Unlock the Doors

A lock is fitted to the doors to ensure food stuffs are kept secure within your appliance. Use the keys provided to lock/unlock the doors. ALL COMPACT models are equipped with a door lock, ensuring that stocks are safe after closing.

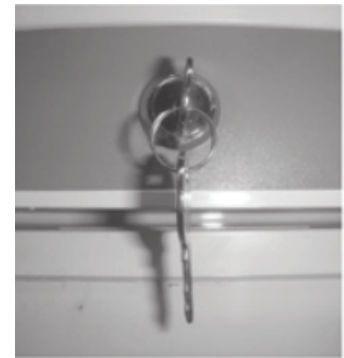

**The R600a and R290  
refrigerant used by  
this appliance.**

## Fitting the Waste Water Tray

The waste water tray comes ready to fit to the underside of the appliance, slide the tray into the runners situated under the appliance.

## Fitting the Shelves

1. Place one set of shelf guides on either side of the cabinet at the desired height.
2. Slide the shelf into place.
3. Repeat for the remaining shelves.
4. The shelf supports up to 66lbs.

 
 
 
*Note: this is vital for ensuring correct drainage of condensation*

## Operation Storing Food



To get the best results from your appliance, follow these instructions:

- Only store foodstuffs in the appliance when it had reached the correct operating temperature.
- Do not place uncovered hot food or liquid inside the appliance.


# SET 1 DRAWER ASSEMBLY GUIDE

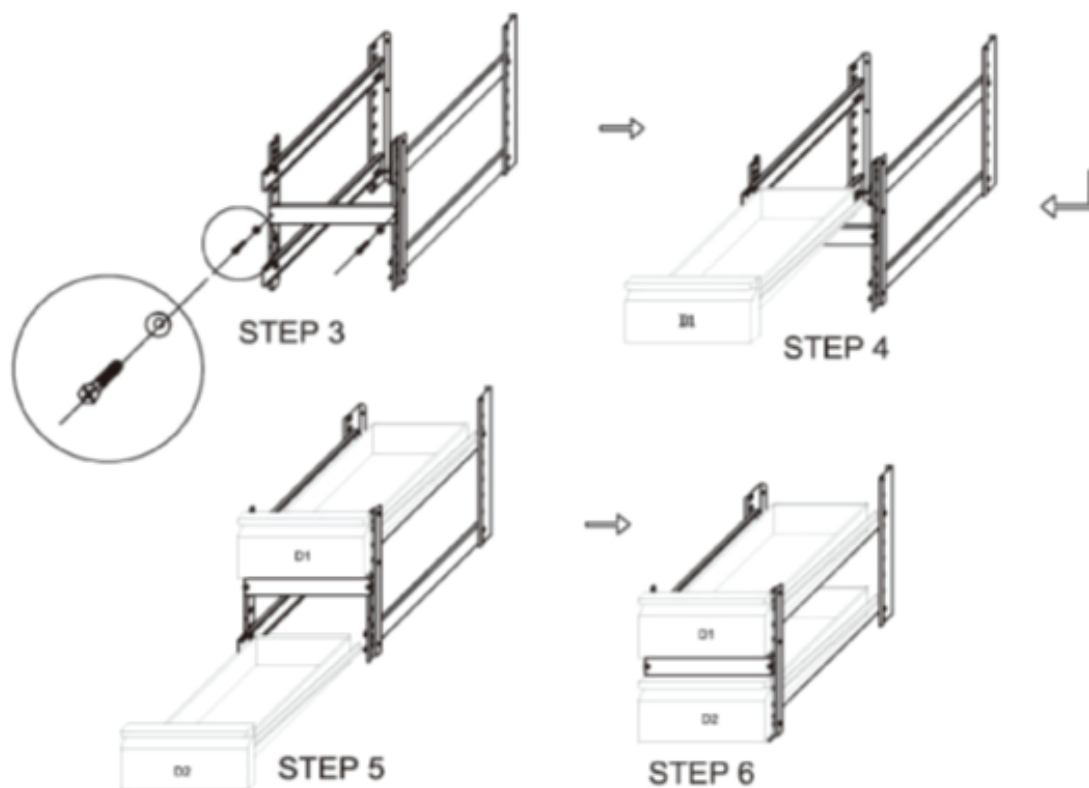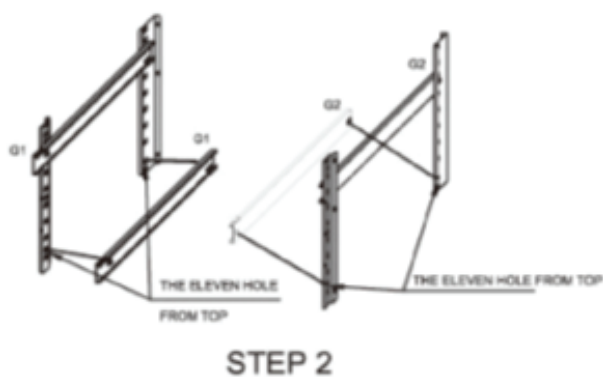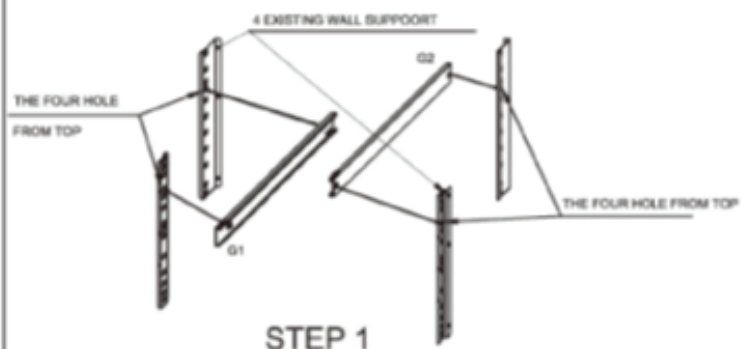

# SET 2 DRAWER ASSEMBLY GUIDE

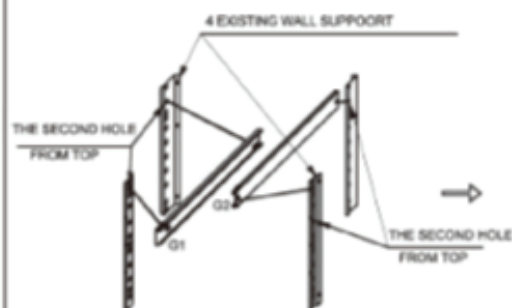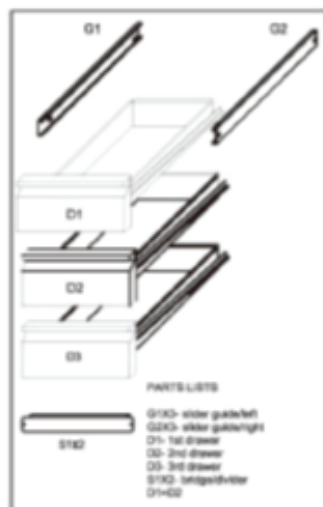  

 STEP 1

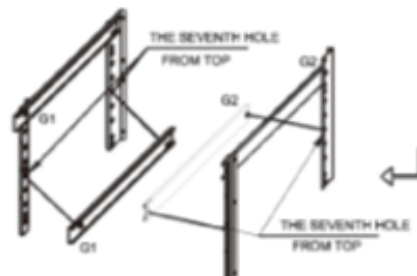


STEP 2




STEP 3



 
STEP 4

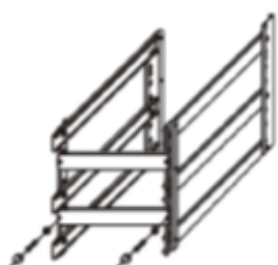

 
STEP 5

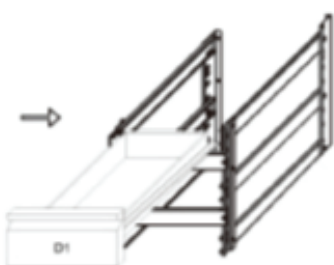

 
STEP 6

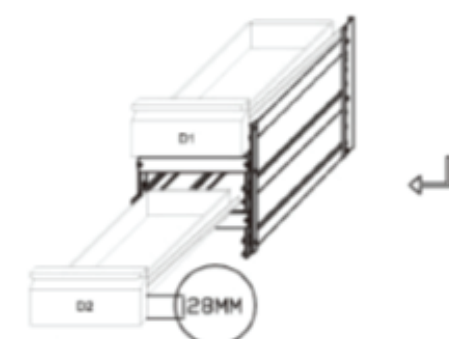

 STEP 7

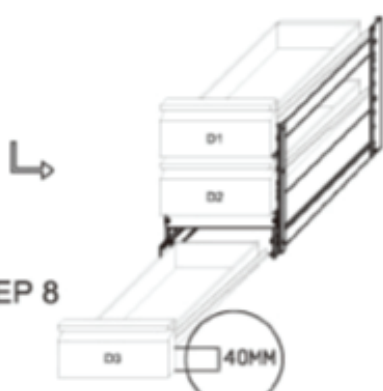

 STEP 8

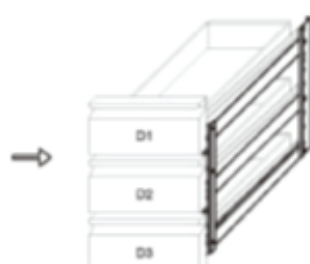

STEP 9

- Wrap or cover food where possible.
- Do not obstruct the fans where possible
- Do not obstruct the fans inside the appliance.
- Avoid opening the doors for prolonged periods of time.
- Foodstuffs should be 11in. away from the back of the appliance.
- Do not place contents of food(e.g. acid, alkali or salt) inside the appliance.

### **Turn on**

1. Close the door(s) of the appliance.
2. Ensure the power switch is set to [ON] and turn on at the socket.
3. Switch on the Power [II], the current temperature within the appliance is displayed.

### **Manual Defrost**

The appliance will automatically run a defrost cycle every four hours.

**Note:** *The cycle starts from the time the appliance is initially powered up.*

### **To manually defrost the appliance:**

1. Press and hold the DEFROST button for 5 seconds.
2. The defrost cycle will start immediately and the Defrost LED illuminates. The defrost will last a maximum of 30 minutes.

**Note:** *Starting a manual defrost also resets the automatic defrost timer. The next automatic defrost will start four hours after the manual defrost has finished.*

3. Waste water is collected in the waste water tray.

# MAINTENANCE

## Cleaning, Care & Maintenance

Switch off and disconnect from the power supply before cleaning.  
Clean the interior of the appliance as often as possible.  
Do not use abrasive cleaning agents. These can leave harmful residues.  
Clean the door seals with water only.

## Cleaning the Condenser

Periodically cleaning the condenser can extend the life of the appliance. We recommend that our agent or qualified technician clean the condenser.

## Disposal

EU regulations require refrigeration product to be disposed of by specialist companies who remove or recycle all gasses, metal and plastic components. Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial refrigeration equipment but may be able to offer advice on how to dispose of the equipment locally.

## Compliance

Parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities. Products have been approved to carry the following symbol:



### Disposal of packaging

All packaging materials should be disposed of in an environmentally friendly way. The cardboard may be used as scrap paper. The protective foil and the foam cushions are CFC-free.

Do not allow children to play with the packaging and destroy plastic bags safely. You can break or cut the cardboard into smaller pieces and give to a paper bank.



### Environment protection

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection center (if available).

# TROUBLESHOOTING

If your appliance develops a fault, please check the following table before making a call to your retailer.

<b>Fault</b>	<b>Probable Cause</b>	<b>Action</b>
The appliance is not working/The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call your agent or qualified Technician
	Fuse in the plug has blown	Replace the fuse
	Power supply	Check power supply
	Internal wiring fault	Call your agent or qualified Technician
The appliance turns on, but the temperature is too high/low	Too much ice on the evaporator	Defrost the appliance
	Condenser blocked with dust	Call your agent or qualified Technician
	Doors are not shut properly	Check doors are shut and seals are not damaged
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the appliance to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance
	Unsuitable foodstuffs are being stored in the appliance	Remove an excessive hot foodstuff or blockages to the fan
	Appliance is overloaded	Reduce the amount of food stored in the appliance
The appliance is leaking water	The appliance is not properly levelled	Adjust the screw feet to level the appliance (if applicable)
	The discharge outlet is blocked	Clear the discharge outlet
	Movement of water to drain is obstructed	Clear the floor of the appliance (if applicable)
	The water container is damaged	Call your agent or qualified Technician
	The drip tray is overflowing	Empty the drip tray (if applicable)
The appliance is unusually loud	Loose nut/screw	Check and tighten all nuts and screws
	The appliance has not been installed in a level or stable position	Check installation position and change is necessary