

QUICK START GUIDE MAYTAG® DRYER

OPERATING INSTRUCTIONS

CONTROL PANEL AND FEATURES

⚠️

WARNING



Fire Hazard

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.

Failure to follow these instructions can result in death or fire.

⚠️

WARNING



Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from dryer.

Do not dry anything that has ever had anything flammable on it (even after washing).

 
Failure to follow these instructions can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

Step 1. Clean Lint Screen




Step 2. Load Clothes; then Close Door

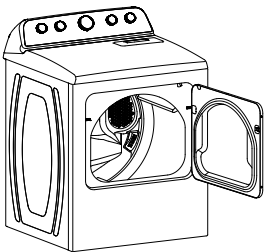


Step 3. Press Power Button



 Step 4. Select the desired cycle for your load*

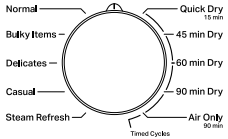


 Step 5. Adjust cycle settings and options, if desired

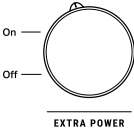


On
Off

 EXTRA POWER

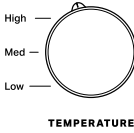


High
Med
Low

 TEMPERATURE

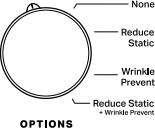

None
Reduce Static
Wrinkle Prevent
Reduce Static + Wrinkle Prevent

 OPTIONS

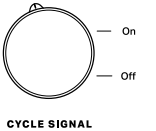

On
Off

CYCLE SIGNAL

Step 6. Press, Hold, and Release Start Button



NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

**Not all cycles, settings or options are available with all models.*

IMPORTANT: Retain this guide for future use.

**Not all features, cycles, and options are available on all models. Appearance may vary.*

1. POWER

Press to turn On/Off or to stop/cancel a cycle.

2. CYCLE KNOB

Turn knob to select desired cycle.
When using an Automatic Dry cycle the sensors will monitor moisture and heat levels and automatically stop the cycle at the right time. When using a Timed Cycle, user can choose the length of time for the cycle to run by selecting the Time option (15, 45, 60, and 90 minutes).

3. START/PAUSE

Press, hold, and release the **START/PAUSE** button to start the cycle.

Press **START/PAUSE** during a cycle to pause it. Press, hold, and release to resume cycle.

4. STATUS INDICATOR LIGHTS

Monitors and displays the cycle progress from Sensing to done.

5. CYCLE OPTIONS AND MODIFIERS

Temperature

Select the temperature to modify the cycle's available temperature. (Low, Medium, and High). If you want to use no heat, then choose the Air Only Timed cycle, in which case the temperature selection will be ignored.

Time (Air Only, Timed Dry, and Quick Dry Only)

Select the time to modify the time for the timed cycle between 15, 45, 60, and 90 minutes.

Options

Reduce Static, Wrinkle Prevent and combination of both Reduce Static and Wrinkle Prevent are obtained through the Options button. Reduce Static cuts down on cling with the addition of a fine mist of water, as clothes tumble, towards the end of the cycle. Wrinkle Prevent keeps the clothes tumbling with no heat for up to 2.5 hours after the cycle ends, to help prevent wrinkles from setting in.

Cycle Signal

Use the Cycle Signal to turn the cycle signal tone on or off. Note that you cannot control the volume of the tone.

Extra Power

The Extra Power option can be used with both Sensor and Timed Dry Cycles for harder to dry loads. It provides an additional 10 minutes of cycle time, including additional heat and tumbling (where applicable).

Your dryer comes with two types of cycles - sensor drying cycles and timed drying cycles.

Sensor drying cycles - Use Sensor Cycles for better fabric care and energy savings. The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

Timed Drying cycles - In these cycles, you can specify the drying time. Time options available are 15, 45, 60 and 90 minutes. For a complete list of all cycles, please refer to the online cycle guide document.

NOTE: These clothes dryer's Government energy certifications were based on the Timed Dry Cycle and Maximum Drying Temperature Setting. The as - shipped defaults of Normal Dryness, Wrinkle Shield off, were used.

NOTE: If loads do not seem as dry as you would like, select Extra Power or increase temperature the next time you dry a similar load. If loads seem too dried as per your liking, select a lower temperature the next time you dry a similar load.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the “Owner’s Manual” included with your machine.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit <https://www.maytag.com/owners> or in Canada <https://www.maytag.ca/owners>. This may save you the cost of a service call.

Register Product	Manuals & Downloads	Troubleshoot- ing & FAQ	Replacement Parts	Add Service Plan	Schedule Service	Filters	Rebate & Promos
							

However, if you need to contact us, use the information listed below for the appropriate region.

United States:
1-800-344-1274

Maytag Brand Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2692

Canada:
1-800-688-2002

Maytag Brand Appliances
Customer eXperience Centre
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

W11425775B

