


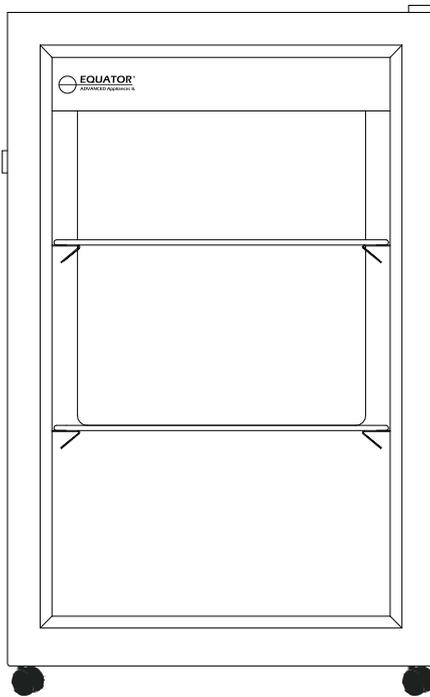

# OUTDOOR REFRIGERATOR

## MODEL - OR 230



# OWNER'S MANUAL

Read the instructions carefully and keep for future reference. Information maybe updated from time to time so please refer to the website for the latest version of the manual.



**DO NOT RETURN TO STORE!**

**HAVE QUESTIONS OR NEED SERVICE?**



1-800-776-3538



Service@ApplianceDesk.com

## **Warranty**

---

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 Days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been Installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Services would be provided from Monday to Friday between normal business hours.

## **Exclusions**

---

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

**Specifically, the following work is not covered under warranty and does not constitute warranty work:**

**Installation - e.g. Installing as built-in**

**Maintenance - e.g. Cleaning the appliance using solvents**

**Mishandling - e.g. Breakage of door, shelves or casters**

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

## WARRANTY SERVICE

---

This warranty is given by:

### **Equator Appliances**

10222 Georgibelle Drive, Suite 200  
Houston, Texas 77043-5249

### **For Service:**

Call: 1-800-776-3538

Email: [service@ApplianceDesk.com](mailto:service@ApplianceDesk.com)

Web: [www.ApplianceDesk.com](http://www.ApplianceDesk.com)

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by either of the following methods:

#### 1. Scan QR Code

- Open Smart Phone
- Open Camera
- Click the Link



#### 2. Register online at [ApplianceDesk.com/Warranty](http://ApplianceDesk.com/Warranty)

3. QR Code is also used to obtain Product Information,  
Manuals and Updates

## GENERAL

---

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*All rights reserved. Manual subject to change without notice.*

## **Safety**

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Refrigerant and foaming material is flammable. Take precautions during handling, installation, and maintenance.

Ensure that the refrigerant circuit is not damaged.

Keep ventilation openings clear of obstructions.

When positioning the appliance, ensure the electrical cord is not trapped or damaged.

Do not place multiple portable socket-outlets at the rear of the appliance.

Never unplug the appliance by pulling on the power cord. Grip the plug firmly and pull straight out from wall socket.

Do not use a damaged power cord.

Do not use an extension cord.

Children should be supervised to ensure that they do not climb on or play with the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

## **Safe Disposal**

- Before discarding the refrigerator, remove door and shelves in order to prevent risk of child entrapment.
- Dispose off this appliance in accordance with local regulations.

## **Installation of Casters**

1. Tilt the Refrigerator slightly to screw the casters into the bottom of the unit. Do not place it on its side as this may cause damage.
2. There are 4 casters. The 2 with locking levers should be screwed into the front of the Refrigerator and the other 2 casters without locks should be attached at the back.
3. Tighten the casters using a 1/2" (12mm) wrench and ensure that all the casters are firmly installed.

## **Placement and Operation**

Do not tilt the Refrigerator at an angle of more than 45° when moving it.

The Refrigerator is designed for outdoor use and can withstand temperatures between 32°F -101°F (0°C to 38°C).

Place the Outdoor Refrigerator in a covered area to protect from direct sunlight and heavy rainfall.

Place the Refrigerator on a flat level surface.

If placing against a wall, leave at least 3 inches (8 cm) between the back of the Refrigerator and the wall to allow for adequate ventilation.

Check the plug and cable before you connect the power and ensure it is the correct 110 voltage.

Once in place, lock the two front casters to ensure that the Refrigerator does not move.

After moving the Outdoor Refrigerator in place, wait at least 10 minutes before turning it on, in order to allow the coolant to settle.

# Temperature Setting

The Control Panel is located inside the Outdoor Refrigerator. The temperature can be set as shown below.



Increase  
Temperature



Lower  
Temperature



Temperature  
Display



Light  
On/Off



Power  
On/Off

Press the Power ON/OFF button to turn the appliance on.

Press the Light ON/OFF button to turn on the LED light inside the Outdoor Refrigerator.

The temperature range of the appliance is 34°F-50°F (1°C-10°C).

Increase or decrease the temperature by pressing the Up and Down arrows.

Pressing the Up and Down temperature arrows for 5 seconds at the same time will change the temperature between °C & °F.

The Outdoor Refrigerator comes equipped with a built-in lock on the side and a key is included.

## Maintenance

Make sure the power cord is unplugged before moving or cleaning the back of the appliance.

Clean the outside and inside of the appliance regularly, using water and mild detergent.

# Door Reversal

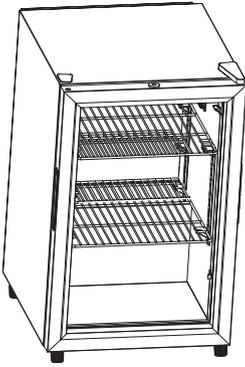


Figure 1

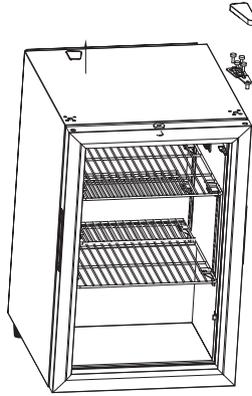


Figure 2

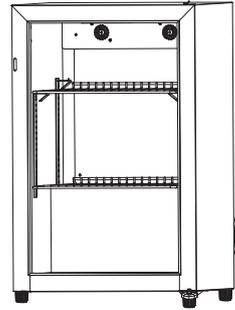


Figure 3

For the door reversal process, use a screwdriver to remove and install the door parts.

1. Remove the top hinge cover and cover plate and then the hinge screws. (Fig. 1, 2)
2. Remove the door. (Fig. 3)
3. Gently tilt the appliance from an upright position to placing it on its back. Ensure the ground is flat and smooth and does not cause any damage to the appliance. (Fig. 4)
4. Remove the lower hinge from one side and install it on the opposite side. (Fig. 4, 5)
5. Gently lift the appliance to an upright position. (Fig. 6)
6. Reinstall the door with the upper hinges and cover plate on the opposite side. Ensure the door closes and seals firmly. (Fig. 6)

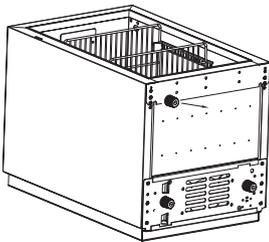


Figure 4

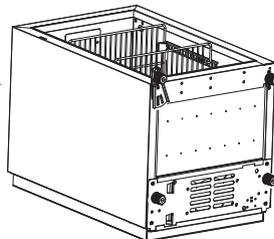


Figure 5

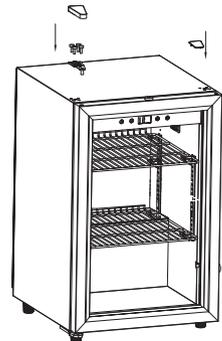


Figure 6

# Troubleshooting

<b>Problem</b>	<b>Possible Cause and Solution</b>
<b>Not Working</b>	<ul style="list-style-type: none"> <li>• Check the fuse in the electrical panel</li> <li>• Check if it is plugged in correctly to the power source.</li> </ul>
<b>Not Cooling</b>	<ul style="list-style-type: none"> <li>• Temperature is not set correctly. Adjust the temperature.</li> <li>• Move it if near a heat source or in direct sunlight.</li> <li>• Check for proper ventilation and that air inlet or outlet is not blocked.</li> <li>• Door opened frequently or is not shut properly.</li> <li>• Door seal is damaged.</li> </ul>
<b>Too much noise</b>	<ul style="list-style-type: none"> <li>• Appliance not placed on flat surface or not level.</li> <li>• Some parts are loose causing rattling.</li> </ul>
<b>Door does not close properly</b>	<ul style="list-style-type: none"> <li>• Check the door seal.</li> <li>• Shelves are not positioned properly. Adjust the shelves.</li> </ul>

The following phenomenon is normal:

- Moisture on the glass door – wipe with dry cloth
- Sound of fluid is the compressor when it is starting or stopping
- Flowing sound of refrigerant in the refrigeration system
- Condensation forming inside the cabinet – wipe with dry cloth

## Technical Specifications

Model	OR 230
Capacity	2.3 cu.ft
Voltage	115V 60Hz
Current	0.6A
Power	60W
Refrigerant	R600a
Temperature Range	34° F - 50° F
Weight Net / Gross	71 / 77 lbs
Product Dimensions (HxWxD)	27.2 x 17 x 20 (inch)
Packaging Dimensions (HxWxD)	30 x 20 x 23 (inch)

## California Proposition 65

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



**Equator Advanced Appliances USA**, founded in 1991, offers Efficient, High-Quality, and Innovative household appliances.

**Our Mission** is to simplify domestic chores and save Time, Space, and Energy.

**Our Vision** is to enhance our Customer's Quality of Life!

**Equator Appliances USA**

[www.EquatorAppliances.com](http://www.EquatorAppliances.com)