

How to Replace Handles and Knobs on ILVE Nostalgie Ranges



Replacing the Handles and Knobs:

Whether you're upgrading your ILVE Nostalgie range with a new finish or replacing worn components, changing the oven handles and knobs is a quick and easy task. This guide outlines the steps needed for both handle and knob replacement to ensure a secure and seamless update.

Ideal for service technicians, home renovators, or ILVE owners performing repairs, this tutorial ensures your handles and knobs are correctly replaced and ready for use.

Tools Required:

- 2mm Allen key (included with most ILVE ranges)
- Replacement ILVE handle(s) or knob(s)
- Clean, stable work surface

How to Replace Handles and Knobs on ILVE Nostalgie Ranges



Handle Replacement

Step 1: Loosen the Bolts

Use a 2mm Allen key to loosen the small bolts located under the handle.

Step 2: Slide Off the Handle

Gently slide the old handle off its mounting base.

Step 3: Align the New Handle

Align the new handle with the base and slide it into position.

Step 4: Tighten the Bolts

Use the Allen key to tighten the bolts and secure the handle.



Knob Replacement

Step 1: Remove the Old Knob

Firmly pull the existing knob straight off the shaft. No tools are required.

Step 2: Install the New Knob

Push the new knob onto the shaft until you hear or feel it click into place.



ILVE Live, Cook, Love.

How to Replace Handles and Knobs on ILVE Nostalgie Ranges



Final Recommendations

- Refer to the full ILVE Installation Manual for clearance requirements and connection guidelines.
- Always hire a licensed professional for gas and electrical installations.
- Register your ILVE Range online to activate your warranty and receive product support.

Need further assistance? Visit us.ilve.com or contact our support team.

