


QUICK START GUIDE WHIRLPOOL® DRYER

CONTROL PANEL AND FEATURES

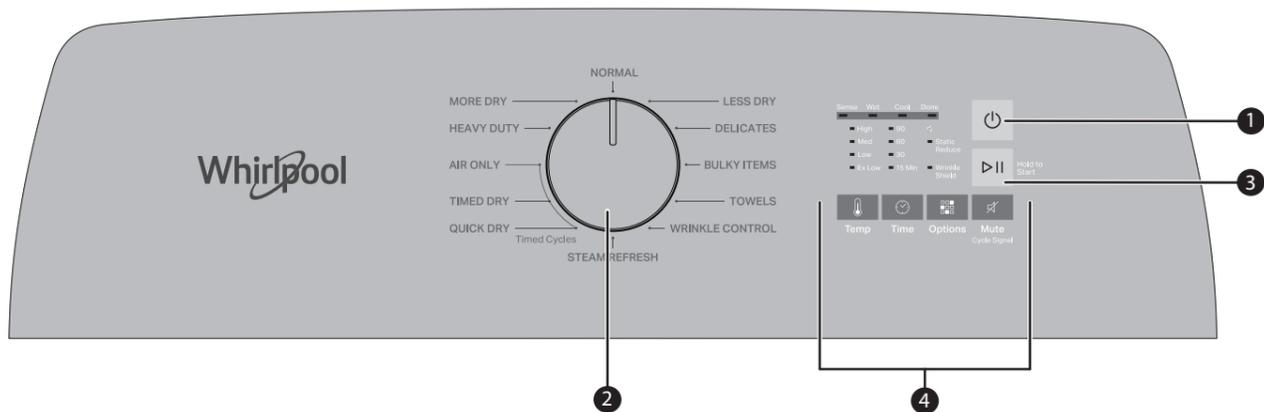

*Not all features, cycles, and options are available on all models. Appearance may vary.

1 POWER

Press to turn on/off or to stop/cancel a cycle.

2 CYCLE KNOB

Turn knob to select desired cycle.

NOTE: Your dryer comes with two types of cycles - Sensor drying cycles and Timed drying cycles.

SENSOR DRYING CYCLES:

Use Sensor Cycles for better fabric care and energy savings. The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

TIMED DRYING CYCLES:

In these cycles, you can specify the drying time. Time options available are 15, 30, 60 and 90 minutes. For a complete list of all cycles, please refer to the cycle guide document.

3 START/PAUSE

Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle.

NOTE: These clothes dryer's Government energy certifications were based on the Timed Dry Cycle, Maximum Drying Temperature and Maximum Dry Time Settings. The as-shipped defaults of Normal Dryness, Wrinkle Shield off, were used.

4 CYCLE MODIFIERS (Not all modifiers are available on all cycles)

TEMP

Press to modify the cycle's available temperature. (Extra Low, Low, Medium, and High)

TIME (Air Only, Timed Dry, and Quick Dry Only)

Press to modify the time for the timed cycle between 15, 30, 60, and 90 minutes.

OPTIONS

Press to add or remove options for each cycle. Press once to activate Wrinkle Shield, twice to activate Static Reduce and three times for both.

WRINKLE SHIELD

If you will be unable to remove a load immediately, activate this option to add 150 minutes of periodic tumbling to help reduce wrinkles from forming after the cycle completes.

STATIC REDUCE

This option can help reduce the build up of static cling formed during the drying process. When activated, this option will tumble with steam towards the end of the cycle to reduce static.

MUTE CYCLE SIGNAL

Use this option to turn the end of drying cycle signal on or off.

OPERATING INSTRUCTIONS

⚠ WARNING



Fire Hazard

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.

Failure to follow these instructions can result in death or fire.

⚠ WARNING



Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from dryer.


Do not dry anything that has ever had anything flammable on it (even after washing).

Failure to follow these instructions can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

STEP 1. CLEAN LINT SCREEN


STEP 2. LOAD CLOTHES

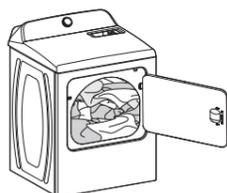

STEP 3. PRESS POWER BUTTON



STEP 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*

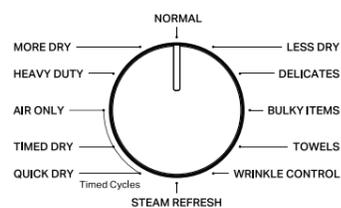

STEP 5. ADJUST CYCLE SETTINGS AND OPTIONS, IF DESIRED

Sense	Wet	Cool	Done
High	90	Static Reduce	
Med	60	Wrinkle Shield	
Low	30		
Ex Low	15 Min		




STEP 6. PRESS, HOLD, AND RELEASE START BUTTON



Hold to Start

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

CHOOSING THE RIGHT CYCLE

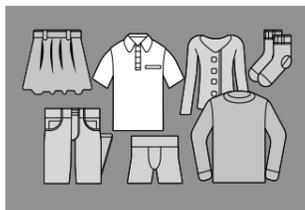

A cycle guide for your dryer can be found online at www.whirlpool.com. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Medium temperature for cottons, linens and mixed-garment loads.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the "Owner's Manual" included with your machine.

SPECIALITY CYCLE

WRINKLE CONTROL:

This cycle is designed to help remove or reduce wrinkles, this cycle is great for permanent press clothing. The dryer cycle uses low heat and a cool down period to keep clothes from wrinkling or creasing.

STEAM REFRESH:

This cycle is best for reducing wrinkles and odors from dry items. This cycle is great to refresh a wrinkled garment or when a load was left in the dryer too long.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

Register Product	Schedule Service	How To's & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
<p>For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit www.whirlpool.com/owners, or in Canada www.whirlpool.ca/owners. This may save you the cost of a service call.</p> <p>To speak with a customer service representative or if you have additional questions, call us toll free at 1-866-698-2538 or in Canada call 1-800-807-6777. You can write with any questions or concerns at:</p> <p>Whirlpool Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692</p> <p>Whirlpool Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7</p> <p>Please include a daytime phone number in your correspondence.</p>						

*Not all cycles, settings or options are available with all models.