 


PRODUCT REGISTRATION AND OWNER INFORMATION

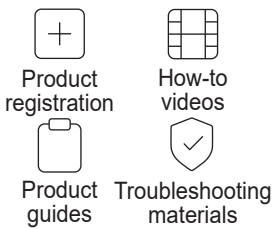

Whirlpool Brand Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2692

 
Register to access warranty information and receive important notifications related to your product. Scan the Photo Registration Card or QR code to register your product.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

- Step 1.** Select oven function.
- Step 2.** Set the temperature.
- Step 3.** Press Start.
- Step 4.** Place food inside the oven once set temperature is reached. Close the oven door.
- Step 5.** (Optional) Enter time to cook.
- Step 6.** The Cancel button can be used to cancel the function during or after cook time.



NOTE: For more detailed instructions on specific functions, see the online Control Guide.

A warning label with a black background. At the top, the word "WARNING" is written in large, white, bold, sans-serif capital letters. To the left of the text is a white exclamation mark inside a triangle. Below the text is a white silhouette of a flame. At the bottom, the text "Fire Hazard" is written in white, bold, sans-serif capital letters. Below that, the text "Turn off all controls when done cooking." is written in white, sans-serif capital letters. At the very bottom, the text "Failure to do so could result in death or fire." is written in white, sans-serif capital letters.

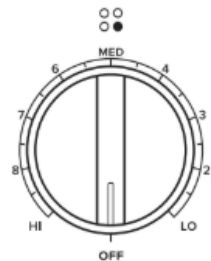

REMEMBER: When range is in use or (on some models) during the Self-Cleaning cycle, the entire cooktop area may become hot.

  For best results when baking cakes on 2 racks, use rack positions 2 and 4. Place the cakes on the racks as shown.

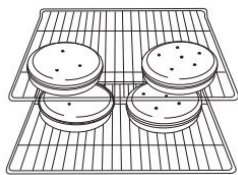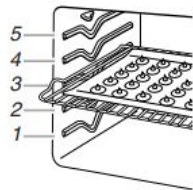

A. Oven vent

For guidance on usage and a complete list of models with Sabbath Mode, visit www.star-k.org or contact us as per the information provided above.