

Whirlpool Model: WMCS7022RW

1.6 cu. ft. Sensor Cooking Microwave

Color White

Product Description

This 1,200-watt microwave has convenient features like a Dishwasher-Safe Turntable Plate to make cleanup even easier, and 6 Auto Functions so you can reheat, cook and defrost various dishes at the touch of a button. With 1.6 Cu. Ft. Capacity and 7 Express Buttons, this Sensor Cooking microwave removes the guesswork and gives just the right amout of heat and time.

Specifications

Certifications

ADA Compliant	Yes
CEC Listed	Yes
CUL	No
Star K Certified	No
UL	Yes
Prop 65	CALIFORNIA RESIDENTS ONLY - WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca. gov

Oven Cavity Details

Convection	No
Cooking Power	1,200

Microwave Details

Door Release	Push Button
Sensor Cooking	Yes

Details

Cavity Finish	Powder Coat
Clock	Yes
Cooking Items Included	Turntable
Door Opening Direction	Left
Grill	No
Microwave Configuration	Countertop
Microwave Type	Countertop
Turntable	Recessed
Work Surface Light	No
90 Degree Articulating	Yes
Door Release	Push Button
Blower Type	Forced Air
Microwave Interior Light	Incandescent
Number of Microwave Racks	0
Turntable Diameter Size	12-3/4

Exterior Details

Handle Color	No Handle
Cabinet Color	White
Door Opening Direction	Left

Dimensions

Depth	18-5/16
Depth Closed Excluding	18-313/1000
Depth Closed Including	18-313/1000
Depth With Door Open 90	35-313/1000
Gross Weight	41-4/5
Height	12-1/4
Interior Height	10-3/8
Interior Width	14-3/4
Net Weight	38-3/10
Width	21-3/4
Interior Depth	17-5/8

Controls

Control Location Right Control Type Electronic Touch Convenience Cooking Yes Display Color White Electronic Display Type LED Microwave Selections Add 30 Seconds Add A Minute Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels Number of Sensor Control 2 One Touch Cooking Yes		
Convenience Cooking Display Color Electronic Display Type Microwave Selections Add 30 Seconds Add A Minute Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience Number of Power Levels Number of Quick Touch/One- Number of Sensor Control 2	Control Location	Right
Display Color Electronic Display Type Microwave Selections Add 30 Seconds Add A Minute Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience Number of Power Levels Number of Quick Touch/One- Number of Sensor Control Add 30 Seconds Add A Minute Auto Cook Beverage Control Severage Control Severage Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 1	Control Type	Electronic Touch
Electronic Display Type Microwave Selections Add 30 Seconds Add A Minute Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience Number of Power Levels Number of Quick Touch/One- Number of Sensor Control Add 30 Seconds Add A Minute Auto Cook Beverage Control Severage Control Severage Cook Power Cook Powe	Convenience Cooking	Yes
Microwave Selections Add A Minute Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Power Levels 10 Number of Quick Touch/One- 7 Number of Sensor Control 2	Display Color	White
Add A Minute Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Reypads 1 Number of Quick Touch/One- Number of Sensor Control 2	Electronic Display Type	LED
Auto Cook Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Reypads 1 Number of Quick Touch/One- Number of Sensor Control 2	Microwave Selections	Add 30 Seconds
Beverage Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Quick Touch/One- Number of Sensor Control 2		Add A Minute
Control Lock Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Power Levels 10 Number of Sensor Control 2		Auto Cook
Cook Power Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Power Levels Number of Sensor Control 2		Beverage
Cook Time Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels Number of Sensor Control 2		Control Lock
Cook/Start Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Power Levels Number of Sensor Control 2		Cook Power
Defrost Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Fower Levels Number of Sensor Control 2		Cook Time
Dinner Plate End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Quick Touch/One- Number of Sensor Control 2		Cook/Start
End of Cycle Signal Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels Number of Quick Touch/One- Number of Sensor Control 2		Defrost
Fresh Vegetable Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- Number of Sensor Control 2		Dinner Plate
Frozen Entree Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- Number of Sensor Control 2		End of Cycle Signal
Frozen Vegetable Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- Number of Sensor Control 2		Fresh Vegetable
Keep Warm Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- Number of Sensor Control 2		Frozen Entree
Off/Cancel Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- Number of Sensor Control 2		Frozen Vegetable
Pause Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One-7 Number of Sensor Control 2		Keep Warm
Pizza Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- Number of Sensor Control 2		Off/Cancel
Popcorn Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- 7 Number of Sensor Control 2		Pause
Potato Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One-7 Number of Sensor Control 2		Pizza
Reheat Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- 7 Number of Sensor Control 2		Popcorn
Number of Convenience 6 Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- 7 Number of Sensor Control 2		
Number of Keypads 1 Number of Power Levels 10 Number of Quick Touch/One- 7 Number of Sensor Control 2		Reheat
Number of Power Levels 10 Number of Quick Touch/One- 7 Number of Sensor Control 2	Number of Convenience	6
Number of Quick Touch/One- 7 Number of Sensor Control 2	Number of Keypads	1
Number of Sensor Control 2	Number of Power Levels	10
	Number of Quick Touch/One-	7
One Touch Cooking Yes	Number of Sensor Control	2
	One Touch Cooking	Yes

Smart Compatibility

Connectivity	No
Works With	No

Ventilation Details

Fan Speed Indicator	No
Night Light	No

Dimensions

Gross Weight	41-4/5

Key Features

Sensor Cooking

1200-Watt Cooking Power

Microwave Presets

Optional Built-In Trim Kit (Sold Separately)

Electronic Touch Controls

Add 30 Seconds Option

Dishwasher-Safe Turntable Plate

1.6 Cu. Ft. Capacity

Steam Clean

Keep Warm

Popcorn Preset

10 Power Levels

White LED Display

Mute/Unmute Option

6 Auto Functions

7 Express Buttons

Electrical Requirements

Power Cord Included Yes

UPC Listing

 Model: WMCS7022RB
 UPC: 883049686448

 Model: WMCS7022RS
 UPC: 883049695624

 Model: WMCS7022RW
 UPC: 883049686431

 Model: WMCS7022RZ
 UPC: 883049686455