



SINGLE BOTTLE CHILLER

Model - WR 001 W



OWNER'S MANUAL

Please read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the manual online for the latest version of the manual.

Warranty

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 Days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been Installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Services would be provided from Monday to Friday between normal business hours.

Exclusions

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Equator Appliances

10222 Georgibelle Drive, Suite 200
Houston, Texas 77043-5249

For Service:

Call: 1-800-776-3538

Email: service@ApplianceDesk.com

Web: www.ApplianceDesk.com

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan Chat-AI

- Open Smart Phone
- Open Camera
- Click the Link



2. Register online at ApplianceDesk.com/Warranty

3. Chat-AI is also used to obtain Product Information,
Manuals and Updates

GENERAL

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Safety

Do not use a damaged power cord.

Do not use an extension cord.

Do not touch the appliance or electrical cord and plug with wet hands.

When positioning the appliance, ensure the electrical cord is not trapped or damaged.

To protect against fire, electric shock and personal injury, do not immerse cord, plug or appliance in water or other liquid.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Please dispose of this appliance in accordance with local regulations.

General Instructions

The appliance is intended for cooling beverage bottles, such as water, wine and soft drinks.

Most beverage bottles can fit easily in the appliance.

Place the appliance away from sources of heat and high humidity, and also away from areas of moisture and exposure to cold temperatures.

Place the appliance on a flat level surface.

California Proposition 65


WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Operation

Before use, clean the outside and inside surfaces with a soft damp cloth.

Attach the adapter plug to the bottom of the appliance.
Then plug the cord into the wall outlet.

Control Panel

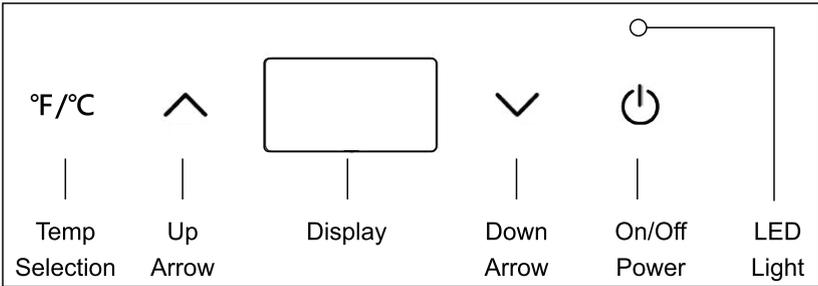

Temperature Setting

Press the Power ON/OFF icon to turn the appliance on.

Press the °F/°C icon to select the display as either °F or °C.

Press the Up and Down arrows to increase or decrease the temperature.

The temperature setting range of the appliance is 41°F-59°F (5°C-15°C).

Once the temperature has been selected, the cooling process begins and the LED light indicator above the Power icon flashes until the selected temperature has been reached. Then the LED light stops flashing, but continues to stay on.

Note: If the temperature of the appliance changes (such as when a bottle is removed or replaced), then the LED indicator light will flash again until the selected temperature is reached.

Maintenance

After use, remove the bottle and allow the appliance to dry thoroughly.

Ensure the power cord is unplugged before moving or cleaning the appliance.

Clean the outside and inside of the appliance, using a soft damp cloth.

Troubleshooting

Problem	Possible Cause and Solution
Not Working	Check power source. Check if it is plugged in correctly to the power.
Not Cooling	Temperature is not set correctly. Adjust the temperature. Move it away from heat source / direct sunlight.

Technical Specifications

Model	WR 001 W
Capacity	1 Bottle
Input	AC 110V
Output	DC 12V / 6A
Power	72 W
Cooling Technology	Thermo-electric
Working Temperature	41°F - 64°F (5°C - 17.7°C)
Weight Net / Gross	3.7 / 4.9 lbs
Product Dimensions (HxWxD)	10.7 x 5.6 x 7.8 (inch)



Equator Advanced Appliances USA,
founded in 1991, offers Efficient, High-Quality,
and Innovative household appliances.

Our Mission is to simplify domestic chores
and save Time, Space, and Energy.

Our Vision is to enhance our Customer's
Quality of Life!

Equator Appliances USA

www.EquatorAppliances.com