


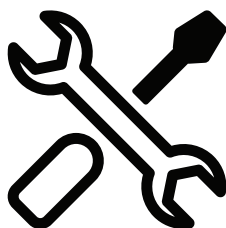
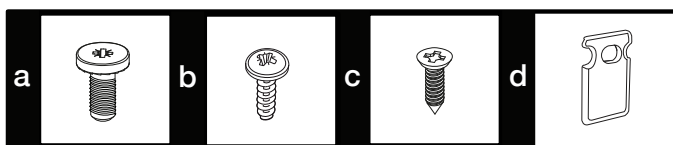
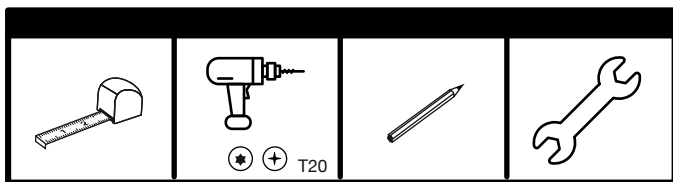
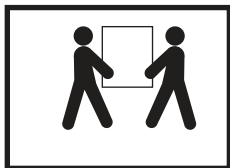



Installation instructions

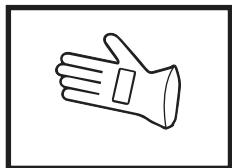

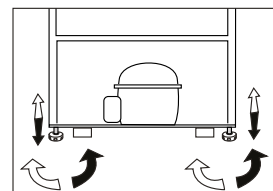


No Wooden Backwall





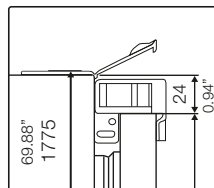


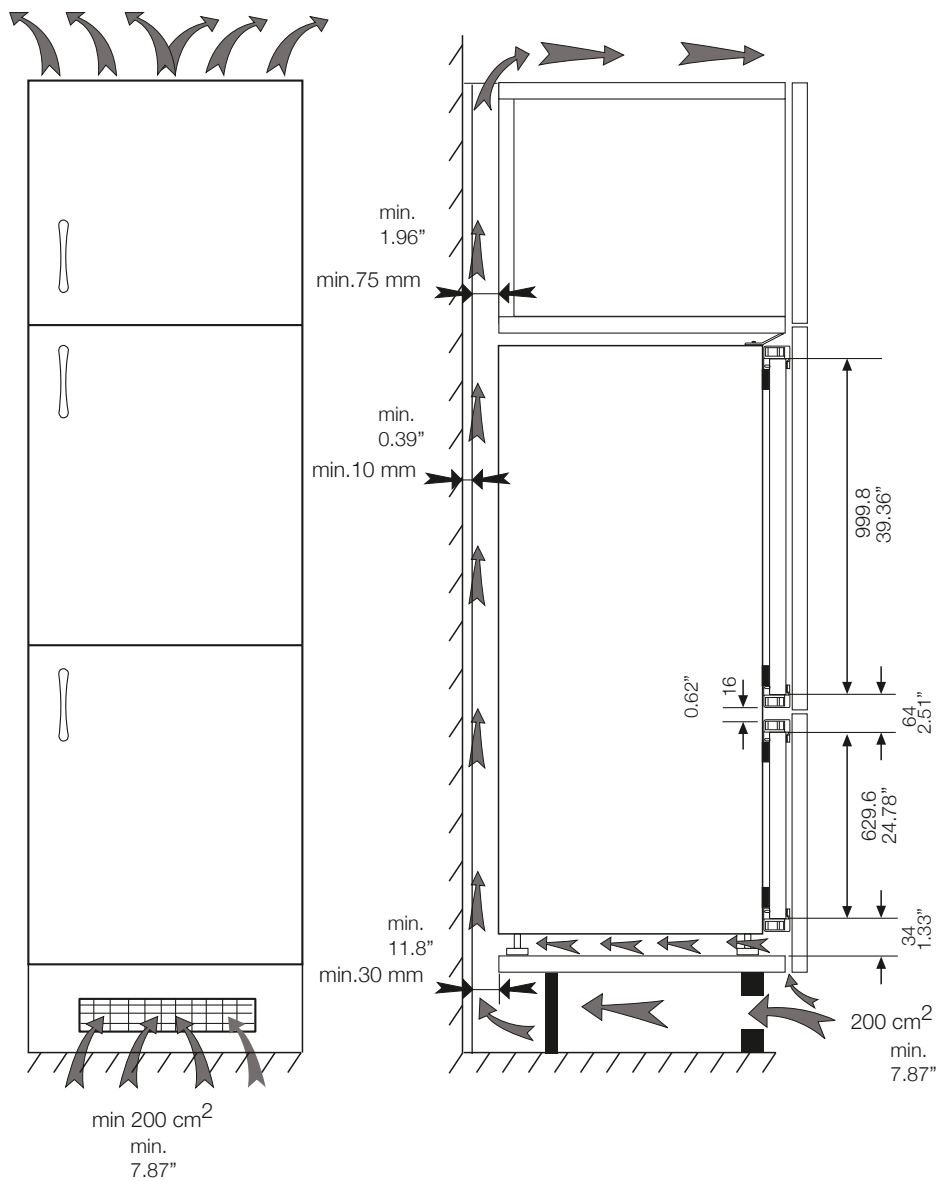

3

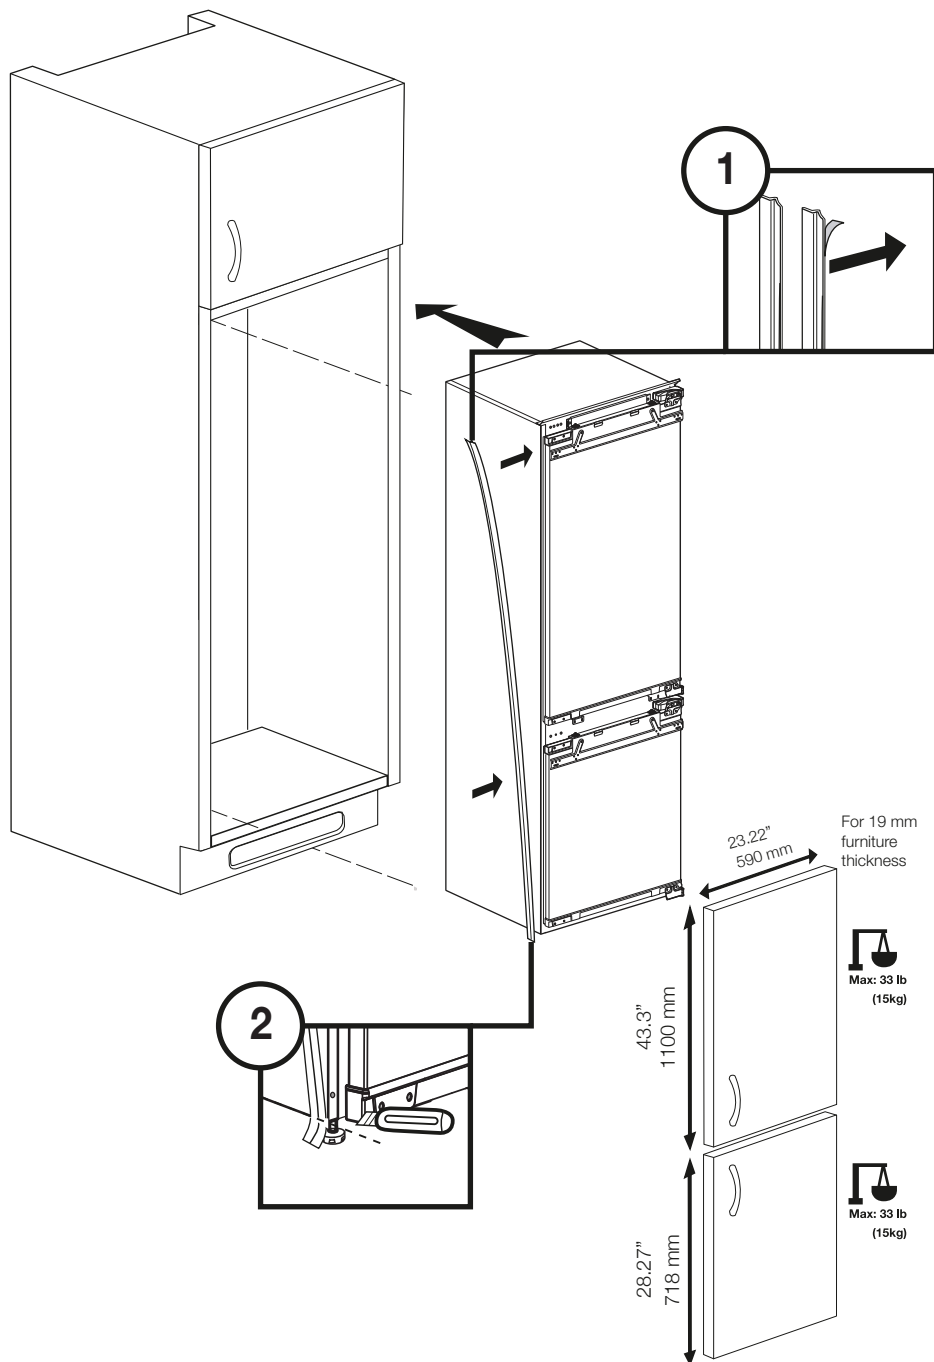


C

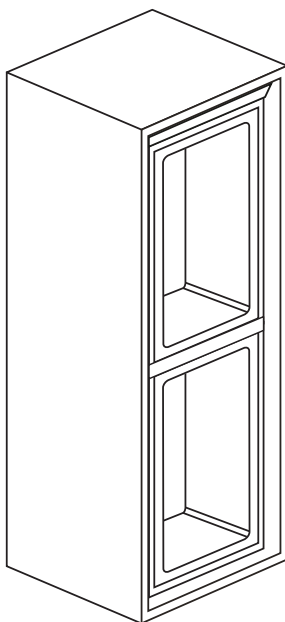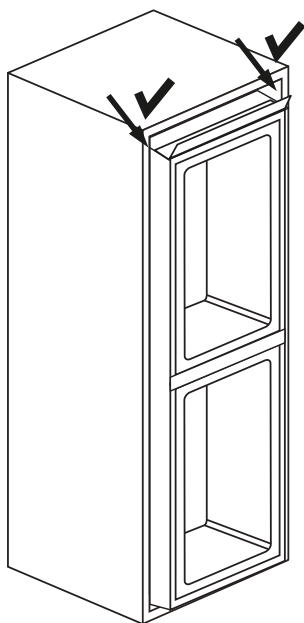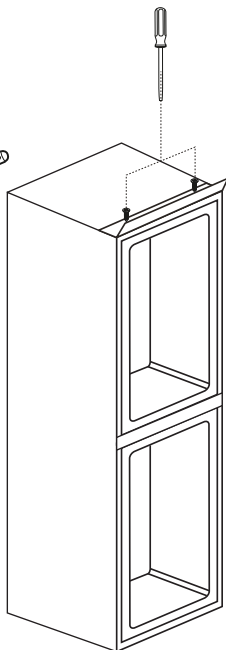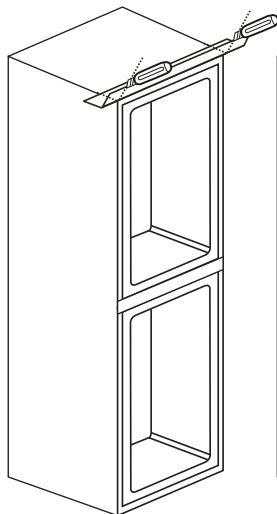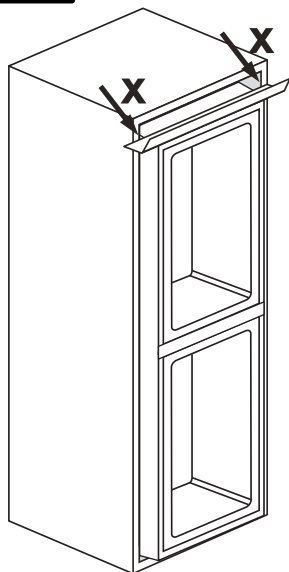

d








$$16 \text{ mm} + \text{Bracket} (2\text{mm}) = 18 \text{ mm}$$






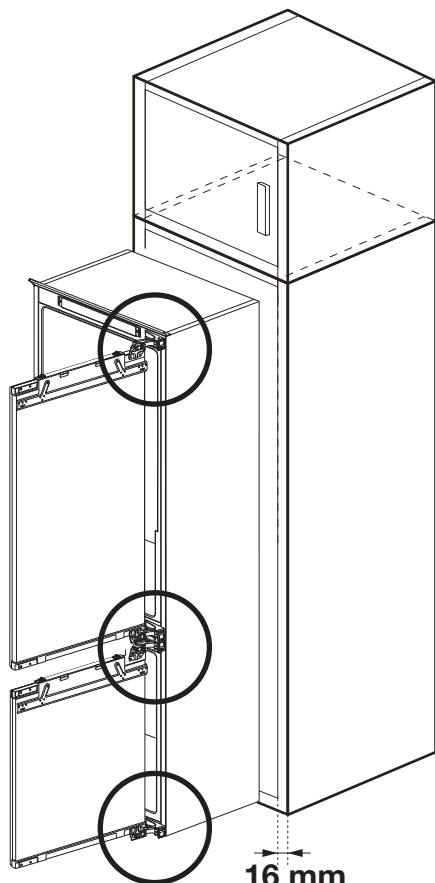


16 mm

✓ 16 mm
X 18 mm

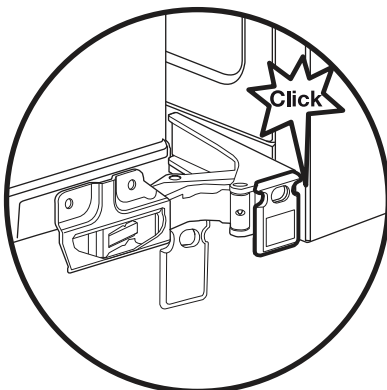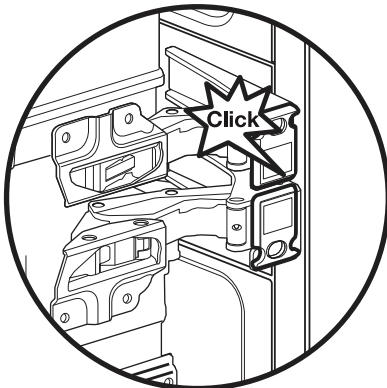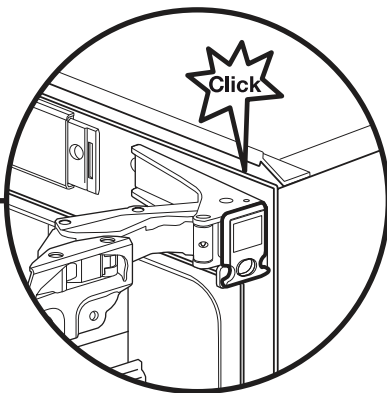

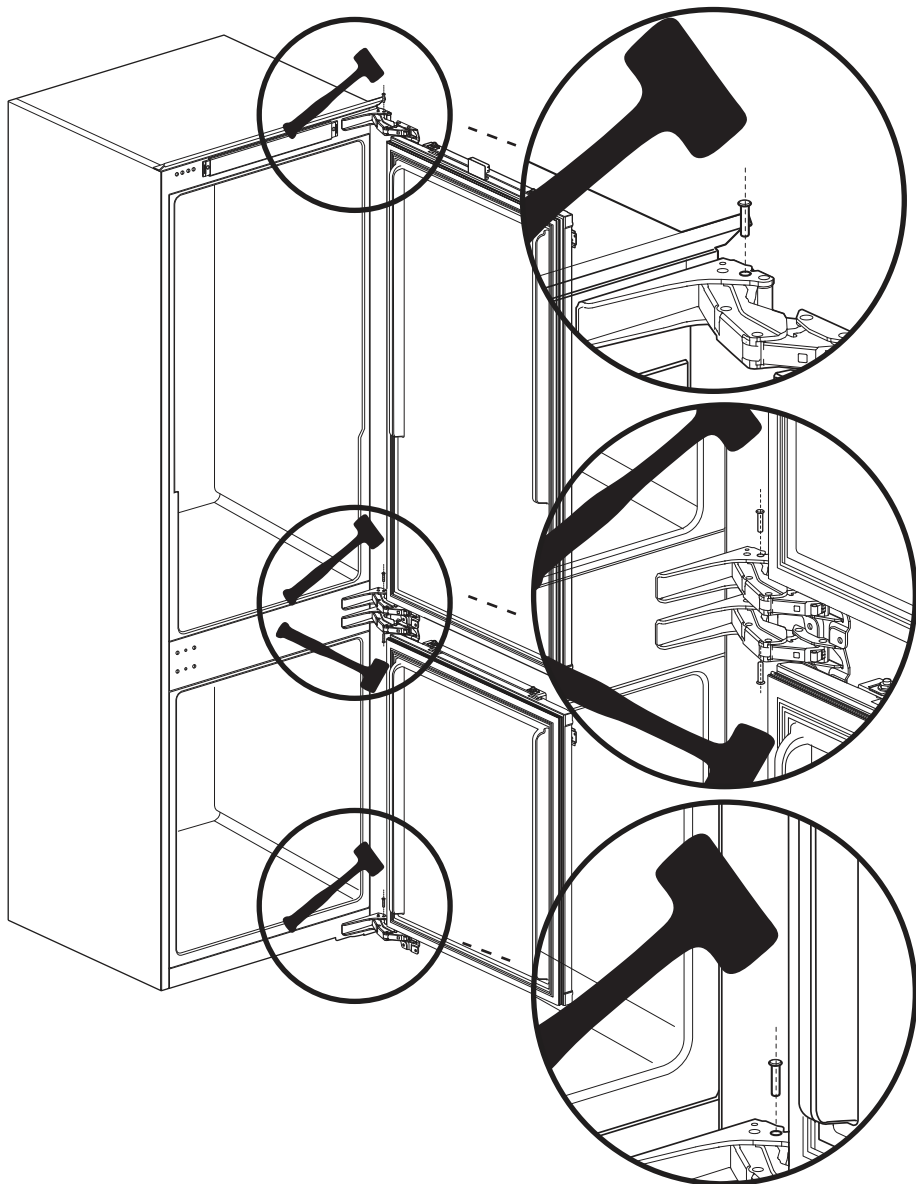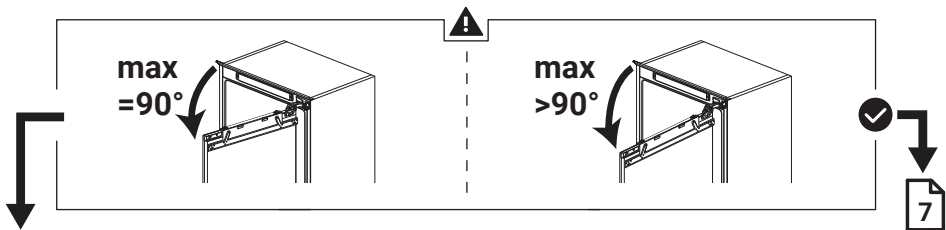

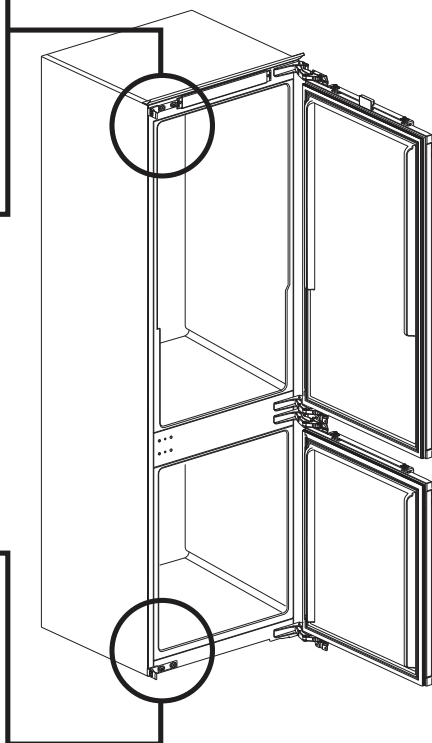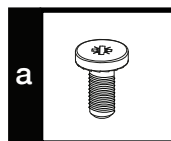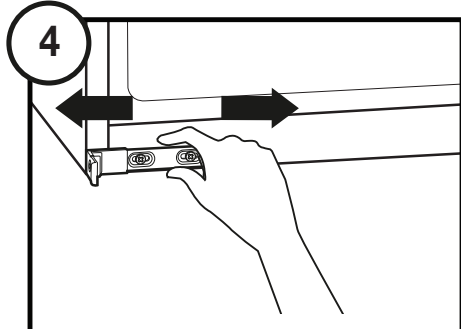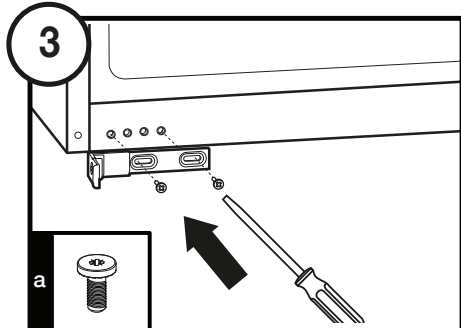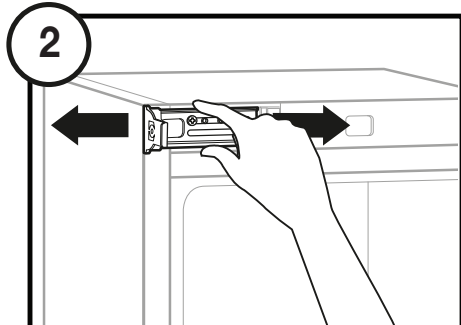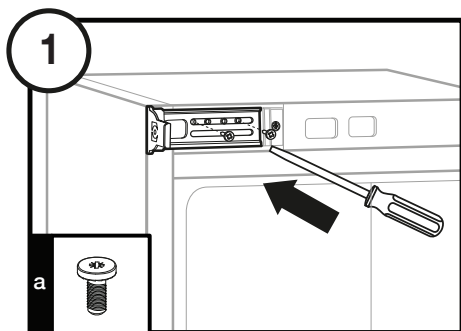

b



41,5 mm

1

41,5 mm

2

3

4

5

b



1

41.5 mm

41.5 mm

2

3






4


5

C




10

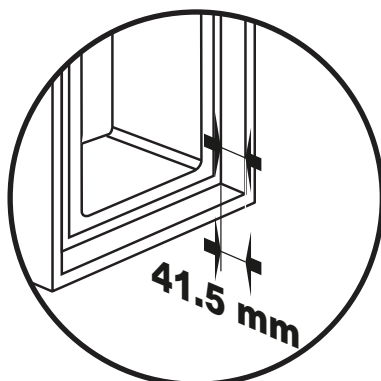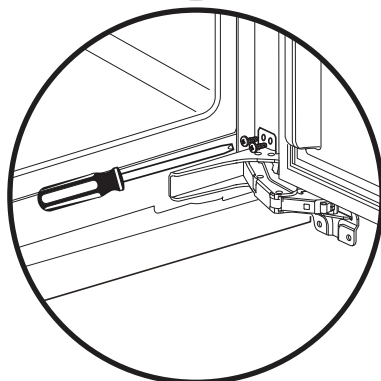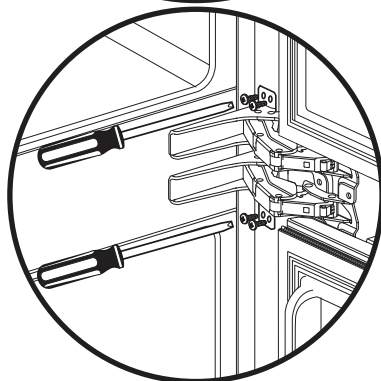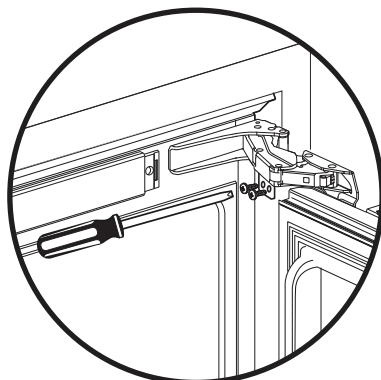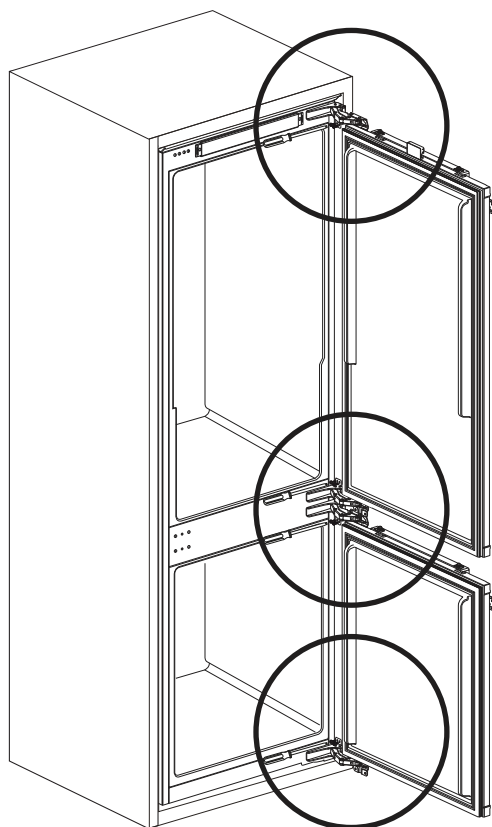





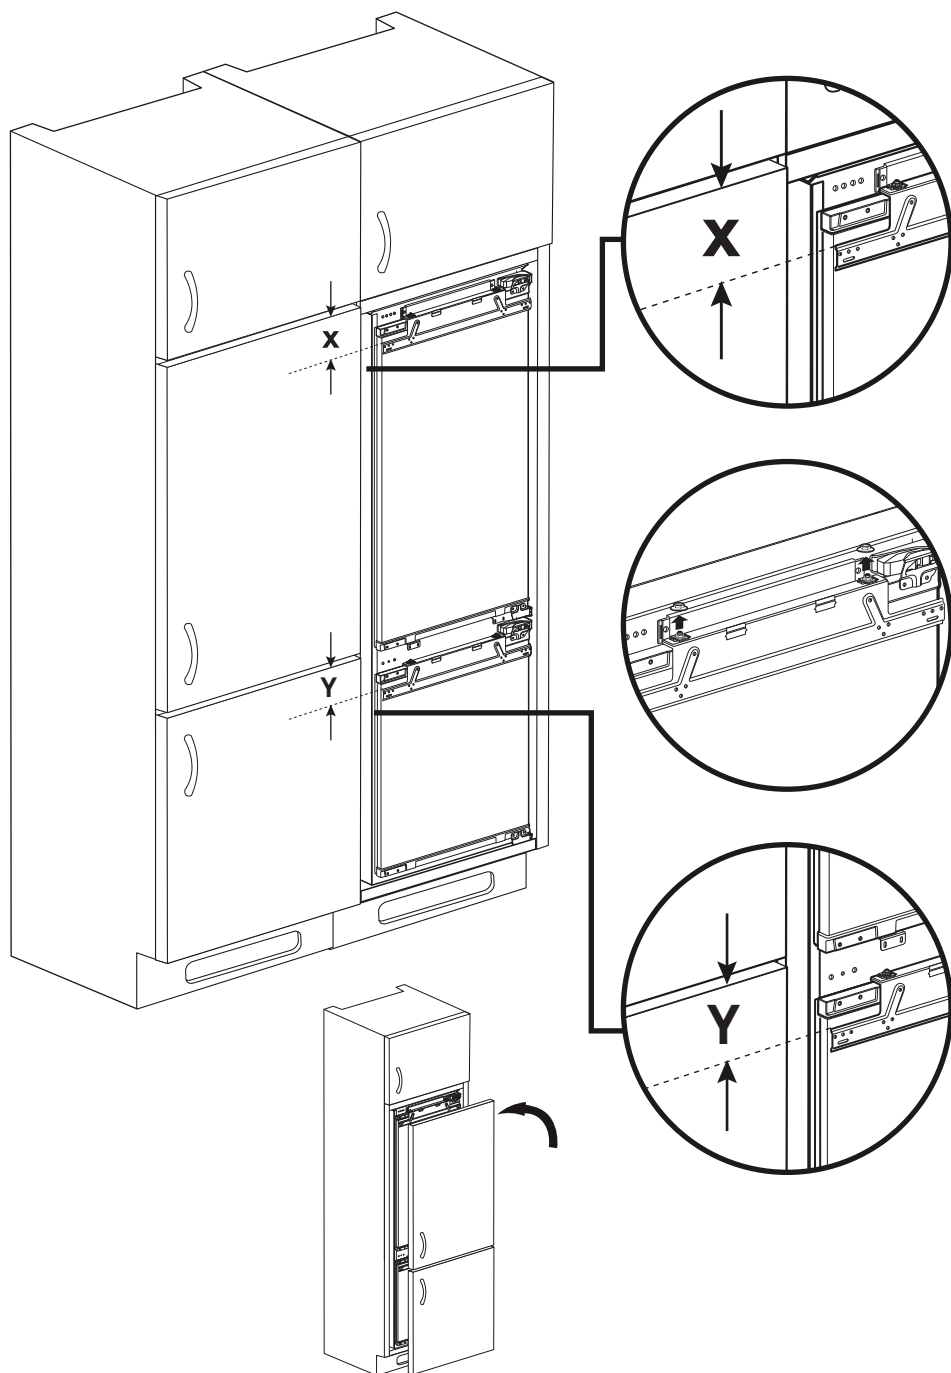


12


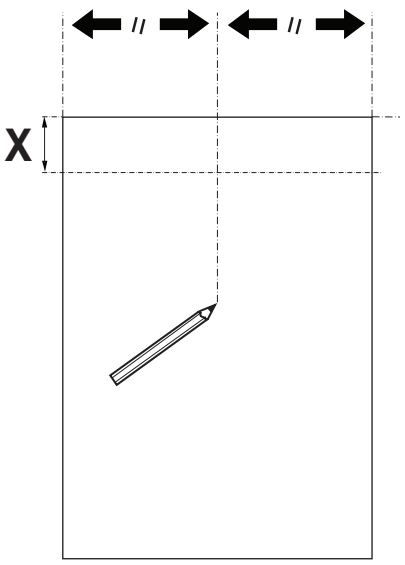


13

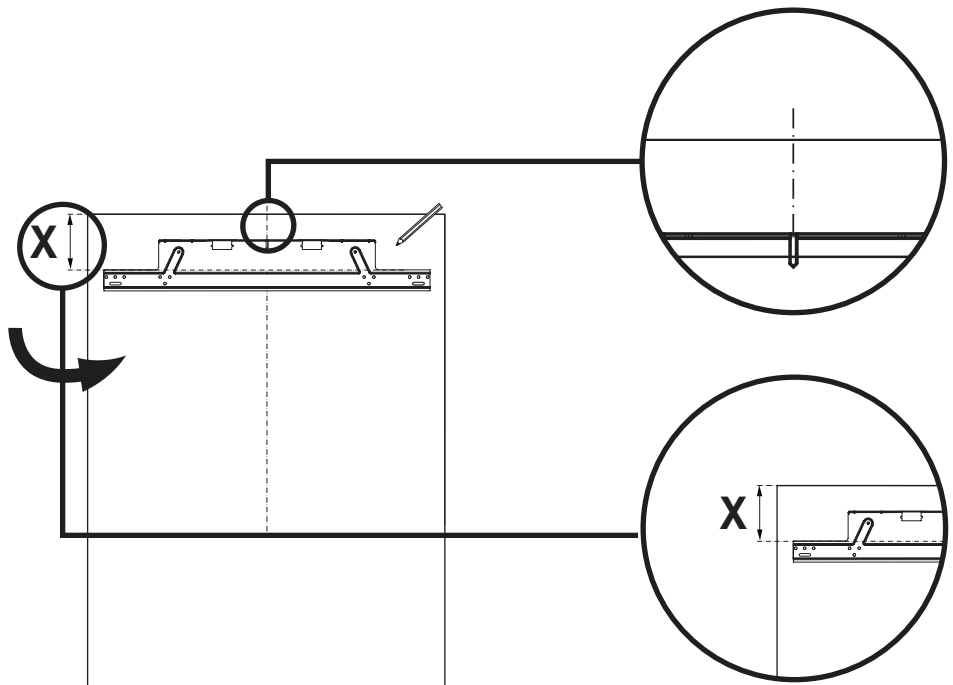


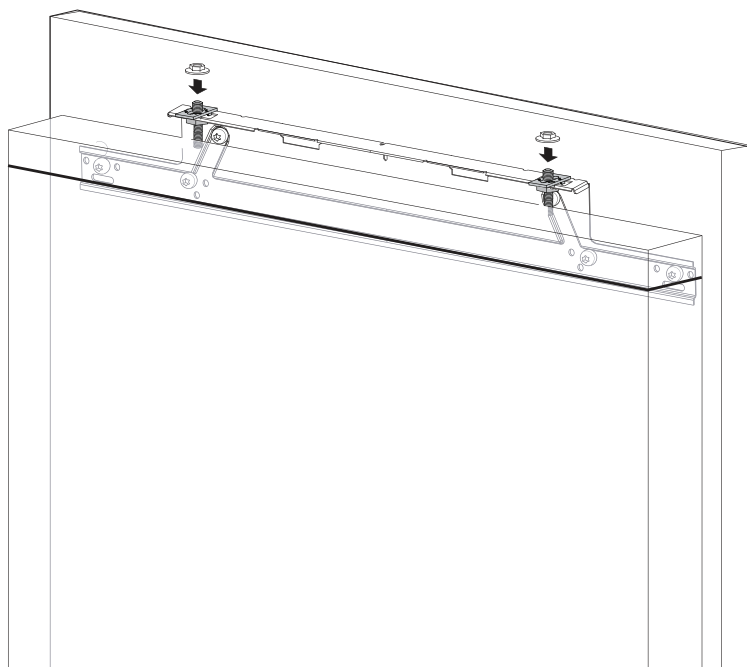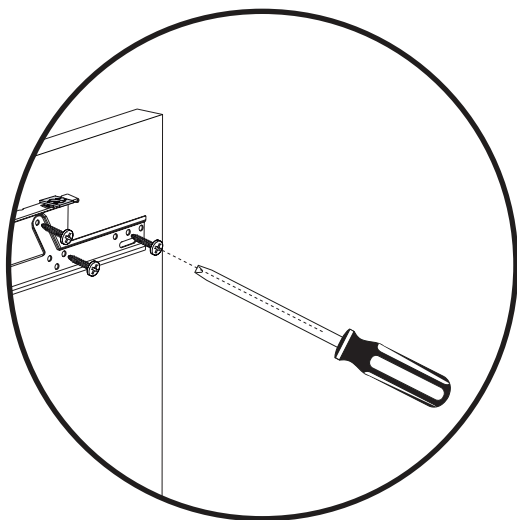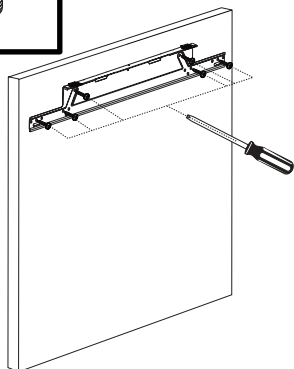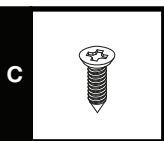




16

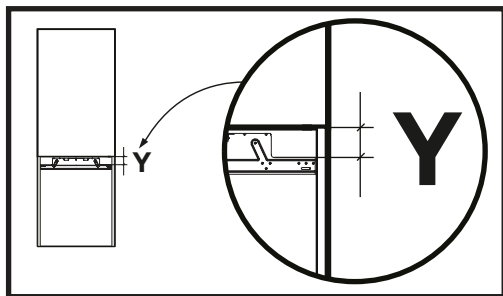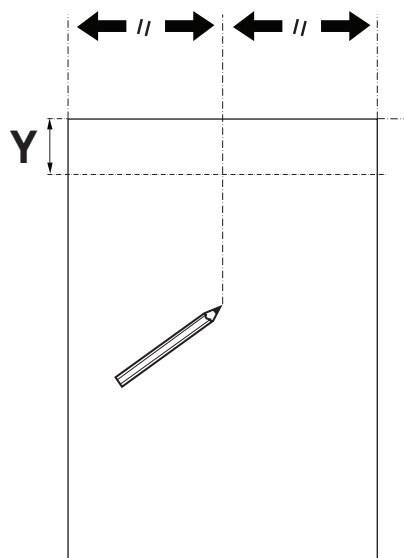

17

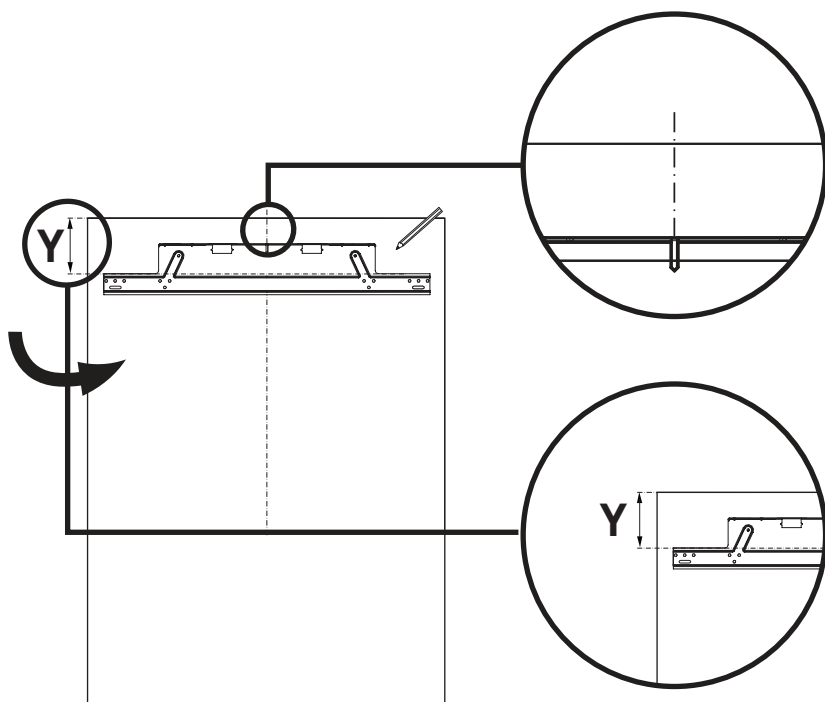

18

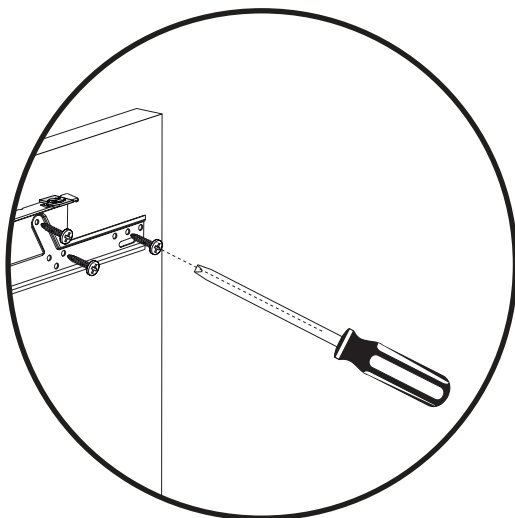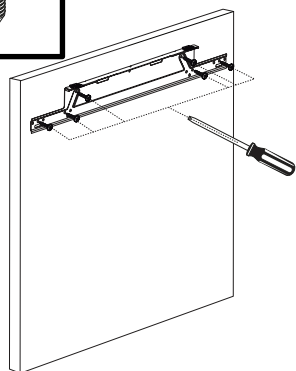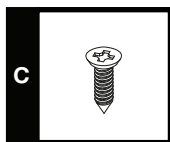

19

