




INSTALLATION MANUAL

WALL CABINET

Commercial Stainless Steel Wall Cabinet With Hinged Doors

MODELS:

KM-WMC-1524, KM-WMC-1536, KM-WMC-1548, KM-WMC-1560

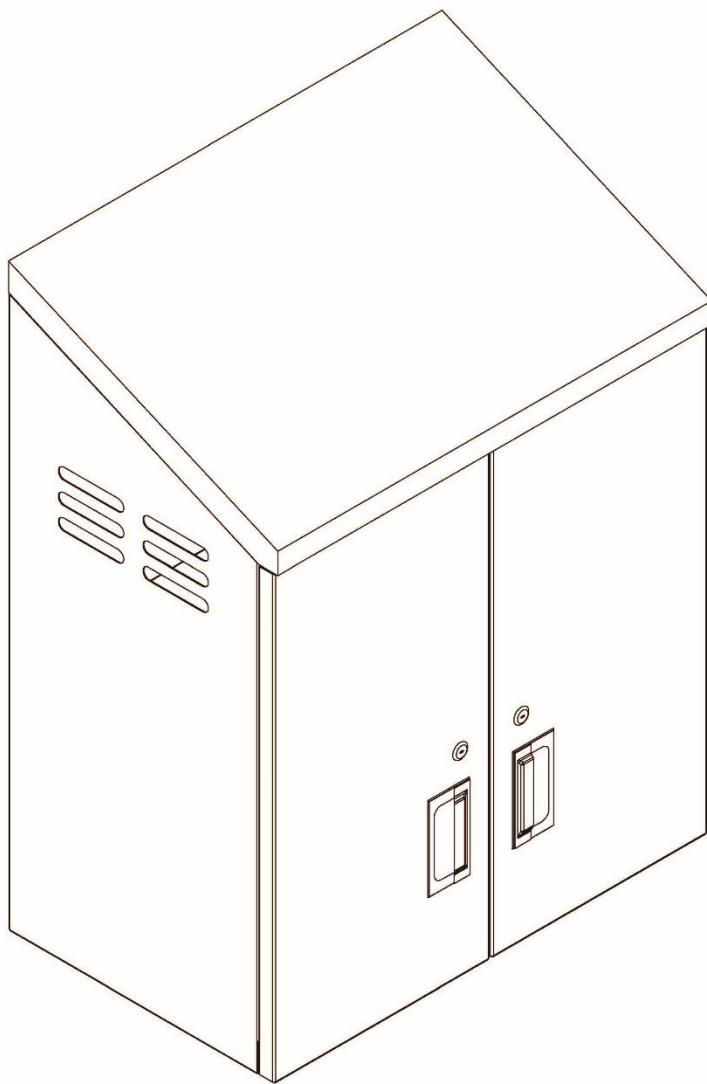

***Unit must be kept
clear of combustibles at all times.***

*For any service-related Issues, please contact
us: Phone Number: 718-576-6342
Email address: support@koolmore.com*


1

To hang the wall cabinet, place the wall bracket on the wall where you desire.

Mark the positions where the 8mm diameter holes need to be drilled.

Using a drill bit, drill holes at the marked positions.


Then insert the plastic expansions and screw in the self-tapping screws.

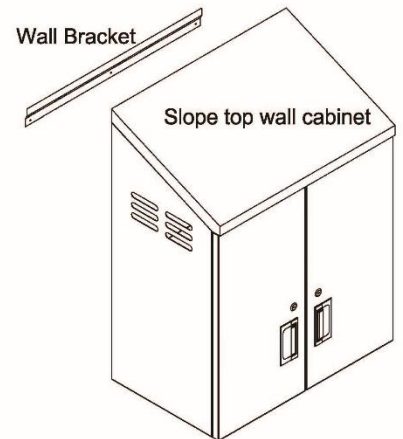

2

The holes at the bottom must be perpendicular to the holes on the wall bracket, with a vertical distance of 708mm.

Mark the bottom holes, drill them, and insert the plastic expansions.

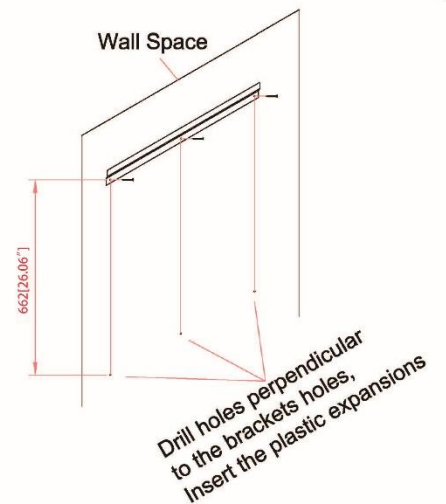

3

To complete the installation, Hang the wall cabinet on the wall bracket. Open the doors and tighten the self-tapping screws on the bottom holes. The installation is now completed.

