





Built-In Trim Kit Installation Instructions



For Model: SMBI24

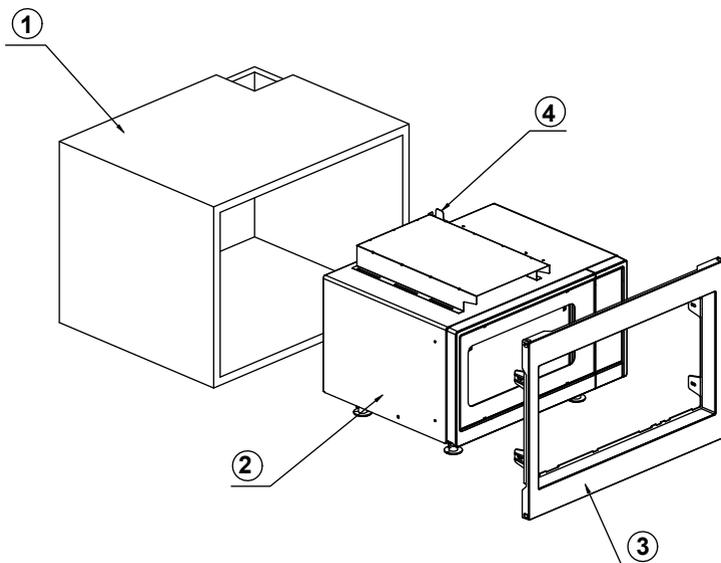


Sequence	Name	Quantity
1	Cabinet	1
2	Microwave Oven	1
3	Trim	1
4	Back Spacer	1
(A)	3x25mm screw	4
(B)	4x10mm screw	4
(C)	4x8mm screw	2

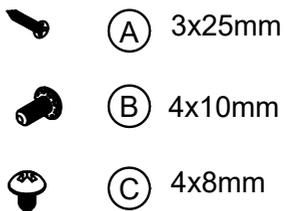


Cabinet Cutout Dimension

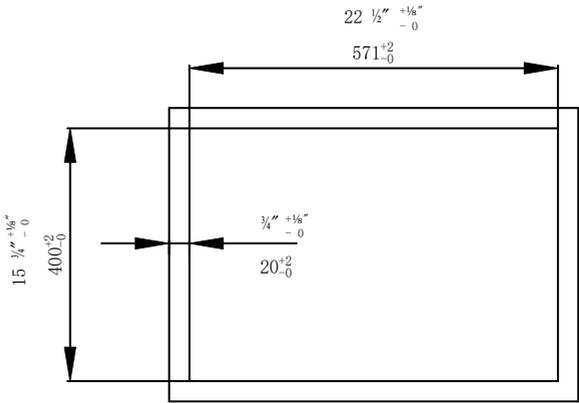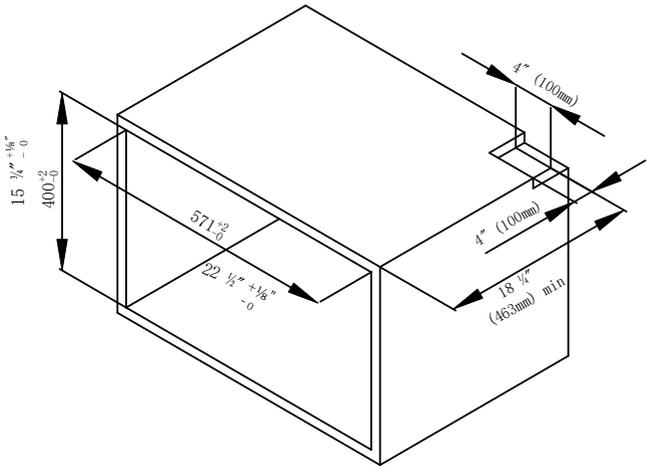

© 4x8mm x 2

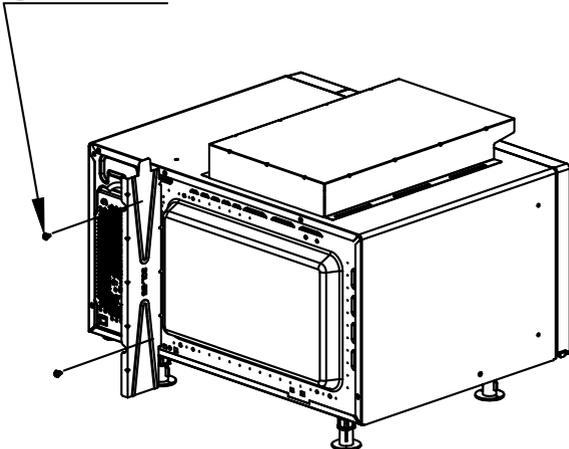


1. Secure the back spacer to the rear of the microwave using two **4 × 8 mm** screws (C).

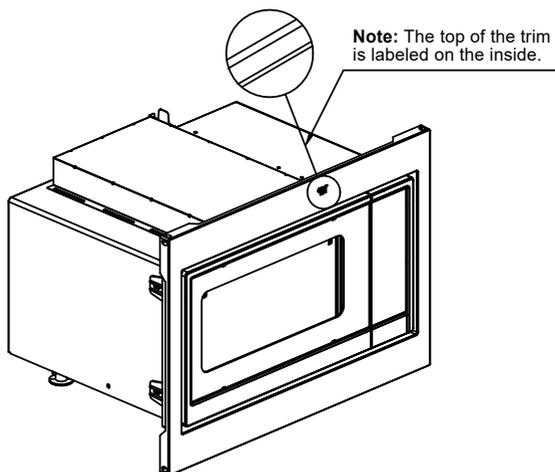


2. Attach the trim to the microwave with four **4 × 10 mm** screws (B).

3. Place the microwave into the cabinet, making sure it sits properly in position.

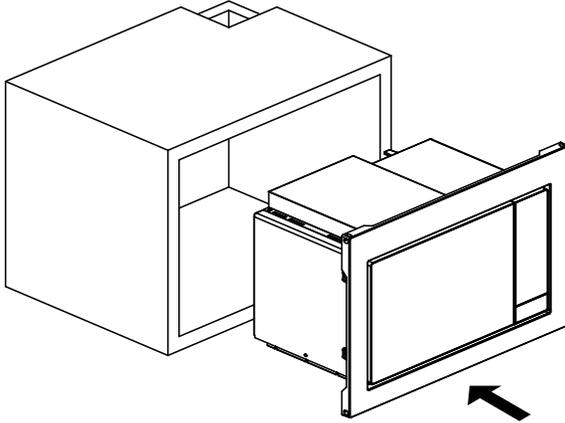

4. Center the microwave within the cabinet, then use four 3×25 mm screws (A) to fasten the trim kit to the cabinet at all four corners.

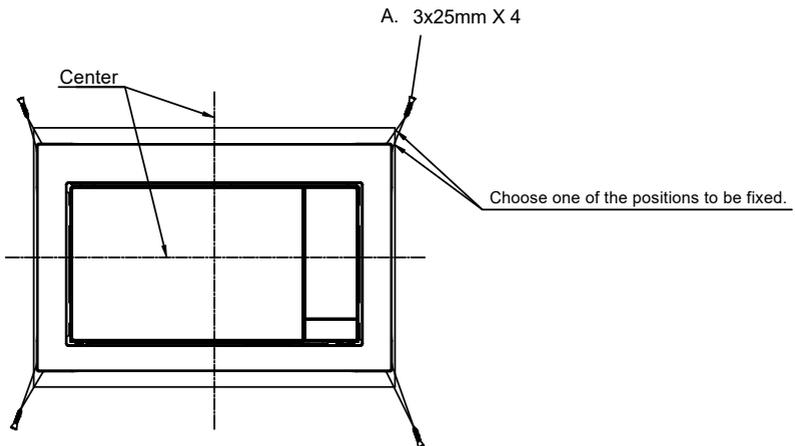

If you need help with your installation call our Customer Service facility at **800-932-4267 (Ext. 513)** between 9:00 AM and 5:00 PM ET or visit our website summitappliance.com/support at any time. We will do our best to answer your questions.

To order replacement parts, visit our website: summitapplianceparts.com

Summit Appliance Division · Felix Storch, Inc. · www.summitappliance.com · 718-893-3900 · info@summitappliance.com

Revised: 2025-10-22