

Adjustable Grille Installation

Applies to the following:

- ULAGRILLE15
- ULAGRILLE18
- ULAGRILLE24

INCLUDED IN KIT

- 1 Adjustable grille
- 1 Grille sweep
- 2 Installation brackets (1 left, 1 right)
- 6 Allen screws
- 1 Allen wrench




REMOVE EXISTING GRILLE

1. Use a Philips screw driver to remove two screws from front of existing grille.
2. Remove grille and set aside.




INSTALL ADJUSTABLE GRILLE


1. Locate two brackets and install 2 inner adjusting screws - leave loose.

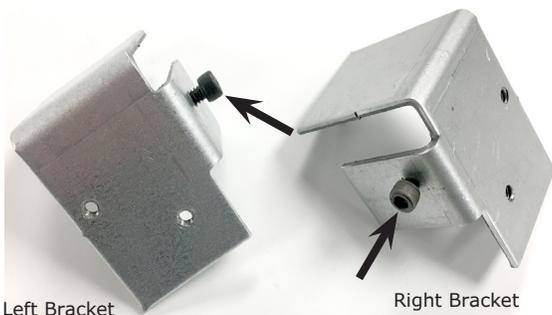

2. Position one bracket behind flange, lining up holes.

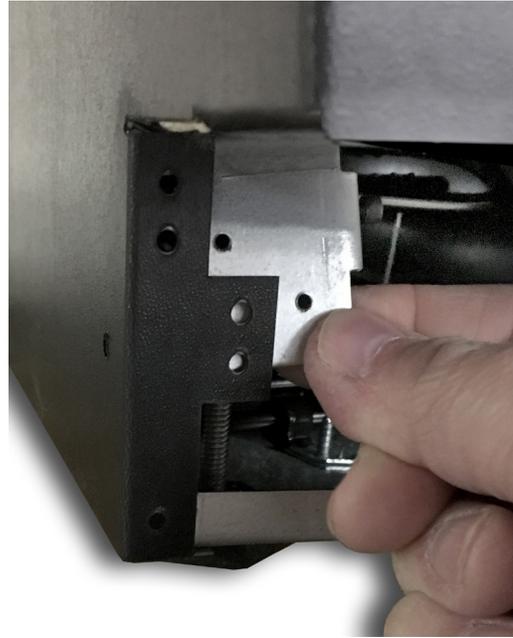

3. Use two adjusting screws to install bracket; tighten screws with provided Allen wrench.

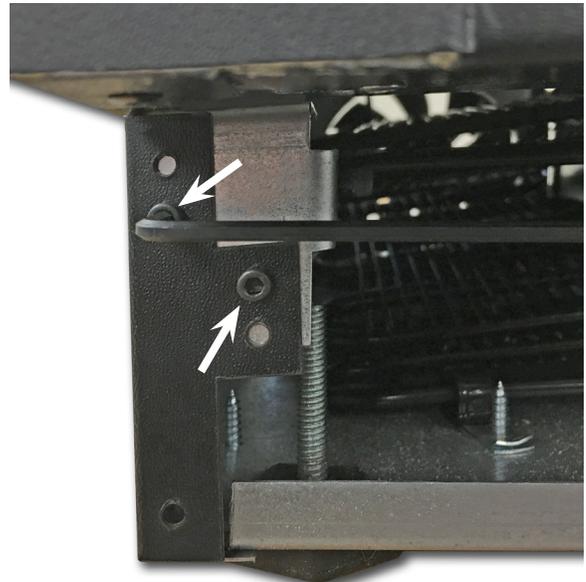

4. Insert grille sweep into grille.




5. On both ends of grille, line up adjusting screws with slots in grille arms.



6. Adjust grille depth and tighten both adjusting screws with Allen wrench.

ADJUSTING GRILLE

The grille has an automatic vertical plane adjustment and can also be adjusted on its horizontal plane as well. To adjust your grille to match your surrounding furniture, follow the instructions below.

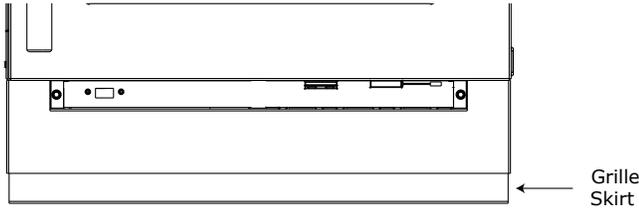

1. Loosen, but do not remove, the lock screws on the inside of the grille rails. Lock screws are located on the inside of each grille rail.
2. The grille can be extended horizontally by pulling out a maximum of 1-1/2" (38 mm). Do not exceed 1-1/2" (38 mm). Secure the lock screws after adjusting.
3. The grille skirt may be manually adjusted to the height of your floor. Simply raise or lower the skirt as needed.

Integrated Grille

PREPARE AND INSTALL INTEGRATED GRILLE

1. Use the dimensions provided in the diagram to cut and shape your integrated grille panel. Recommended panel thickness is between 1/4" (6 mm) and 3/8" (9 mm). Height will vary from 3-5/16" (84 mm) to 4-5/16" (110 mm) based on your grille height.
2. Finish or stain your grille panel to match your surrounding furniture. Finish front, back and edges to prevent warping. Carefully follow the manufacturer's recommendations for finish application and cure times.
3. Apply double sided tape to the backside of the integrated grille panel. Use the diagram below for reference. U-Line recommends 3M™ VHB™ tape, a high strength bonding tape.

Apply Tape To Shaded Area



4. Remove backing paper from double sided tape.
5. Carefully align grille over integrated panel and press into position.

