

⚠ WARNING

Dryer must be properly grounded at all times.
Vent dryer through free-flowing, outdoor-vented, metal duct system.
Improper gas installation or LP conversion could result in injury or even death.
Avoid back or other injury. Use more than one person to move, lift or tip the dryer.

IMPORTANT

Please read all safety instructions before using your new dryer. For best drying results with your new dryer, remember to review:
✓ INSTALLATION INSTRUCTIONS
✓ USE & CARE GUIDE

NOTE TO INSTALLER

Leave these instructions with the customer.


1 HANDLING & UNPACKING



CART FROM REAR ONLY WITH 7" (MIN.) CART FORKS



DO NOT CART FROM FRONT

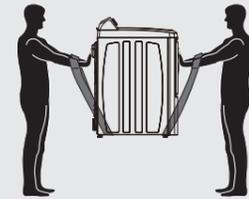

2-PERSON CARRYING STRAPS, FRONT-TO-BACK RECOMMENDED



DO NOT CART FROM SIDE




DO NOT USE OPEN DOOR TO LIFT OR TIP THE UNIT



DO NOT USE KNEE IN CABINET SIDE TO MOVE UNIT




DO NOT USE REAR CONSOLE TO PUSH, PULL, TIP OR MOVE THE DRYER.

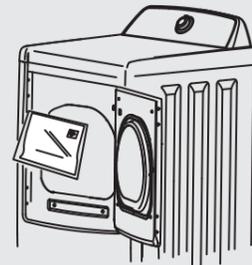

EMPTY DRUM COMPLETELY BEFORE INSTALLING DRYER

2 VENT EXHAUST

- USE ONLY 4 INCH (10.2 CM) RIGID METAL OR SEMI-RIGID METAL DUCTING
- REPLACE PLASTIC OR FOIL DUCTS WITH METAL
- CLEAN LINT FROM PRESENT DUCT SYSTEM BEFORE ADDING ON
- SEE CHART TO THE RIGHT FOR ACCEPTABLE NUMBER OF 90° TURNS IN SYSTEM
- DO NOT USE SCREWS TO CONNECT DUCTS
- DO NOT USE REGULAR DUCT TAPE TO CONNECT DUCTS, ONLY METAL FOIL TAPE
- 4" (10.2 cm) CLAMP RECOMMENDED FOR CONNECTION BETWEEN DRYER & EXHAUST SYSTEM
- EXHAUST SYSTEM MUST BE VENTED OUTSIDE WITH APPROVED VENT HOOD




- TO VENT LEFT OR RIGHT FROM DRYER, USE 90° QUICK-TURN ELBOW
- FOR INSTALLATION IN A RECESSED AREA OR CLOSET, SEE COMPLETE INSTALLATION INSTRUCTIONS

| Number of 90° turns | MAXIMUM LENGTH* of 4" (10.2cm) Rigid Metal Duct | |
|---------------------|---|-----------------|
| | VENT HOOD TYPE | |
| | (Preferred) | |
| 0 | 90 ft. (27.4 m) | 60 ft. (18.3 m) |
| 1 | 60 ft. (15.9 m) | 45 ft. (13.7 m) |
| 2 | 45 ft. (13.7 m) | 35 ft. (10.7 m) |
| 3 | 35 ft. (10.7 m) | 25 ft. (7.6 m) |


*Do not install plastic or foil ducting. If installing semi-rigid ducting, do not exceed 8 ft (2.4 m) total duct length.

IMPORTANT

For closet installations see detailed installation instructions enclosed.

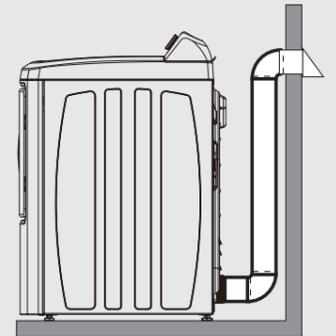


CORRECT

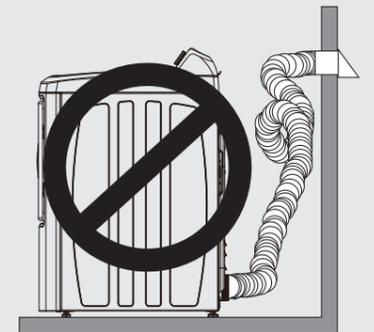

INCORRECT

3 HEAT SOURCE

GAS DRYER

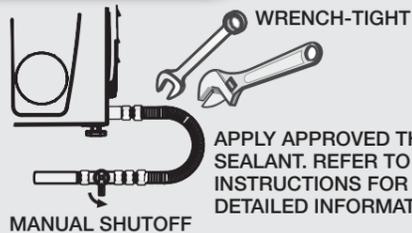


APPLY APPROVED THREAD SEALANT. REFER TO INSTALLATION INSTRUCTIONS FOR MORE DETAILED INFORMATION.




L.P. SYSTEMS MUST USE COVERSION KIT INSTALLED BY QUALIFIED TECHNICIAN.


ELECTRIC DRYER

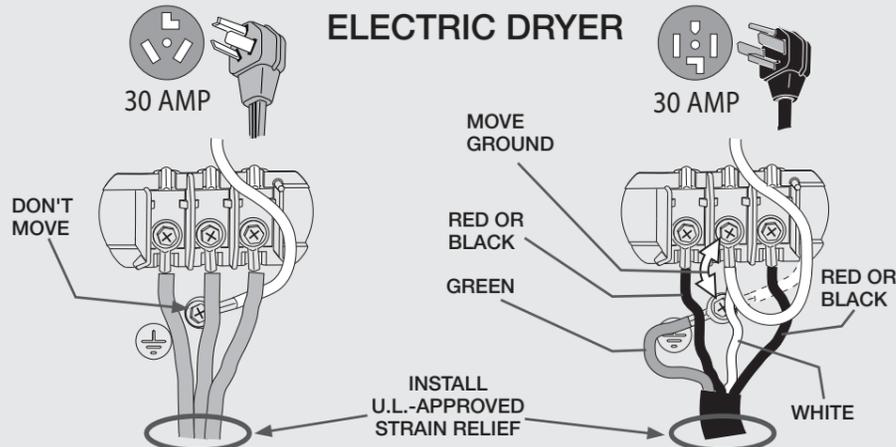


4 LEVEL & CONNECT

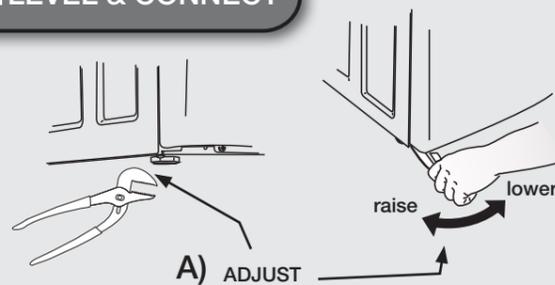


A) ADJUST

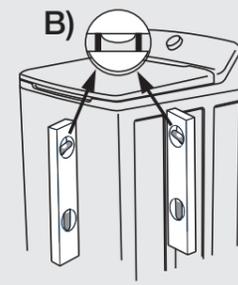


B) LEVEL BOTH WAYS

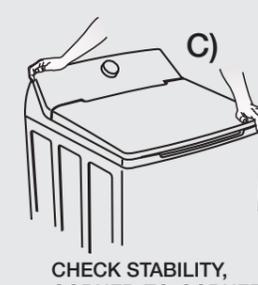

C) CHECK STABILITY, CORNER-TO-CORNER

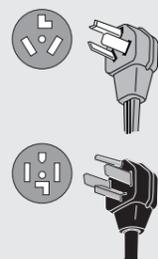

D) CONNECT POWER

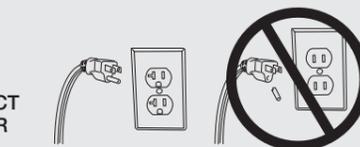


E) OPEN GAS VALVE AND CHECK FOR LEAKS WITH SOAPY WATER

⚠ CAUTION

ELECTRICAL SHOCK HAZARD
Do NOT use prong adapter.
Do NOT remove ground prong.
Do NOT use extension cord.

5 OPERATE

THE EXHAUST SYSTEM SHOULD BE INSPECTED AND CLEANED A MINIMUM OF EVERY 18 MONTHS WITH NORMAL USAGE. THE MORE THE DRYER IS USED, THE MORE OFTEN YOU SHOULD CHECK THE EXHAUST SYSTEM AND VENT HOOD FOR PROPER OPERATION.

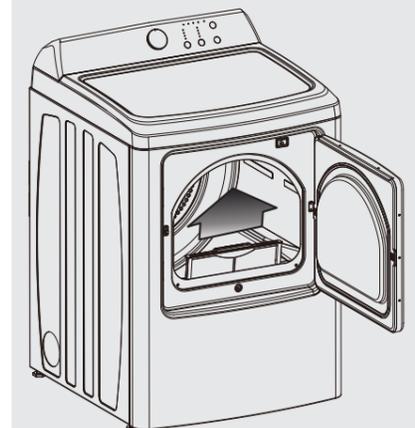

CLEAN LINT FILTER AFTER EVERY LOAD.